

Record Your Performance and Create a CD

The CD-2 makes it easy to capture your performances and write them to an audio CD. In Step 1, we'll show you how to use the CD-2's built-in microphone to record a performance to CompactFlash. Then, in Step 2, we'll show you how to write your recorded performance to a CD.

*The recorded sound is affected by where the CD-2 is placed in relation to the sound source. Try placing the CD-2 in different locations to achieve the desired sound quality.



STEP


1


Let's Record to CompactFlash

Media to Prepare



CompactFlash card


1 Press  on the rear panel to turn on the power.

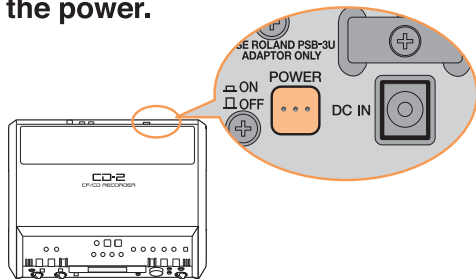

2 Insert the CompactFlash card into the card slot on the left side panel. (A CompactFlash card is included in the CD-2 box.)

Firmly insert the card all the way.


When the CD-2 recognizes the card, the following screen is displayed:

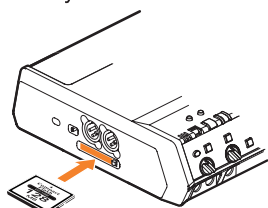

3 Press  so it lights green.

4 Press  on the CompactFlash side.


The button's light blinks red, indicating that the CD-2 is standing by for recording.

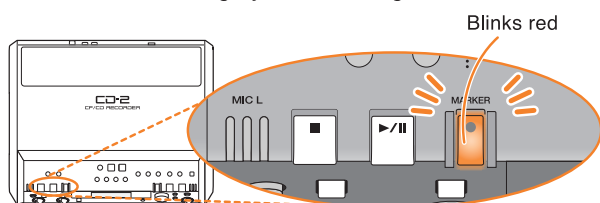

5 Press  on the CompactFlash side.

The CD-2 starts recording. Begin your performance.


These buttons are lit during recording.

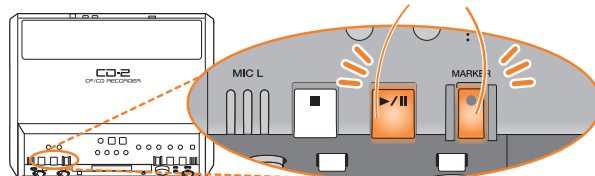



6 Press  on the CompactFlash side.

The CD-2 stops recording.

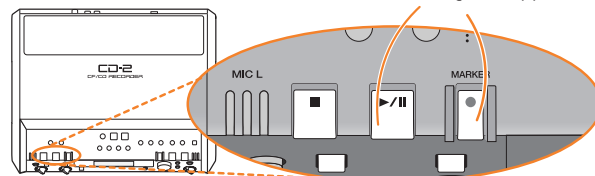The button's lights go out when recording is stopped.



Let's listen to the recorded performance

1 Press   to select the desired song.

2 Press   on the CompactFlash side to start and stop playback.

* To record additional performances, repeat Steps 3–6.

Once you've finished recording, proceed to the other side of this sheet to learn how to write a CD. ▶▶▶

STEP

2 Let's Create a CD

Media to Prepare




Blank CD-R disc

1 Press .
TRACK SELECT
Insert Disc

"Insert Disc" appears on the display and the disc tray on the right side opens.

2 Place the CD-R disc on the disc tray.

Place the CD-R with the label side facing upward.

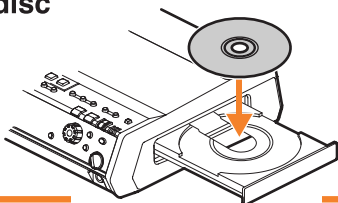

3 Press .
EJECT
CF01 SNG01_00
→CD01

The disc tray closes. When the CD-2 recognizes the CD-R disc, the screen shown above appears.

4 Select the song that you wish to write to the CD-R disc.

1 Turn to select the desired song.

2 Press .
TRACK SELECT
CF01 SNG01_00
→CD02

CD track number increases (CD01→CD02)

* To select additional songs, repeat Step 4.

5 Press .
WRITE
CD WRITE
Are You Sure?

"CD WRITE Are You Sure?" is displayed.

6 Press .
ENTER
FINALIZE
:Yes

The FINALIZE screen appears.

7 Press .
ENTER
FINALIZE
Are You Sure?

"FINALIZE Are You Sure?" is displayed.

8 Press .
ENTER
CD WRITE 1/1
Processing.. 12%

The CD-2 begins writing a CD. The disc will be ejected automatically when CD writing is completed.

9 Press when the disc is ejected.
EXIT


"Write Completed Another Disc?" is displayed. Press to complete the writing process.

Now you have a CD of your performance!!
Write Completed Another Disc?

Let's listen to your CD

1 Press .
EJECT

The disc tray closes. When the CD-2 recognizes the CD-R disc as an audio CD, the following screen is displayed:

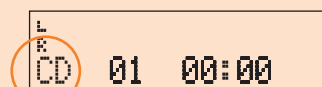

"CD" appears on the left side of the screen.

2 Press on the CD-R/RW Drive side to start and stop CD playback.