

The included AC adaptor is required for writing and reading CDs.

If you're operating the CD-2e on batteries, you won't be able to perform CD-related operations, such as recording and playing CDs, writing songs, and inserting or removing a CD. You must use the dedicated AC adaptor.

