

Caution: Many of these procedures will erase all memory in the unit. Make sure you have backed up any data you wish to keep before performing these procedures! If a unit is not listed here, it does not have an initialization procedure that is user-executable.

A

Model	Procedure
A-30/33/37	Power on while holding WRITE. (Hold for 15 seconds)
A-50/80	While holding the first, third, and fourth buttons under the display, press CHANNEL. Then press any cursor button
A-70/90/90EX	Power on while holding down MANUAL, then press ENTER
A-220	Power on while holding B and MEMORY
A-300PRO	Hold ACT and <, use the VALUE dial to select "FACTORY RESET." Press ENTER twice.
A-500PRO	Hold ACT and <, use the VALUE dial to select "FACTORY RESET." Press ENTER twice.
A-500S	Hold MIDI CH and PGM CHANGE, press the SYSTEM key, Use the VALUE dial to select "SY6," press ENTER 3 times.
A-800PRO	Hold ACT and <, use the VALUE dial to select "FACTORY RESET." Press ENTER twice.
A-880	Power on while holding SIGNAL and MEMORY
AD-8	Power on while holding WRITE. Confirm that "F" flashes in the display, then release WRITE. Press WRITE again
AP-700	Power on, then press EXIT repeatedly to get ANALYZER/FILTER screen. Cursor to MENU, press ENTER. Cursor to SYSTEM, press ENTER. Cursor to INITIALIZE, press ENTER. Use VALUE to select ALL MEMORY, then press ENTER twice
AT-Series	(Make sure disk drive is empty.) Power on while holding ONE TOUCH PROGRAM
AX-09	Power on while holding FAVORITE A, B, and WRITE. Press TONE 5, then press WRITE.
AX-1/7	Power on while holding WRITE. (Hold for 30 seconds)
AXIS-1	While holding FUNCTION, press the F#0, C#2, and D#2 keys
AX-Synth	Power on while holding INC/+, DEC/-, and TONE 7(ORGAN/CLAVI), then press WRITE.

B

Model	Procedure
BR-8/532/1180	Press UTILITY. Cursor to "Initialize." Press ENTER. Cursor to "All." Press ENTER twice
BR-600	Power on while holding GUITAR, MIC, and LINE. Press ENTER.
BR-800	Press MENU. Cursor to "Factory Reset." Press ENTER three times.
BR-864	Power on while holding INPUT SELECT/GUITAR/BASS, MIC, and LINE. Press ENTER
BR-900CD/ 1200CD	Press UTILITY. Press CURSOR Right to select "Initialize." Press ENTER. Press CURSOR Right to select "All." Press ENTER twice
BR-1600CD	Press UTILITY. Cursor to "Initialize." Press ENTER. Cursor to "All." Press ENTER twice

C

Model	Procedure
CD-2	Press MENU. Use the DATA dial to select "INITIALIZE." Press ENTER twice.
CD-2E/2i	Press MENU. Use the < / > buttons to select "Factory Reset." Press ENTER twice.
CDX-1	Press UTILITY. Cursor right to "INIT". Press ENTER/YES. Use CURSOR buttons to select desired target to be initilaized, (GLOBAL, FX, MIXER, ALL). Press ENTER/YES twice
CE-20	Power on while holding WRITE. Release WRITE then press WRITE again
CR-80	Power on while holding DEL and REPEAT, then press ENTER

D

Model	Procedure
D-2	With the unit on, Hold WRITE and press SYSTEM. Press ENTER twice
DB-30	Power on while holding the START/STOP button until "F" shows in the display
DB-60	Power on while holding the MEMORY button until "F" shows in the display
DB-88	Power on while holding METRONOME MODE and LOOP MODE. Press WRITE
DB-90	Power on while holding MEMORY
DD-20	Power on while holding WRITE. Release, then press WRITE again

DDR-30	Power on while holding the #1 button
DEP-3/5	Power on while holding MEMORY NO UP (^) and DOWN (v)
DJ-70/70MKII	Power on while holding the UP ARROW button to enter test mode. Press A, press C, press S1. When finished the screen will display IC21 = OK
DR-3	Press EDIT. CURSOR Right to select "SYSTEM." Press ENTER. CURSOR Right to select <FACTORY RESET>. Press ENTER twice
DR-5	Power on while holding FRET LEFT (<) and RIGHT (>), then press ENTER twice
DR-202	Power on while holding MUTE and ROLL. Press TAP/ENTER. Cursor to "YES" in the display. Press TAP/ENTER
DR-550/550MKII	Power on while holding -1 and +1, then press START
DR-660	Press UTILITY, then use LEFT (<) and RIGHT (>) to select [8] INIT. Press ENTER twice
DR-670	Power on while holding REC and STOP / CONT. Press ENTER twice
DR-770	Press UTILITY, then use LEFT (<) and RIGHT (>) to select [9] F. RST. Press ENTER twice
DR-880	Press EDIT. Press CURSOR Right to select "Factory Reset." Press ENTER twice
DS-330	Power on while holding REVERB and SPLIT, then press YES

E

Model	Procedure
E-09	Press FUNCTION so it is lit. Use the FAMILY </> buttons to select "Utility," then use the SELECT </> buttons to select "Factory Reset." Press TEMPO >/YES twice
E-10/20/30	Power on while holding WRITE
E-35	Power on while holding REC/PUNCH IN
E-36	Power on while holding RECORDER
E-50/60/80	Press MENU. Press "UTILITY" then press "FACTORY RESET." Press "EXECUTE."
E-56	Power on while holding WRITE
E-66	Power on while holding REC in the DISK RECORDER section
E-68/70/86/96	Power on while holding WRITE
E-300/500	Press UTILITY. Use the buttons under the display that correspond to <<PAGE>> to select FACTORY PRESET. Press EXECUTE, then press OK. When the screen displays RESET COMPLETE, turn the unit off, then on
E-600	Press FUNCTION and use the PAGE (<) (>) buttons to select "Factory Preset." Touch the "Execute" icon followed by the "OK" icon on the display screen. Power off then on
EG-101	Power on while holding WRITE
EM-10	Power on while holding USER PROGRAM/WRITE
EM-15/25	With the unit on, press FUNCTION until "RESUME" shows in the display. Then press TEMPO+
EM-20/30/50/55	Power on while holding USER PROGRAM/WRITE
EM-2000	Performance Sets need to be loaded from disk to restore factory default settings. Insert the factory ZIP Disk into the drive and power on. Press F5 (Disk), then F1 (Load). Press PAGE ^ / v to select "PRF MEM" and press UPPER 1(Execute)
ep-5/7/7MKII	While holding REC and PLAY, press STRINGS. Power off and then back on
ep-9	While holding REC and PLAY, press CHOIR. Power off and then back on
ep-75/85	Power on while holding REC
EQ-20	Power on holding LIGHT and SELECT. Release, then press LIGHT and SELECT again
EXR-3/5	Power on while holding USER PROGRAM/WRITE
EXR-40/46OR	Power on while holding USER PROGRAM/WRITE

F

Model	Procedure
F-110	Hold REVERB and press TRANSPOSE, hold OTHERS and use the +/- buttons to select "Fct" in the display. Press the Stop/Start button twice.
Fantom	With the unit on, press MENU. Press the UP or DOWN cursor buttons to select FACTORY RESET. Press 8 (EXECUTE) twice
Fantom-G6/7/8	Press MENU. Use the CURSOR Up and Down buttons to select "Factory Reset," then press F8 [Select] followed by F7 [OK]. Press F7 [OK] when completed.

Fantom-S/S88	Press MENU. Use the CURSOR Up or Down buttons to select "Utility," then press ENTER. Press 3 (Factory Reset) Press 8 (Execute)
Fantom-Xa	Press EXIT. Press MENU. Turn the VALUE dial to select "Utility" and then press ENTER. Press F3. Press F6
Fantom-XR	Press MENU. Press CURSOR Down to select "UTILITY." Press ENTER. Press CURSOR Down to select "FACTORY RESET." Press ENTER twice
Fantom-X6/7/8	Press MENU. Press the CURSOR DOWN button to select "Utility." Press button 3 (Factory Reset). Press Button 8 (Exec). Cycle the power
FC-100MKII	Power on while holding pedals #1, #2, and #8
FC-200	Power on while holding the #10 pedal, then press the CTL pedal
FG-10/1000	Power on while holding CLEAR and EXIT
FP-2	Power on while holding REVERB until "Fct" shows in the display
FP-4	Power on while holding FUNCTION
FP-5	Power on while holding PEDAL CONTROL
FP-7	Power on while holding FUNCTION
FP-8	Press FUNC and release. While holding PIANO, press FUNC again
FR-3	Power on while holding SET and ORCHESTRA.
FR-5/7	Power on while holding MENU/WRITE. Press the DATA/ENTER button

G

Model	Procedure
G-70	Press MENU. Touch UTILITY, then touch FACTORY RESET. Touch EXECUTE
G-600/800	Power on while holding WRITE
G-1000	Performance Sets need to be loaded from disk to restore factory default settings. Insert the factory ZIP Disk into the drive and power on. Press F5 (Disk), then F1 (Load). Press PAGE ^ / v to select "PRF MEM" and press UPPER 1 (Execute)
GI-10	Power on while holding PARAMETER + and -, then press VALUE +
GI-20	With the power off, set the GUITAR /BASS switch to match the instrument you are using. Power on while holding TUNER(STRING SEL). Press WRITE
GM-70	Poly Mode: Power on while holding PLAY, GENERAL EDIT, and IND EDIT. Mono Mode: Power on while holding TUNE, CONTROL ASSIGN, and DATA TRANSFER
GP-16	Power on while holding the #6, #7, and #8 buttons. Use the FUNCTION LEFT (<) and RIGHT (>) buttons to select "2.All Factory Preset," then press WRITE three times
GP-20	Power on while holding WRITE. Release WRITE, (The MEMORY indicator will flash), then press WRITE again
GP-100	Power on while pressing in the PARAMETER knob, then press WRITE
GR-09	Power on while holding Pedal #2, then press the VALUE + button. Now press EDIT/PLAY
GR-1	Power on while holding WRITE/COPY, then press YES
GR-20	Power on while holding WRITE, then press WRITE again
GR-30	Power on while holding Pedal #2, then press the PATCH+ button to select INI. Press EDIT/PLAY. Then press PATCH+ and PATCH- simultaneously
GR-33	Press SYSTEM. Press PARAMETER (>) right to select "FACTORY RESET". Use VALUE to select "ALL". Press WRITE twice
GS-10	Power on while holding the CHANNEL SELECT A and B buttons (within the PREAMP/SPEAKER section), then press WRITE
GT-3	Power on while holding MOD and SFX. Press WRITE
GT-5	Power on while holding MOD and FEEDBACKER/SLOW GEAR. Press WRITE
GT-6/8/Pro	Power on while holding the PREAMP ON/OFF and (PREAMP)TYPE/VARIATION buttons. Press WRITE
GT-6B	Power on while holding COMP/LIMITER ON/OFF and TYPE VARIATION. Press WRITE
GT-10/10B	Press SYSTEM. CURSOR right to select "FACTORY RESET" then press ENTER twice.
GW-7	Press FUNCTION. Press SELECT Left or Right to choose "Utility." Press ENTER twice
GW-8	Press MENU. Use the CURSOR Up and Down buttons to select "Utility" then press ENTER. Use the CURSOR buttons to select "Factory Reset" then press ENTER twice. Power off and on.
GX-700	Press TUNER/UTILITY. Use PARAMETER LEFT (<) and RIGHT (>) buttons to select FACT

	INIT. Cursor to left and dial SYSTEM, then right and dial P#100. Press WRITE, then TUNER/UTILITY
--	--

H

Model	Procedure
HP-130	Power on while holding REC
HP-557	Press GUIDE button until it is NOT lit. Touch PIANO, then touch FUNCTION. Use Page (<) (>) to select the function page. Touch FACTORY RESET. Touch OK
HPD-10	While holding SHIFT, press EDIT. Press the V button until you see "FACTORY RESET." Press >, then use the +/- buttons to select "ALL." Press V, then press 4/OK
HPD-15	Press SYSTEM and use the PARAMETER (>) to select "FACTORY RESET SYSTEM." Use the VALUE dial to select "ALL" and press WRITE

J

Model	Procedure
JD-800	Press DATA TRANSFER. Use PAGE UP (^) and DOWN (v) to select FACTORY PRESET. Press YES
JD-990	While holding EXIT, press UTILITY. Press F6 (EXECUTE), then F5 (YES)
JP-8000	While holding SHIFT, press INIT/UTIL. Press INIT/UTIL repeatedly to select INITIALIZE WRITE. Use the DOWN/UP buttons to select FACTORY PRESET, then press WRITE
JP-8080	Press EDIT. Press INIT/UTIL (Bank 7) repeatedly to select Factory Reset. Press REC then press WRITE
JS-30	Power on while holding RECORD located in the SEQUENCER section
JS-5	Press UTILITY. Use CURSOR buttons to select "16 SYSTEM FACTORY RESET." Press ENTER twice
Juno-D	Press MENU. Press PAGE/CURSOR Right to select "Factory Reset". Press ENTER twice
Juno-Di	Press MENU. Use ^/v to select "UTILITY" then press ENTER. ^/v to select "FACTORY RESET" then press ENTER twice.
Juno-G	Press MENU. Use ^/v to select UTILITY then press ENTER. Press F3 FACTORY then press F6 EXECUTE.
Juno-Gi	Press MENU. Use the VALUE Dial to select "5. Utility" then press ENTER. Use the VALUE Dial to select "Factory Reset" then press ENTER. Press Button 5 [EXEC].
Juno-Stage	Press MENU. Use the CURSOR buttons to select "UTILITY," then press ENTER. Use the CURSOR buttons to select "FACTORY RESET," then press ENTER. Press 7 [EXEC] to confirm. Power off then back on when finished.
JV-30	Press CHORUS and REVERB (above INITIALIZE) simultaneously. Press VALUE UP (^)
JV-35/50	Press CONTROL and MASTER simultaneously. Use PARAMETER UP (^) and DOWN (v) to select ALL. Press VALUE UP (^)
JV-80/90	Power on while holding NUMBER 8 (also labeled PERFORM 16 and CAPS). Press ENTER and then press WRITE
JV-880	Press UTILITY, then use the DATA dial to select FACTORY PRESET. Press ENTER twice
JV-1000	Power on while holding NUMBER 8 (also labeled PERFORM 16 and CAPS). Press ENTER, then press WRITE
JV-1010	Press VALUE to select Performance Mode. While holding VOLUME press VALUE. Use the CATEGORY/BANK dial to select Piano (LCD will display Fct). Press VALUE twice
JV-1080	Press UTILITY. Cursor down once, then cursor right three times to select FACTORY PRESET. Press ENTER twice, then press UTILITY
JV-2080	Press UTILITY. Press F6 twice to select MENU 3. Press F1. Then press F6. If necessary, use the VALUE DIAL to turn Memory Protect OFF and press F6 twice
JW-50	Press TUNE/FUNCTION. Press F5 (FACTORY), then F4 (JW RESET), then F3 (GS RESET), then F4 (YES)
JX-1	Power on while holding WRITE and FLUTE
JX-305	Press UTILITY. Use PAGE </> to select Factory Preset and press ENTER. Use PAGE </> to select ALL and press ENTER twice

K

Model	Procedure
KF-90	Press FUNCTION. Touch [System Setting]. Touch [Factory Reset]. Touch [Execute]
KR-5/7	Press the One Touch Program PIANO button. Touch FUNCTIONS. Touch FACTORY RESET

KR-15/15M	Press the One Touch PIANO button. Touch FUNCTION SETTINGS. Touch FACTORY RESET. Touch EXECUTE. Touch YES
KR-55	Hold MIDI/FUNC and press CARD. Hold both VARIATION buttons for 5 seconds
KR-75	Press UTILITY and use the PAGE </> buttons to select "Factory Preset." Press EXECUTE, then press OK
KR-177	In the Utility menu screen, press PAGE < (left) or PAGE >(right) to select the "FACTORY PRESET" page. Press EXECUTE. Press OK
KR-277/375	Press FUNCTION until it is lit. Use BEAT and TEMPO buttons to display "FNC41". Press TRANSPOSE twice
KR-350	While holding LOAD and SAVE, press WRITE
KR-377	Press FUNCTION until it is lit. Use the PAGE left or PAGE right buttons at the bottom of the display until "Factory Reset" appears. Press "FACTORY RESET" next to the display. Press EXECUTE at the bottom of the display. Press OK
KR-500	While holding FROM and TO, press WRITE
KR-570	While holding PART VOLUME ACCOMP, press TRACK 2 and 4 buttons (Composer section) simultaneously. Press PART VOLUME ACCOMP repeatedly to get FACTORY SETUP LOAD in the window. After loading is complete, power off and then back on
KR-575	Press FUNCTION and use the PAGE left or right buttons to select "Factory Preset." Touch the "Execute" icon followed by the "OK" icon on the display screen. Power off then on
KR-577/977	Press FUNCTION until it is lit. Touch [Factory Reset]. Touch [Execute]. Touch [OK]
KR-650	While holding LOAD and SAVE, press WRITE
KR-770	While holding PART VOLUME ACCOMP, press TRACK 2 and 4 buttons (Composer section) simultaneously. Press PART VOLUME ACCOMP repeatedly to get FACTORY SETUP LOAD in the window. After loading is complete, power off and then back on
KR-1070	Press UTILITY and use the PAGE </> buttons to select "Factory Preset." Press EXECUTE, then press OK
KR-1077	Press FUNCTION until it is lit. Touch [Factory Reset]. Touch [Execute]. Touch [OK]
KR-3000	While holding FROM and TO, press WRITE
KR-3500/4500	While holding LOAD and SAVE, press WRITE
KR-4700/5000	While holding EDIT, press LOAD and SAVE
KR-5500	While holding LOAD and SAVE, press WRITE

L

Model	Procedure
LVC-1N	Power on while holding ENTER

M

Model	Procedure
M-10/16DX	Power on while holding FINALIZE and ROOM ACOUSTIC
M-660/760	While holding EDIT, press WRITE. Use PARAMETER UP (^) and DOWN (v) to select ALL, then press WRITE. When completed, press EDIT to return to Play Mode
M-1000	Set the SELECT switch to the OPTICAL Input setting, then power on while holding the CLOCK SOURCE button
M-BD1/DC1	Power on while holding F3
M-GS64/OC1	Power on while holding F3
M-SE1/VS1	Power on while holding F3
MC-09	Press SETUP. Press INC or DEC until "Fct" shows in the display. Press ENTER, then press WRITE
MC-303	Power on while holding down SHIFT, then press ENTER
MC-307	With unit on, Press SYSTEM. Press F2 UTIL. Press CURSOR DOWN until "Factory Reset" appears. Press F1. Press F4
MC-505	Power on while holding down SHIFT, then press ENTER. Note, this procedure takes several minutes
MC-808	Press SYSTEM, then hold SHIFT and press keyboard pad 16. CURSOR to "Factory Rest" and press ENTER twice.
MC-909	With the unit on, press MENU. Use CURSOR to select "Utility." Press ENTER. Press F4 (Factory Reset.) Press F6 (Execute)

ME-5	Power on while holding pedals #1 and #2, then press WRITE immediately
ME-6/6B	Power on while holding PARAMETER DOWN (v) and LEFT (<), then press WRITE
ME-8/8B	Power on while holding PARAMETER LEFT (<) and DOWN (v), then press WRITE/COPY
ME-10	Power on while holding the BANK DOWN (v) pedal, then press WRITE
ME-20/20B	In Manual Mode, hold EDIT/EXIT and press PEDAL 2. Press WRITE twice.
ME-25	Hold EXIT and press the MEMORY v (down) pedal. Press WRITE twice.
ME-30	Power on while holding PARAMETER RIGHT (>) and VALUE DOWN (-), then press WRITE/COPY
ME-33	Power on while holding the AMP/EFFECT right button and EZ TONE. Release, then press WRITE and wait for "WRITE" to stop flashing in the LCD. Power off, then on again
ME-50/50B	Power on while holding WRITE and BANK Left <, then Press WRITE Twice
ME-70	Press Pedals 3 & 4 at the same time to switch to Manual Mode. Hold down EDIT / EXIT and press the MOD pedal. Press WRITE twice.
ME-X	Power on while holding PARAMETER DOWN (v) and LEFT (<), then press WRITE
MICRO BR	Power on while holding UTILITY. Press YES twice.
MK-80	While holding WRITE, press EDIT. While holding the LEFT (<) and RIGHT (>) cursor buttons, press UP (^)
MKS-50	Poly Mode: Power on while holding NUMBER 4 and 8. Mono Mode: Power on while holding NUMBER 3 and 7
MMP-2	With the unit on press SYSTEM until it is orange. Press PAGE until "INITIALIZE" appears. Use the left VALUE control to select the desired target to be initialized. (SYSTEM, USER PATCHES, ALL). Press ENTER twice
MT-32	While holding MASTER VOLUME, press RHYTHM PART. Press PART 1
MT-90S	With the unit on, Press SONG and [4]. Press <(Bwd) or >(Fwd) until "Factory Reset" is displayed. Press (+). Press > (PLAY). Turn off the power, then on again
MT-100	While holding STOP, press DELETE. After the display flashes ALL CLEAR, press EXECUTE
MT-120/120S	Power on while holding REPEAT, SONG (blue button), and PLAY. Press FWD repeatedly, until the window reads T-13. Press PLAY, then press REC. Power off, then on
MT-200	Power on while holding REPEAT, SONG (blue button), and PLAY. Use the DIAL to select T-15 in the window. Press PLAY, then press REC. Power off, then on
MT-300S	Press MENU and use the VALUE DIAL to select "13:Factory Prset". Press ENTER/TRANSPOSE twice. Power off then on
MV-8000/8800	Press SYSTEM, press F5 (SysInfo), press F3 (Initialize), press F5 (Yes). Please note that all factory patches need to be reinstalled via CD-ROM.

P

Model	Procedure
P-55	Power on while holding both INSTRUMENT buttons, then press PARAM 1
Pad-8	Power on while holding MIDI CH and NOTE NUMBER. Power off, then back on
Pad-80	Power on while holding both VALUE (solid < and >) buttons
PC-150	Power on while holding COMMAND on the left edge of the keyboard
PC-200/200MKII	Power on while holding the two buttons under the word STANDARD
PCR-30/50/80	Press EDIT. Press the SYSTEM key, then press the # 8 key. "SY8" will show in the display. Press ENTER three times
PCR-M30/50/80	Press EDIT. Press the SYSTEM key, then press the # 8 key. "SY8" will show in the display. Press ENTER three times
PCR-300/500/800	Press EDIT. Use the VALUE knob to select "SYS," then press ENTER. Use the VALUE knob to select "SY16," then press ENTER. Press ENTER twice.
PK-5	Power on while holding OCT/PARAM
PM-16	Power on while holding NUMBER buttons 1 and 2. (This reloads the first BANK of settings)
PMA-5	Press UTILITY, then press the RIGHT (>) cursor button repeatedly to select INITIALIZE. Press ENTER, then [EXEC]
Prelude	Press MENU. Use the ^/v buttons to select "Utility" then press ENTER. Use the Cursor buttons to select "Factory Reset" then press ENTER.
Pro-E	Power on while holding WRITE
PW-10	With the unit off, turn the TYPE knob to "VO-WAH". Power on while holding

	MANUAL/MEMORY. (ON/OFF will blink three times, then the MEMORY indicator blinks). Release MANUAL/MEMORY, then press MANUAL/MEMORY again
--	---

R

Model	Procedure
R-09/HR	Press MENU. Use the ^/v buttons to select "FACTORY RESET." Press REC twice.
R-5/8/8MKII	Power on while holding CURSOR PAGE and PARAM SELECT, then press ENTER twice
R-8M	Power on while holding ENTER and the RIGHT (>) CURSOR button, then press ENTER twice
R-70	Power on while holding MIDI and ASSIGN, then press YES twice
RA-50/90	Power on while holding WRITE
RA-95	Power on while holding REC
RA-800	(WARNING: This will erase the original factory Performance settings. However, you can save them to disk before doing this procedure.) Power on while holding WRITE
RC-50	Power on while holding PLAY MODE and LOOP SYNC. Press ENTER.
RD-150	Power on while holding REC and PLAY
RD-170	Power on while holding WRITE
RD-300GX	Press EDIT. Use INC/DEC to select "Utility," then press ENTER. Use INC/DEC to select "Factory Reset," then press ENTER twice.
RD-300SX	Press EDIT. Use INC/DEC to select "UtL," then press ORGAN. Press ENTER twice.
RD-500	Power on while holding NUMBER 1 and 8. Press DEC/YES
RD-600	Press EDIT. Press the RIGHT PAGE button until "Initialize All" is displayed. Press INC/YES twice. Press EDIT to return to Play mode
RD-700/GX/SX	Press EDIT. CURSOR down to "9 UTILITY" and press ENTER. CURSOR down to "Factory Reset All" and press ENTER three times
RM-2	Power on while holding VALUE UP, SELECT and METRONOME. When "rSt" flashes in the display, press METRONOME again
RMP-3/5	Power on while holding STOP/START. Press and hold STOP/START until reset is completed.
RS-5/9	With the unit on, press UTILITY. Use VALUE + / - to select "Factory Reset". Press ENTER. Use VALUE + / - to select "All". Press ENTER twice
RS-50/70	Press PATCH so it is lit. Press UTILITY so it is lit. Use PAGE/CURSOR Left or Right to select "Ag5: FACTORY RESET." Press ENTER twice
RSP-550	Power on while holding PROGRAM/PAGE UP (^) and DOWN (v), then press WRITE
RSS-10	Power on while holding LOCK and OPTION. (The MCR-8 LED lights.) Press DEMO PROGRAM four times. Press DEVICE ID
RV-70	Power on while holding WRITE and DOWN. Use the UP (^) and DOWN (v) buttons to select AL. Press WRITE. Power off, then back on

S

Model	Procedure
SB-55	Power on while holding CLEAR
SC-33	Power on while holding REVERB and SPLIT, then press YES
SC-50/55/MKII	Power on while holding both INSTRUMENT buttons, then press ALL
SC-88	While holding SELECT, press both INSTRUMENT buttons. Press ALL
SC-155	Power on while holding both INSTRUMENT buttons, then press ALL
SC-880	Press UTILITY. CURSOR UP and use the VALUE DIAL to select Factory Preset. CURSOR DOWN and use the VALUE DIAL to select ALL. Press ENTER twice
SD-35	Power on while holding CLEAR, then press REC
SDE-330	Power on while holding SYSTEM and PROGRAM. Use the DATA dial to select SYSTEM + PROGRAM. Press MEMORY
SDX-330	Power on while holding SYSTEM and PROGRAM. Use the DATA dial to select SYSTEM + PROGRAM. Press MEMORY
SE-50	Power on while holding PARAM UP (^) and VALUE UP (^). Press WRITE. Wait three seconds and press WRITE again
SE-70	Power on while holding in the NUMBER/VALUE knob. Press PARAMETER LEFT (<), then dial to STANDARD mode or GUITAR mode. Press WRITE
SH-01	Power on while holding PRESET PATCH and USER PATCH (keep holding until TAP TEMPO

	goes out). Press WRITE.
SH-32	Power on while holding 1/A. Press the VALUE UP/DOWN buttons to select the desired target to be initialized. Press WRITE/EXEC twice
SH-201	Power on while holding PRESET and USER. Press WRITE.
Sonic Cell	Press MENU, then select UTILITY. Select FACTORY RESET, then select OK and press CURSOR/VALUE.
SP-202	CAUTION: This procedure will erase all of the internal samples and initialize the unit: Hold down CANCEL and press DEL, then press the A/B button. Press DEL
SP-303	Power on while holding CANCEL, REMAIN, DEL. Press REC
SP-404	Power on while holding CANCEL, REMAIN, and DEL. When "ini" shows in the display, press REC
SP-505	Press SONG or PTN to display the Play screen. Press SYSTEM to display the system screen. Press F1 (UTILITY). Press F3 (INIT). Set desired target to be initialized with VALUE dial.(ALL, SYSTEM, SAMPLE, SEQ). Press F1 twice
SP-606	Caution: Initializing the unit permanently deletes all samples out of the internal memory. Press MENU. Press CURSOR to select "SYSTEM" and then press ENTER. Press F3 twice
SP-808	Press SYSTEM/DISK and CURSOR to 4.Init SystemParam?. Press ENTER
SPD-S	Press SETUP. Press PAGE Right to select INIT/DELETE. Press ENTER. Use + or - to select "ALL." Press ENTER
SPD-6	Power on while holding DRUMS/U1, PERC/U2, SFX/U3 and OTHERS/U4. Press OTHERS/U4 to execute the reset
SPD-8	Power on while holding EDIT, then press COPY. Use the VALUE UP (^) and DOWN (v) to select F A L in the window. Press ALL/ENTER
SPD-11/20	Power on while holding ALL/ENTER and the DOWN ARROW button. Press ALL/ENTER
SPD-30	Press MENU. Use Knob 1 to select "SYSTEM" then press Button 3 [ENTER]. Press Button 2 to select the "F.RESET" tab. Use Knob 1 to select "Factory Reset" then press Button 3 [ENTER].
SRV-330	Power on while holding SYSTEM and PROGRAM. Use the DATA dial to select SYSTEM + PROGRAM. Press MEMORY
SRV-2000	Factory: Power on while holding WRITE and REVERB NON-LINEAR. Delay Mode: Power on while holding WRITE, REVERB NON-LINEAR and ROOM SIMULATE
SRV-3030/D	With the unit on, press MEMORY. Use NUMBER/ENTER dial to select FACTORY RESET. Press NUMBER/ENTER twice
SX-700	Press UTILITY. Use PARAMETER LEFT (<) and RIGHT (>) to select FACT INIT. Press WRITE

T

Model	Procedure
TD-3	Power on while holding the + and - buttons. Release them, and then press DRUM KIT
TD-4	Press MENU. Use the ^/v buttons to select "9 OPTIONS" then press OK. Use the ^/v buttons to select "Factory Reset" then press OK. Use the Dial to select "All" then press the SEL [v] button. Press OK.
TD-5	Power on while holding EDIT and START/STOP, then press START/STOP again
TD-6/V	Power on while holding SHIFT and EDIT SETUP. Press INC/+ to select ALL. Press ENTER twice
TD-7	Press SYSTEM. Use the LEFT (<) and RIGHT (>) CURSOR buttons to select INI, then press ENTER. Cursor to HI HAT and use the DATA dial to select ALL. Press ENTER twice
TD-7T	Power on while holding SYSTEM and JUMP, then press ENTER
TD-8	Press SETUP, then F3 MENU. Rotate VALUE to select "RESET." Press F3 and use VALUE to select ALL. Press F3 EXEC to execute
TD-9	Press SETUP, then press F3 four times.
TD-10	Press SETUP, then press F4 four times
TD-12	Press SETUP, then press F5 three times
TD-20/20X	Press SETUP. Press F5 twice
TMC-6	Power on while holding TRIGGER SELECT and EDIT, release both then press EDIT again
TR-505	Power on while holding MODE and PATTERN GROUP KEY A
TR-626	Power on while holding MODE and TRACK #1
TR-707/727	Power on while holding TRACK WRITE and TRACK #1

TR-909	Power on while holding TRACK #1 and PATTERN #1
--------	--

U

Model	Procedure
U-110	Power on while holding PART and EDIT

V

Model	Procedure
VA-3	Press FUNCTION/MENU. Touch [Global Parameter]. Touch [ALL]
VA-5/7	Power on while holding MELODY/INTELL, CONTROLLERS and EFFECTS
VA-76	With the unit on, press the FUNCTION/MENU button. Press "GLOBAL PARAMETER" on the touch screen. Then press "ALL" on the touch screen
V-BASS	Power on while holding PAGE left and PAGE right. Press WRITE
VB-99	Press [SYSTEM]. Press Page [>] to display Page 3. Press F2 [F.RST]. Select ALL, then press F6 [EXEC]. Press WRITE.
VF-1	With the unit on press UTILITY. Use NUMBER/VALUE dial to select "Factory Reset". Press NUMBER/VALUE three times
VG-8/8EX	Power on while holding F1, F3, and F5. Press F6 for All, F4 for Patches, or F2 for System
VG-88	Power on while holding PAGE (>) and PAGE (<). Press WRITE twice
VG-99	Press SYSTEM. Press PAGE (>) to display page 3. Press F1 "F.RST." Press F6 "EXEC" then press WRITE.
VGA-5/7	Power on while holding WRITE. Release WRITE, then press WRITE again
VK-7	Power on while holding MAIN, SUB and PEDAL in the HARMONIC BAR PART section
VK-8	Power on while holding the UPPER, LOWER, and PEDAL buttons in the HARMONIC BAR PART section. Release and re-press the UPPER, LOWER, and PEDAL buttons once again
VK-8M	With the unit on, confirm that the VOLUME is at the MIN position, then power off. Power on while holding BAND, WRITE, and H-BAR MANUAL
VK-77	Press EDIT. Use the RIGHT/LEFT ARROW buttons to select UTILITY and press ENTER. Use the UP/DOWN ARROW buttons to select Factory Reset. Press WRITE, then press ENTER
VK-88	Power on while holding BANK, WRITE, and H-BAR MANUAL. Continue holding BANK, WRITE, and H-BAR MANUAL until all panel indicators light.
VK-1000	Press WRITE, then press F3 to access the INIT MENU screen. Press F4 to access the COLD BOOT screen, then press ENTER
VM-3100/Pro	Press SYSTEM, then press F1-F4 ON/OFF. Use the VALUE dial to put a check in the ALL box and press ENTER three times
VM/C-7100/7200	Power on while holding PROJECT/SYS and F1. Continue to press F1 until completed
V-Piano	Press FUNCTION so it is lit. Press F4 [UTILITY]. Use the VALUE dial to select "9. Initialize" then press ENTER. Use the VALUE dial to select "2. Factory Reset All" then press ENTER. Press F4 [Execute] then press F4 [OK].
VP-7	Power on while holding BYPASS and FEMALE CHOIR.
VP-70	Power on while holding PLAY, VOICE EXPANSION, and MIDI
VP-770	Press MENU. Cursor to "Factory Reset" then press F2 [ENTER]. Press F1 [OK].
VP-9000	With the unit on, press UTILITY until it is lit. If the UTILITY Menu1 screen is displayed, press PART/ >. (the UTILITY Menu2 screen will appear). Press F1 (FACTORY). Press F6(EXEC)
VR-700	Press FUNCTION/ENTER. Use the +/- buttons to display "Utl." Press STRINGS, then press FUNCTION/ENTER twice.
V-Synth	With the unit on, Press MODE. Touch FACORY RESET, then touch EXECUTE
V-Synth GT	Press UTILITY. Touch "FACTORY RESET," then touch "EXECUTE."
V-SynthXT	Press MODE. Touch "SYSTEM." Touch "INIT." Touch "EXECUTE."
VS-1880/1824CD	Hold shift and press F5/. Page to "INIT". Press F1. Press ENTER/YES
VS-2000CD	Hold SHIFT and press F4 (Utility). Press PAGE to get to page 3. Press F1 (PrmIni). Press F5. Press ENTER/YES
VS-2400CD	Hold SHIFT and press F4 (Utility). Press PAGE to get to page 3. Press F6 (PrmIni). Press F5. Press ENTER/YES
VS-2480	Press UTILITY. Press PAGE to get to page 3. Press F6 (PrmIni). Press F5. Press

	ENTER/YES
VT-1	Power on while holding down the PRESET/USER button

W

Model	Procedure
W-50	Press CONTROL and MASTER simultaneously. Use PARAMETER UP (^) and DOWN (v) to select ALL. Press VALUE UP (^)

X

Model	Procedure
XP-10	Press UTILITY. Use VALUE + and - to select INITIALIZE, then press ENTER. Use VALUE + and - to select FACTORY PRESET, then press ENTER
XP-30	Press UTIL/CARD and use the CURSOR buttons to select 4:FACTORY RESET. Press ENTER three times. If Write Protect is on, press DEC once, then press ENTER three times
XP-50	Press DISK/UTILITY, select SOUND, select PRESET, then press ENTER. Use the dial to turn Memory Protect OFF if necessary, then press ENTER twice
XP-60/80	Press UTILITY, press F6 (MENU) twice to select Factory, then ENTER. Press F6 (EXECUTE). Use the dial to turn Memory Protect OFF if necessary, press ENTER, then press F6 (EXECUTE)
XV-88	With the unit on, press UTILITY. Cursor down to Utility Menu 2. Cursor right 3 times to select "FACTORY RESET". Press ENTER twice. If Internal Write Protect is set to ON, turn the VALUE dial to select OFF, then press ENTER 3 times
XV-2020	While holding down VOLUME, press VALUE. Release them, then turn CATEGORY/BANK to select "PIANO." Rotate VALUE until "Fct" shows in the display. Press VALUE Twice
XV-3080	With unit on, press UTILITY. Press UP or DOWN cursor buttons to select the UTIL 2 page. Use LEFT or RIGHT cursor buttons to select "FACTORY RESET". Press ENTER twice
XV-5050	With the unit on, press UTILITY. Press CURSOR left until "FACTORY RESET" shows in the display. Press ENTER twice. If "WRITE PROTECT ON" is displayed, turn the VALUE dial to select "OFF", then press ENTER twice
XV-5080	With the unit on, press SYSTEM/UTILITY. Press F6 [MENU] to select menu 3. Press F1[FACTORY], then press F6 [FACTORY]. If "INT WRITE PROTECT=ON" is displayed, press DEC, then press F6 twice