

Roland®


GRAPHIC EQUALIZER



EQ-131

EQ-215

EQ-231

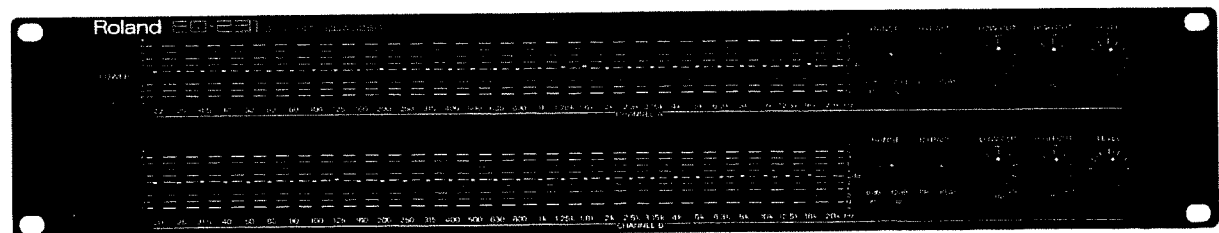Owner's Manual



	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
ATTENTION: RISQUE DE CHOC ELECTRIQUE NE PAS OUVRIR		
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS.

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

WARNING - When using electric products, basic precautions should always be followed, including the following:

1. Read all the instructions before using the product.
2. Do not use this product near water — for example, near a bathtub, washbowl, kitchen sink, in a wet basement, or near a swimming pool, or the like.
3. This product should be used only with a cart or stand that is recommended by the manufacturer.
4. This product, either alone or in combination with an amplifier and headphones or speakers, may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should consult an audiologist.
5. The product should be located so that its location or position does not interfere with its proper ventilation.
6. The product should be located away from heat sources such as radiators, heat registers, or other products that produce heat.
7. The product should be connected to a power supply only of the type described in the operating instructions or as marked on the product.
8. The power-supply cord of the product should be unplugged from the outlet when left unused for a long period of time.
9. Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
10. The product should be serviced by qualified service personnel when:
 - A. The power-supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled onto the product; or
 - C. The product has been exposed to rain; or
 - D. The product does not appear to operate normally or exhibits a marked change in performance; or
 - E. The product has been dropped, or the enclosure damaged.
11. Do not attempt to service the product beyond that described in the user-maintenance instructions. All other servicing should be referred to qualified service personnel.

For the USA

This product may be equipped with a polarized line plug (one blade wider than the other) . This is a safety feature. If you are unable to insert the plug into the outlet, contact an electrician to replace your obsolete outlet. Do not defeat the safety purpose of the plug.

For Canada

For Polarized Line Plug

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

ATTENTION: POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU' AU FOND.

For the U.K.

IMPORTANT: THE WIRES IN THIS MAINS LEAD ARE COLOURED IN ACCORDANCE WITH THE FOLLOWING CODE.

BLUE: NEUTRAL
 BROWN: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:



The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK.



The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.

Under no circumstances must either of the above wires be connected to the earth terminal of a three pin plug.




 

 
USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About  WARNING and  CAUTION Notices







 WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
 CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols




	The  symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The  symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The  symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING








WARNING

- Before using this unit, make sure to read the instructions below, and the Owner's Manual. 
- Do not open or perform any internal modifications on the unit. 
- When using the unit with a rack or stand recommended by Roland, the rack or stand must be carefully placed so it is level and sure to remain stable. If not using a rack or stand, you still need to make sure that any location you choose for placing the unit provides a level surface that will properly support the unit, and keep it from wobbling. 
- Avoid damaging the power cord. Do not bend it excessively, step on it, place heavy objects on it, etc. A damaged cord can easily become a shock or fire hazard. Never use a power cord after it has been damaged. 
- In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the unit. 
- Protect the unit from strong impact. (Do not drop it!) 

WARNING

- Do not force the unit's power-supply cord to share an outlet with an unreasonable number of other devices. Be especially careful when using extension cords—the total power used by all devices you have connected to the extension cord's outlet must never exceed the power rating (watts/amperes) for the extension cord. Excessive loads can cause the insulation on the cord to heat up and eventually melt through. 
- Before using the unit in a foreign country, consult with your dealer, or qualified Roland service personnel. 
- When replacing the fuse, use only the specified type and size (0.5A / 250V; see p. 10). 

⚠ CAUTION

- Always grasp only the plug on the power-supply cord when plugging into, or unplugging from an outlet. 
- Try to prevent cords and cables from becoming entangled. Also, all cords and cables should be placed so they are out of the reach of children. 
- Never climb on top of, nor place heavy objects on the unit. 
- Never handle the power cord or its plug with wet hands when plugging into, or unplugging from, an outlet. 
- Before moving the unit, disconnect the power plug from the outlet, and pull out all cords from external devices. 
- Before cleaning the unit, turn off the power and unplug the power cord from the outlet (p. 11). 
- Whenever you suspect the possibility of lightning in your area, pull the plug on the power cord out of the outlet. 

Thank you for purchasing the Roland EQ-131/215/231 Graphic Equalizer.

** Before using this unit, carefully read the sections entitled: "IMPORTANT SAFETY INSTRUCTIONS" (p. 2), "USING THE UNIT SAFELY" (p. 3, 4), and "IMPORTANT NOTES" (p. 5). These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, this manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.*

Main Features

- The EQ-131 and EQ-231 are 31-band graphic equalizer which provide a wide range of detailed equalization over the 20 Hz - 20 kHz bands.
The EQ-215 is a two-channel graphic equalizer with 15 bands spaced at 2/3 octave intervals. It allows a wide range of detailed equalization over the 25 Hz - 16 kHz bands.
- Equalization range can be switched between +/- 6 dB and +/- 12 dB.
- An equalizer Bypass Switch is provided.
- A total level control allows you to compensate for the volume difference in equalizer and bypassed sound.
- The Low Cut Filter and High Cut Filter can be used to cut unwanted frequency bands.
- Peak Indicators for each channel allow you to adjust levels to the optimum distortion-free settings.
- Both balanced phone jacks and XLR connectors are provided for input and output, allowing use with a variety of equipment including channel insertion.

Copyright © 1996 ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.

IMPORTANT NOTES

In addition to the items listed under "IMPORTANT SAFETY INSTRUCTIONS" and "USING THE UNIT SAFELY" on pages 2 and 3, please read and observe the following:

Power Supply

- Do not use this unit on the same power circuit with any device that will generate line noise (such as an electric motor or variable lighting system).
- Before connecting this unit to other devices, turn off the power to all units. This will help prevent malfunctions and/or damage to speakers or other devices.

Placement

- Using the unit near power amplifiers (or other equipment containing large power transformers) may induce hum. To alleviate the problem, change the orientation of this unit; or move it farther away from the source of interference.

Maintenance


- For everyday cleaning wipe the unit with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.
- Never use benzene, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

Additional Precautions



- Use a reasonable amount of care when using the unit's buttons, sliders, or other controls; and when using its jacks and connectors. Rough handling can lead to malfunctions.
- When connecting / disconnecting all cables, grasp the connector itself—never pull on the cable. This way you will avoid causing shorts, or damage to the cable's internal elements.
- A small amount of heat will radiate from the unit during normal operation.
- To avoid disturbing your neighbors, try to keep the unit's volume at reasonable levels. You may prefer to use headphones, so you do not need to be concerned about those around you (especially when it is late at night).
- When you need to transport the unit, package it in the box (including padding) that it came in, if possible. Otherwise, you will need to use equivalent packaging materials.

(1) Block Diagram and Signal Flow Chart



<EQ-131>

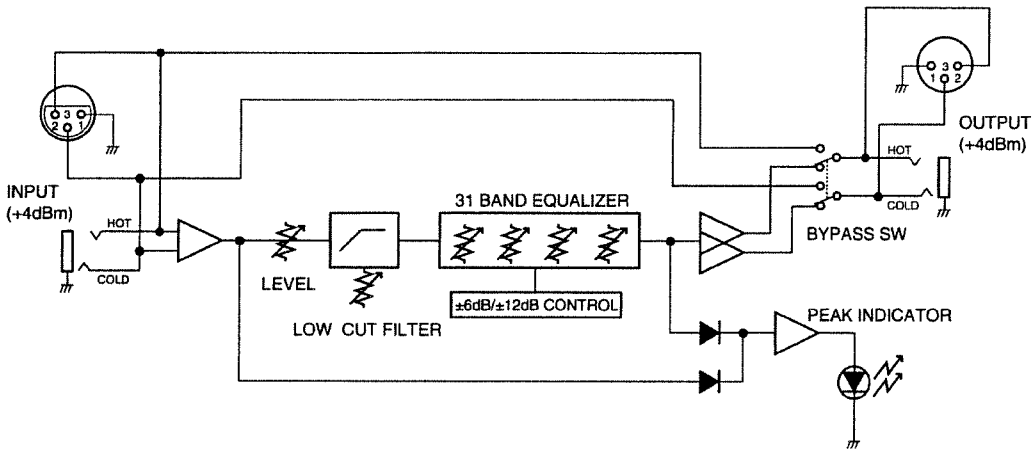

<EQ-215>

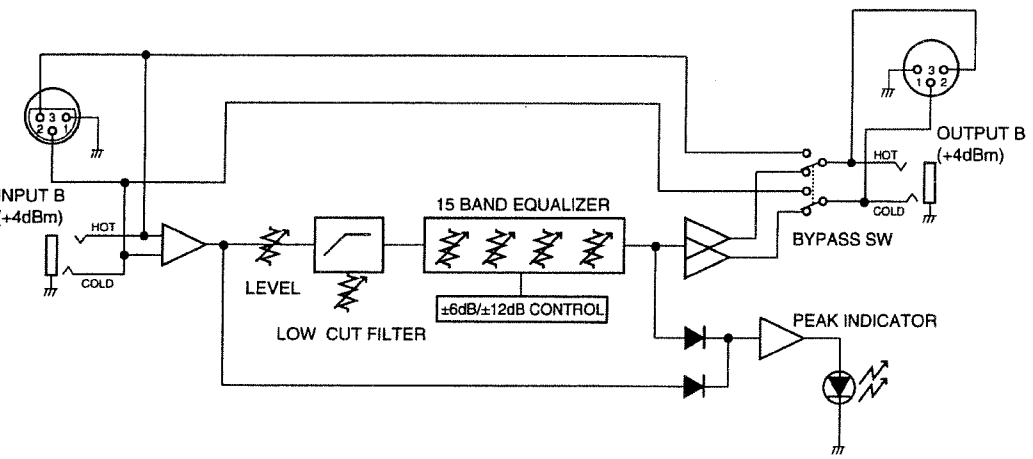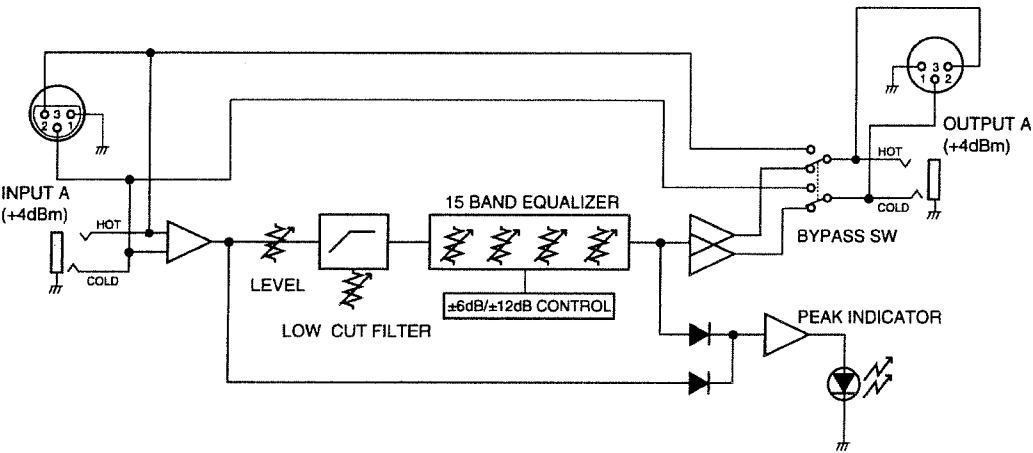


<EQ-231>

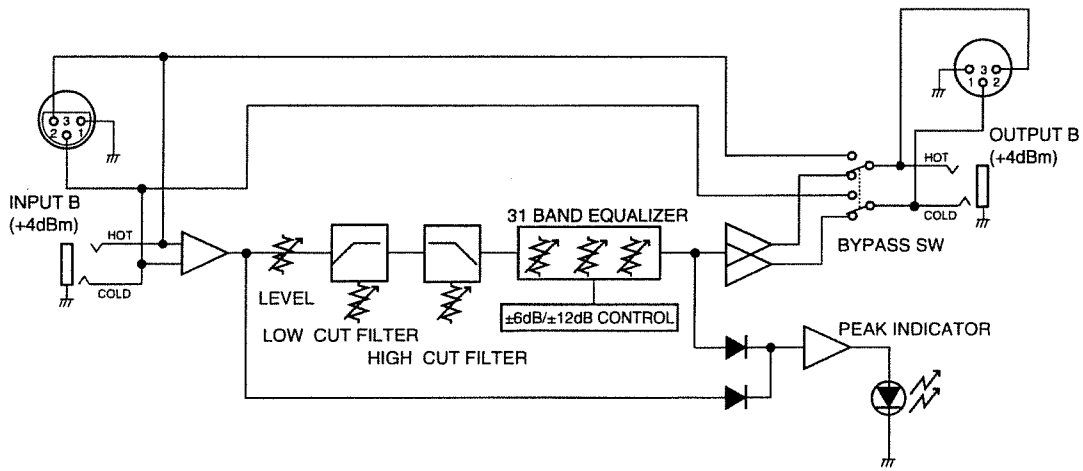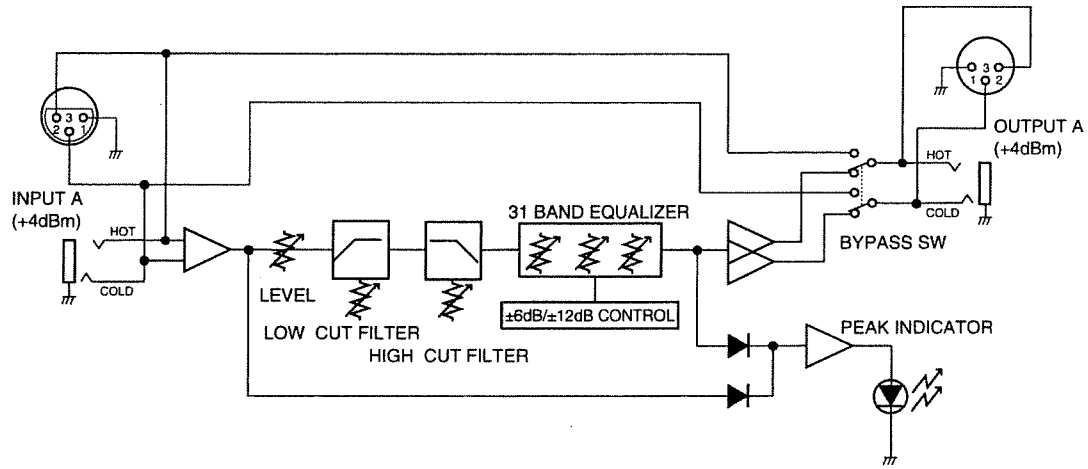


(2) Panel Descriptions

1 Front Panel


<EQ-131>

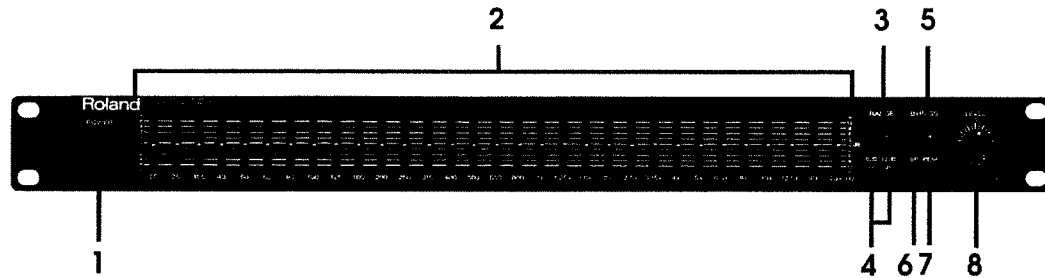

<EQ-215>

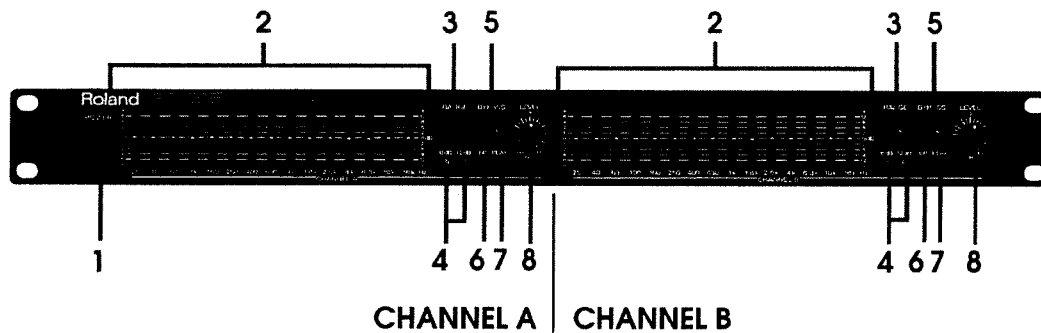

<EQ-215>

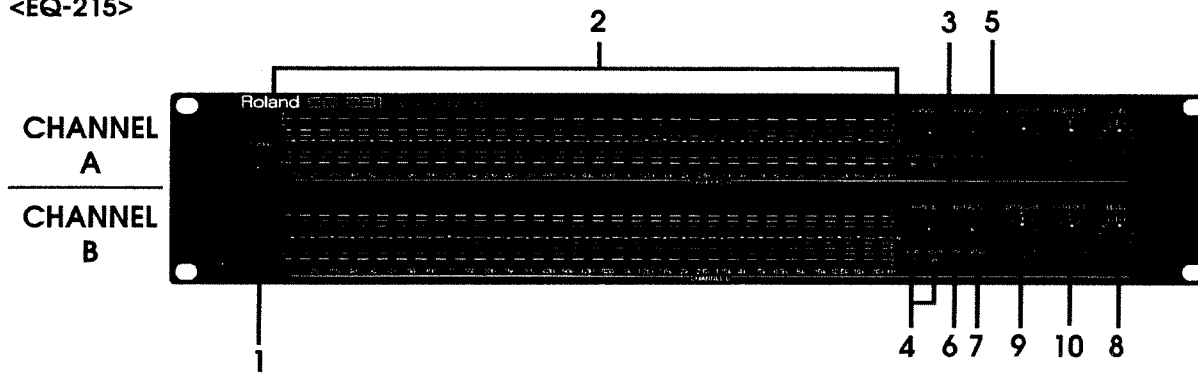

1 POWER: Power Switch

This switch turns the power on/off. When this switch is turned on, the Range Indicator will light to indicate that the unit is operating.

** This unit is equipped with a protection circuit. A brief internal (a few seconds) after power up is required before the unit will operate normally.*

2 Equalizer Control Sliders (EQ-131/231)

The frequency range of 20 Hz – 20 kHz is divided into thirty-one bands of 1/3 octave, and each slider boosts or cuts the band which is centered on its frequency.

(EQ-215)

The frequency range of 25 Hz – 16 kHz is divided into thirty-one bands of 2/3 octave, and each slider boosts or cuts the band which is centered on its frequency.

** If equalizing settings make the Peak Indicator (7) frequency light, set these sliders so that the Peak Indicator lights only briefly for maximum input levels. the range will be +/- 12 dB, When this switch is off the range will be +/- 6 dB.*

3 RANGE: Range Switch

This switch selects the range of the equalizing level and level control. When this switch is on the range will be +/- 12 dB, When this switch is off the range will be +/- 6 dB.

4 RANGE: Range Indicators

The yellow indicator will light when the equalizing range has been set to +/- 12 dB, and the green indicator will light when the equalizing range has been set to +/- 6 dB, allowing you to visually check the Range setting.

5 BYPASS: Bypass Switch

This switch allow you to bypass the effect. When this switch is off, the input signal will be equalized and output. When this switch is on, the input signal will be output directly without being processed.

When the power is not on, if you want direct output of the input sound, turn on Bypass.

6 BYPASS: Bypass Indicators

These indicators light when the equalization is bypassed, allowing you to visually confirm whether equalization is octave or bypassed.

7 PEAK: Peak Indicators

The Peak Indicators light when the equalization is peaked.

The Peak Indicator lights at -6 dB of the clipping level.

8 LEVEL: Level Control Knob

This knob adjusts the volume difference between the equalized and bypassed signals. It allows you to boost (increase) or cut (decrease) the equalized signal over a range of +/- 12 dB (+/- 6 dB).

9 LOW CUT: Low-Cut Filter Control Knob (only EQ-231)


This knob sets the cutoff frequency (10 Hz – 250 Hz: the frequency at which the effect starts) for the low-cut filter. This will be cut -12 dB/octave.

10 HIGH CUT: High-Cut Filter Control Knob (only EQ-231)


This knob sets the cutoff frequency (3 kHz – 40 kHz: the frequency at which the effect starts) for the high-cut filter. This will be cut -12 dB/octave.

2 Rear Panel

<EQ-131>

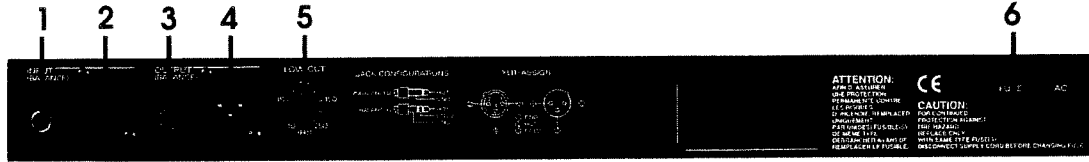


<EQ-215>

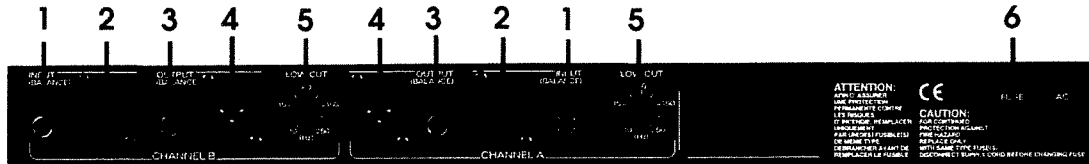

CHANNEL B | CHANNEL A

<EQ-231>

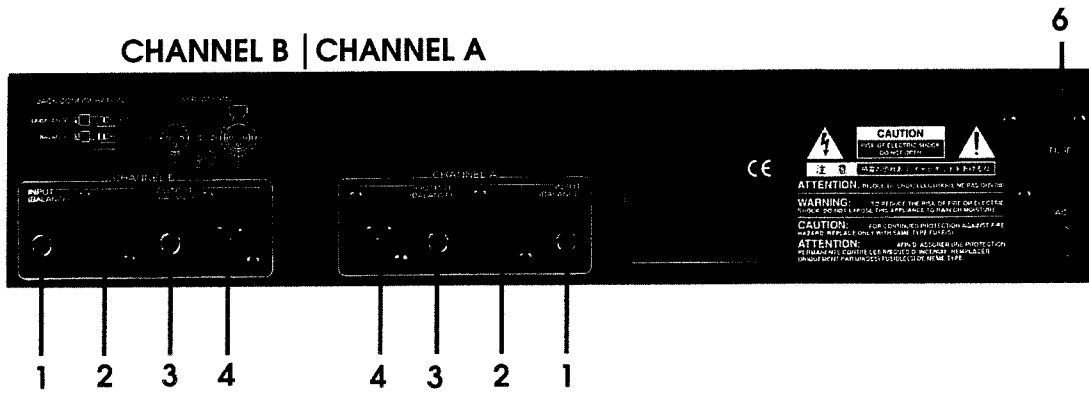

CHANNEL B | CHANNEL A

1 INPUT: Input Jacks

These inputs are stereo phone jacks compatible with balanced input. (Rated Input Level = +4 dBm)

*** In case of unbalanced input by phone jack, output level drop 6 dB.**

2 INPUT: Input Connectors

These inputs are XLR connectors compatible with balanced input. (Rated Input Level = +4 dBm)

3 OUTPUT: Output Jacks

These outputs are stereo phone jacks compatible with balanced output. (Rated Output Level = +4 dBm)

4 OUTPUT: Output Connectors


These outputs are XLR connectors compatible with balanced output. (Rated output Level = +4 dBm)

5 LOW CUT: Low Cut Filter Control Knob (only EQ-131/215)

This knob sets the cutoff frequency (10 Hz – 250 Hz: the frequency at which the effect starts) for the low-cut filter. This will be cut -12 dB/octave.

6 FUSE: Fuse Holder

*** When replacing the fuse, use only the specified type and size (0.5 A/250 V). And always turn the unit off and unplug the power cord before replacing the fuse.**

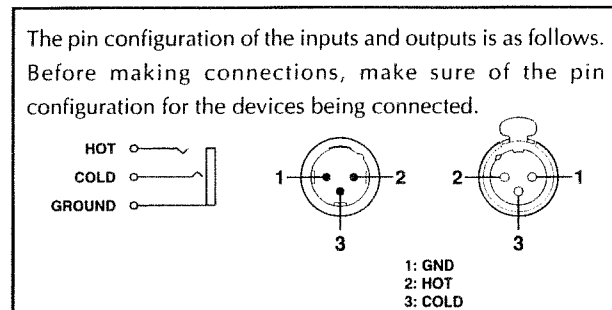


(3) Setup

* To prevent malfunction and/or damage to speakers or other devices, always turn down the volume, and turn off the power on all devices before making any connections.


* Once the connections have been completed, turn on power to your various devices in the order specified. By turning on devices in the wrong order, you risk causing malfunction and/or damage to speakers and other devices.

Sound Source – EQ-131/215/231 – Mixer – Power Amp

1. Basic setup: keyboard, electric guitar, etc.

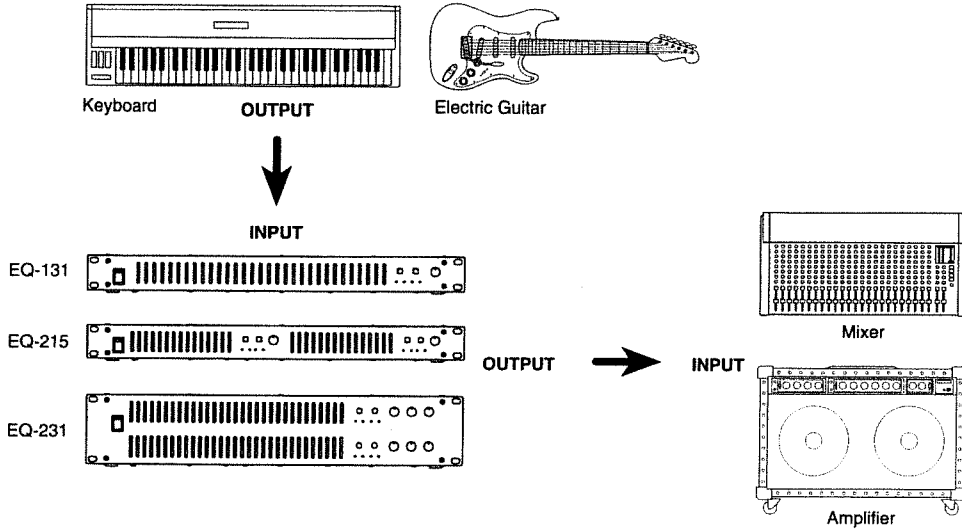


2. Connection to a specific channel of a mixer

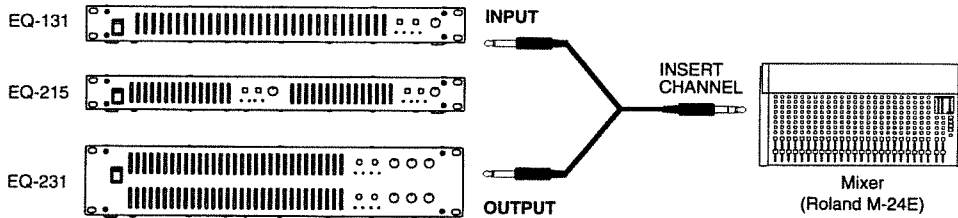


* An insertion cable (PCS-31: Optional) is required.

3. To adjust overall tone or compensate for room acoustics

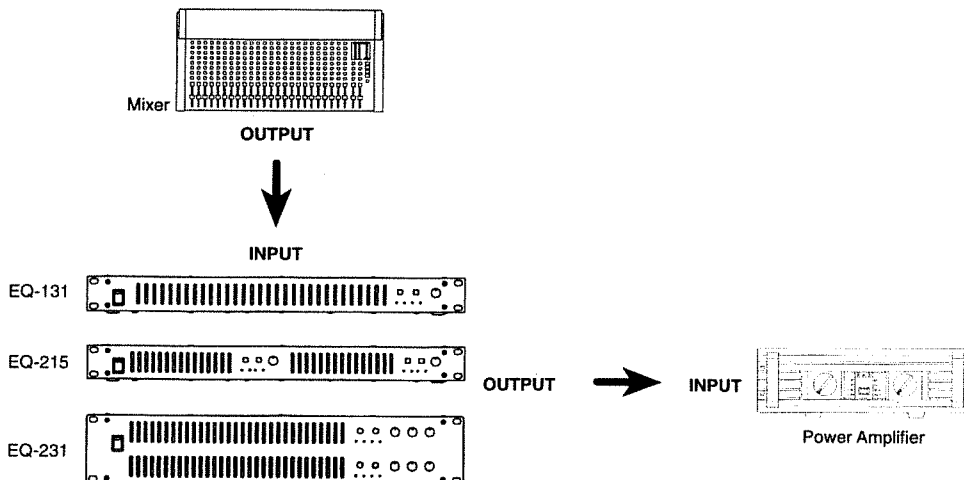


(4) Frequency Response

<EQ-131/231>

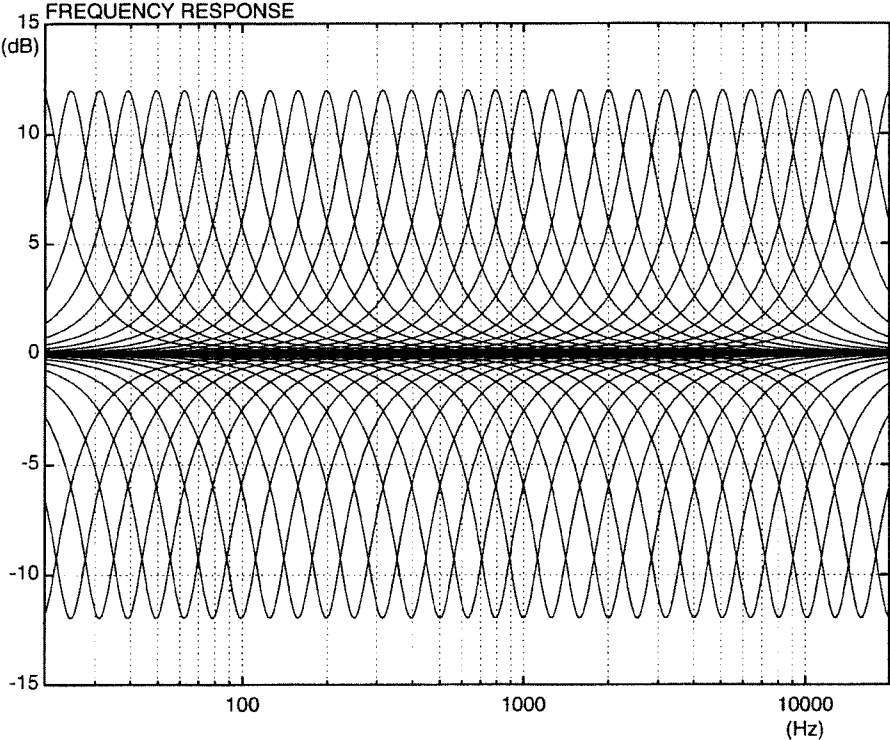


<EQ-215>

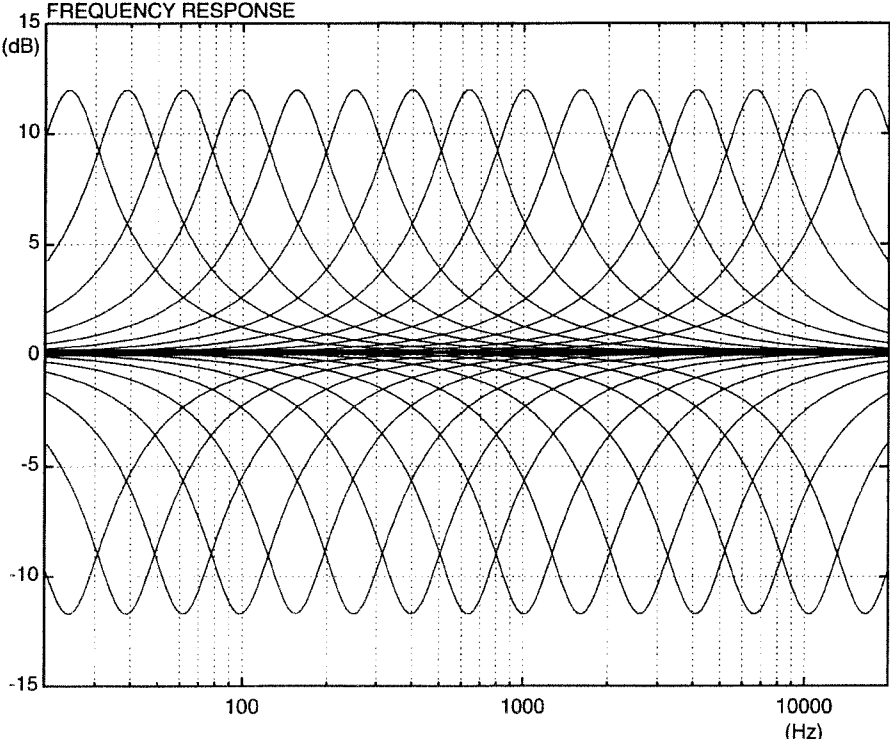


(5) Dimensions


<EQ-131>

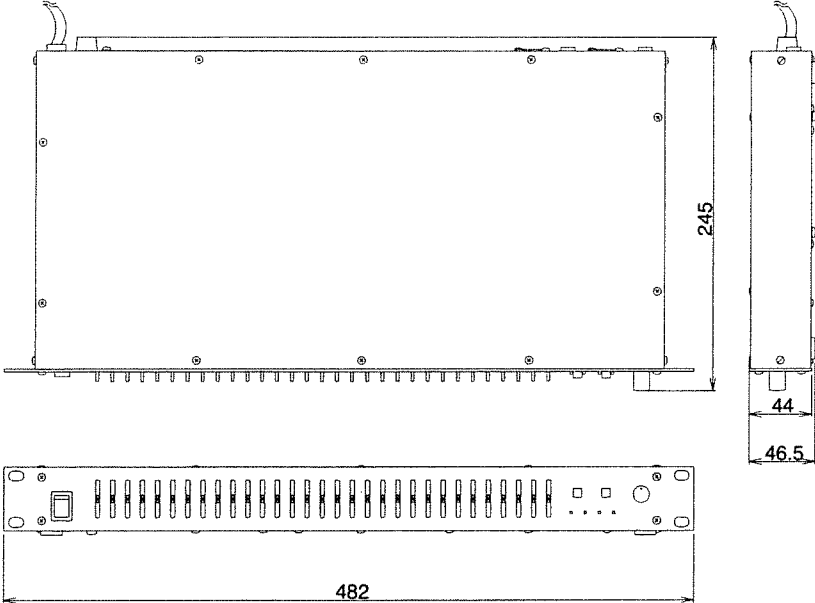

<EQ-215>

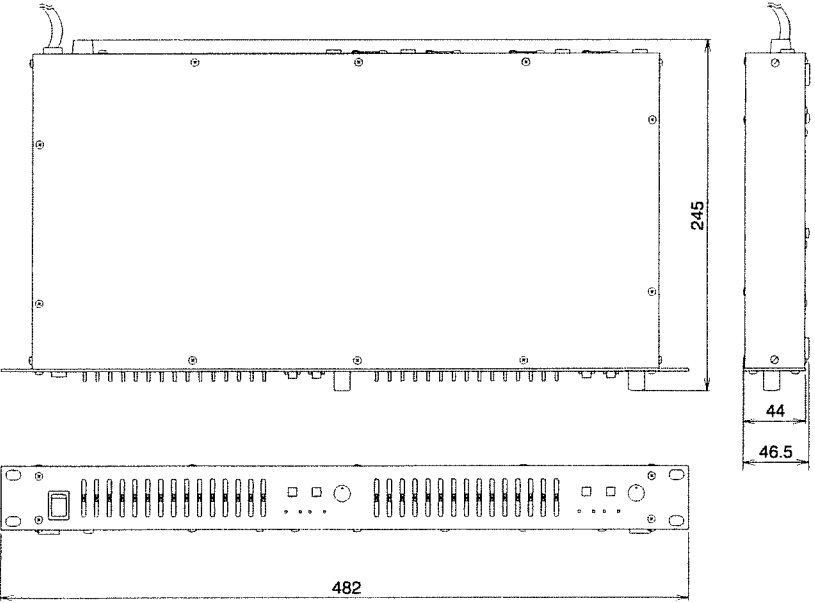

<EQ-231>

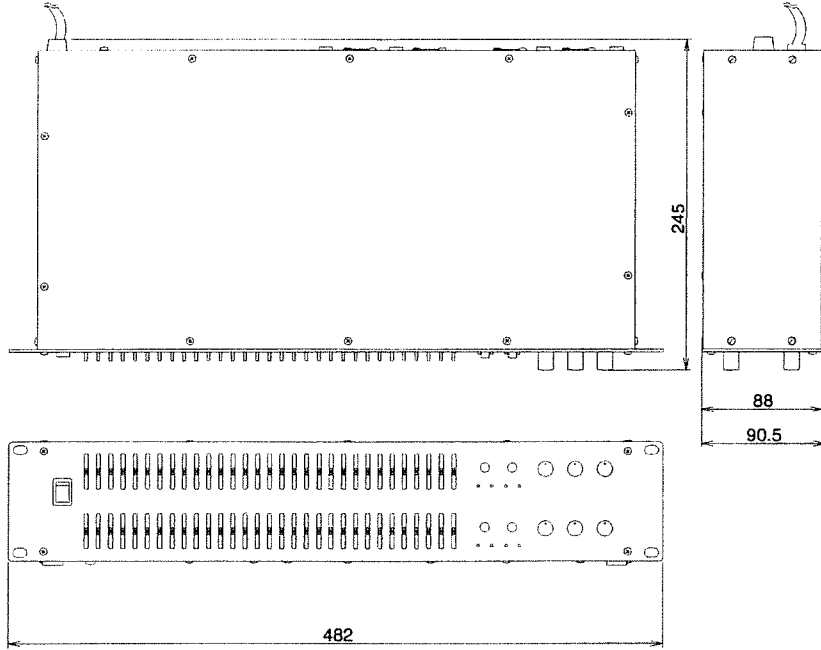

(6) Specifications

• Input

Input Jack	Input Impedance	Nominal Input Level	Type of Connectors
INPUT (Balanced)	XLR type: 24 k Ω	+4 dBm (1.23 V)	XLR Connector
	Phone: 24 k Ω		Stereo Phone Jack

(0 dBm = 0.775 V)

• Output

Output Jack	Output Impedance	Load Impedance	Output Level		Type of Connectors
			Nominal Level	Non-Clip Max Level	
OUTPUT (Balanced)	XLR type: 600 Ω	XLR type: More than 600 Ω	+4 dBm (1.23 V)	+24 dBm (12.3 V)	XLR Connector
	Phone: 600 Ω	Phone: More than 10 k Ω			Stereo Phone Jack

(0 dBm = 0.775 V)

Model	EQ-131	EQ-231	EQ-215
Channel	1	2	
Frequency Response	20 Hz – 50 kHz +0/-2 dB	20 Hz – 40 kHz +0/-3 dB	20 Hz – 50 kHz +0/-2 dB
Residual Noise	Less than -95 dBm (IHF-A) [Level Control / Equalizer Control: Flat]		
Maximum Voltage Gain	12 dB		
Crosstalk	—	More than 70 dB (10 kHz)	
Total Harmonic Distortion	Less than 0.01 % [Level Control / Equalizer Control: Flat]		
Equalizer Controls	31 bands (1/3 octave)	31 bands (1/3 octave) x2	15 bands (2/3 octave) x2
Center Frequency	20, 25, 31.5, 40, 50, 63, 80, 100, 125, 160, 200, 250, 315, 400, 500, 630, 800, 1k, 1.25k, 1.6k, 2k, 2.5k, 3.15k, 4k, 5k, 6.3k, 8k, 10k, 12.5k, 16k, 20k (Hz)	25, 40, 63, 100, 160, 250, 400, 630, 1k, 1.6k, 2.5k, 4k, 6.3k, 10k, 16k (Hz)	
Variable Range	± 12 dB / ± 6 dB		
Total Level	± 12 dB / ± 6 dB		
Controls	Level, Equalizer (31 bands), Low Cut Filter	Level x2, Equalizer (31 bands) x2, Low Cut Filter x2, Hi Cut Filter x2	Level x2, Equalizer (15 bands) x2, Low Cut Filter x2
Switches	Power, Bypass, Range	Power, Bypass x2, Range x2	
Jacks	Input (Stereo Phone, XLR type), Output (Stereo Phone, XLR type)	Input (Stereo Phone x2, XLR type x2), Output (Stereo Phone x2, XLR type x2)	
Indicators	Bypass, Range (6dB/12dB), Peak*	Bypass x2, Range (6dB/12dB) x2, Peak* x2	
Power	AC 117 V, 230 V		
Power Consumption	8 W	17 W	12 W
Dimensions (WxHxD)	482 x 44 x 245 mm 19" x 1-3/4" x 9-11/16"	482 x 88 x 245 mm 19" x 3-1/2" x 9-11/16"	482 x 44 x 245mm 19" x 1-3/4" x 9-11/16"
Weight	3.5 kg / 7 lb 12 oz	4.7 kg / 10 lb 6 oz	3.5 kg / 7 lb 12 oz
Accessory	Owner's Manual		

* This will light up 6 dB prior to the clipping level.

* In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.



This product complies with the requirements of European Directive 89/336/EEC.

For Europe

Information

When you need repair service, call your local Roland Service Station or the authorized Roland distributor in your country as shown below.

ARGENTINA

Instrumentos Musicales S.A.
Florida 638
(1005) Buenos Aires
ARGENTINA
TEL: (01) 394 4029

BRAZIL

Roland Brasil Ltda.
R. Coronel Octaviano da Silveira
203 (05522-010
Sao Paulo BRAZIL
TEL: (011) 843 9377

CANADA

Roland Canada Music Ltd.
(Head Office)
5480 Parkwood Way Richmond
B. C., V6V 2M4 CANADA
TEL: (604) 270 6626

Roland Canada Music Ltd.
(Toronto Office)
Unit 2, 109 Woodbine Downs
Bldg, Etobicoke, ON
M9W 6Y1 CANADA
TEL: (416) 213 9707

MEXICO

Casa Veerkamp, s.a. de c.v.
Av. Toluca No. 323 Col. Olivar de
los Padres 01780 Mexico D.F.
MEXICO
TEL: (525) 668 04 80

La Casa Wagner de
Guadalajara s.a. de c.v.
Av. Corona No. 202 S.J.
Guadalajara, Jalisco Mexico
C.P. 44100 MEXICO
TEL: (03) 613 1414

PANAMA

Productos Superiores, S.A.
Apartado 655 - Panama 1
REP. DE PANAMA
TEL: 26 3322

U. S. A.

Roland Corporation U.S.
7200 Dominion Circle
Los Angeles, CA. 90040-3696,
U. S. A.
TEL: (0213) 685 5141

VENEZUELA

Musiland Digital C.A.
Av. Francisco de Miranda,
Centro Parque de Cristal, Nivel
C2 Local 20 Caracas
VENEZUELA
TEL: (02) 285 9218

AUSTRALIA

Roland Corporation
Australia Pty. Ltd.
38 Campbell Avenue
Dee Why West. NSW 2099
AUSTRALIA
TEL: (02) 982 8266

NEW ZEALAND

Roland Corporation (NZ) Ltd.
97 Mt. Eden Road, Mt. Eden,
Auckland 3, NEW ZEALAND
TEL: (09) 3098 715

HONG KONG

Tom Lee Music Co., Ltd.
Service Division
22-32 Pun Shan Street, Tsuen
Wan, New Territories,
HONG KONG
TEL: 2415 0911

INDONESIA

PT CITRAMAMA
BELANTIKA
Kompleks Perkantoran Duta
Merlin Blok E No.6-7
Jl. Gajah Mada No.3-5, Jakarta
10130,
INDONESIA
TEL: (021) 3850073

KOREA

Cosmos Corporation
Service Station
261 2nd Floor Nak-Won Arcade
Jong-Ro ku, Seoul, KOREA
TEL: (02) 742 8844

MALAYSIA

Bentley Music SDN BHD
No.142, Jalan Bukit Bintang 55100
Kuala Lumpur, MALAYSIA
TEL: (03) 2443333

PHILIPPINES

G.A. Yupangco & Co. Inc.
339 Gil J. Puyat Avenue
Makati, Metro Manila 1200,
PHILIPPINES
TEL: (02) 899 9801

SINGAPORE

Swee Lee Company
BLOCK 231, Bain Street #03-23
Bras Basah Complex,
SINGAPORE 0718
TEL: 3367886

CRISTOFORI MUSIC PTE LTD

335, Joo Chiat Road SINGAPORE
1542
TEL: 3450435

TAIWAN

Siruba Enterprise (Taiwan)
Co., LTD.
Room. 5, 9th. No. 112 Chung Shan
N.Road Sec 2 Taipei, TAIWAN,
R.O.C.
TEL: (02) 561 3339

THAILAND

Theera Music Co., Ltd.
330 Veng Nakorn Kasem, Soi 2,
Bangkok 10100, THAILAND
TEL: (02) 2248821

BAHRAIN

Moon Stores
Bad Al Bahrain Road,
P.O.Box 20077
State of BAHRAIN
TEL: 211 005

IRAN

TARADIS
Mir Emad Ave. No. 15, 10th street
P. O. Box 15875/4171 Teheran,
IRAN
TEL: (021) 875 6524

ISRAEL

Haliit P. Greenspoon &
Sons Ltd.
8 Retzif Ha'aliya Hashnya St.
Tel-Aviv-Yafo ISRAEL
TEL: (03) 6823666

JORDAN

AMMAN Trading Agency
Prince Mohammed St. P. O. Box
825 Amman 11118 JORDAN
TEL: (06) 641200

KUWAIT

Easa Husain Al-Yousifi
P.O. Box 126 Safat 13002
KUWAIT
TEL: 5719499

LEBANON

A. Chahine & Fils
P.O. Box 16-5857 Gergi Zeidan St.
Chahine Building, Achrafieh
Beirut, LEBANON
TEL: (01) 335799

OMAN

OHI Electronics & Trading
Co. LLC
P. O. Box 889 Muscat
Sultanate of OMAN
TEL: 706 010

QATAR

Badie Studio & Stores
P.O.Box 62,
DOHA QATAR
TEL: 423554

SAUDI ARABIA

SAF Music Center
AL-Khobar 31952, P. O. Box 1366
SAUDIARABIA
TEL: (03) 898 3311

Abdul Latif S. Al-Ghamdi
Trading Establishment
Middle East Commercial Center
Al-Khobar Dharan Highway
W/hamood st.
P. O. Box 3631 Al-Khobar
31952 SAUDIARABIA
TEL: (03) 898 2332

SYRIA

Technical Light & Sound
Center
Khaled Ebn Al Walid St.
P.O.Box 13520
Damascus - SYRIA
TEL: (011) 2235 384

TURKEY

Barkat Sanayi ve Ticaret
Siraselvier Cad. Gunev Ishani No.
86/6 Taksim, Istanbul TURKEY
TEL: (0212) 2499324

U.A.E

Zak Electronics & Musical
Instruments Co.
Zabeel Road, Al Sherouq Bldg.,
No. 14, Grand Floor DUBAI
U.A.E.
P.O. Box 8050DUBAI, U.A.E
TEL: (04) 360715

EGYPT

Al Fanny Trading Office
9, Ebn Hagar Ai Askalany Street,
Ard El Golf, Heliopolis, Cairo,
11341 EGYPT
TEL: (02) 4171828
(02) 4185513

MAURITIUS

Philanne Music Center
4th, Floor Nell, Happy World
House Sir William Newton Street
Port Luis MAURITIUS
TEL: 242 2986

REUNION

FO - YAM Marcel
25 Rue Jules MermaZL
Chaudron - BP79 97491
Sie Clotilde REUNION
TEL: 28 29 16

SOUTH AFRICA

That Other Music Shop
(PTY) Ltd.
11 Melle Street (Cnr Melle and
Juta Street)
Braamfontein 2001
Republic of SOUTH AFRICA
TEL: (011) 403 4105

Paul Bothner (PTY) Ltd.
17 Werdmuller Centre Claremont
7700
Republic of SOUTH AFRICA
TEL: (021) 64 4030

AUSTRIA

E. Dematte & Co.
Neu-Rum Siemens-Strasse 4
A-6040 Innsbruck P.O.Box 83
AUSTRIA
TEL: (0512) 26 44 260

BELGIUM/HOLLAND/ LUXEMBOURG

Roland Benelux N. V.
Houtstraat 1 B-2260 Oevel-
Westerlo BELGIUM
TEL: (014) 575811

BELORUSSIA

TUSHE
UL. Mogilovskaja 4/4/ 145
220001 MINSK
TEL: (0172) 252-059

CYPRUS

Radex Sound Equipment Ltd.
17 Diagorou St., P.O.Box 2046,
Nicosia CYPRUS
TEL: (02) 453 426
(02) 466 423

DENMARK

Roland Scandinavia A/S
Langebrogade 6 Post Box 1937
DK-1023 Copenhagen K.
DENMARK
TEL: 32 95 3111

FRANCE

Guillard Musiques Roland
ZAC de Rosarge Les Echets 01700
MIRIBEL FRANCE
TEL: 7226 5060

Guillard Musiques Roland
(Paris Office)

1923 rue Léon Geoffroy 94400
VITRY-SUR-SEINE FRANCE
TEL: (1) 4680 86 62

FINLAND

Roland Scandinavia As,
Filial Finland
Lauttasaarentie 54 B
Fin-00201 Helsinki, FINLAND
P. O. Box No. 109
TEL: (0) 682 4020

GERMANY

Roland Elektronische
Musikinstrumente
Handelsgesellschaft mbH.
Oststrasse 96, 22844 Norderstedt,
GERMANY
TEL: (040) 52 60090

GREECE

V. Dimitriadis & Co. Ltd.
20, Alexandras St. & Bouboulinas
54 St. 106 82 Athens, GREECE
TEL: (01) 8232415

HUNGARY

Intermusica Ltd.
Warehouse Area 'DEPO' Pl.83
H-2046 Torokbalint, HUNGARY
TEL: (23) 338 041

IRELAND

The Dublin Service Centre
Audio Maintenance Limited
11 Brunswick Place Dublin 2
Republic of IRELAND
TEL: (01) 677322

ITALY

Roland Italy S. p. A.
Viale delle Industrie, 8
20020 Arese Milano, ITALY
TEL: (02) 93581311

NORWAY

Roland Scandinavia Avd.
Kontor Norge
Lilleakerveien 2 Postboks 95
Lilleaker N-0216 Oslo
NORWAY
TEL: 273 0074

POLAND

P. P. H. Brzostowicz Marian
UL. Blokowa 32, 03624 Warszawa
POLAND
TEL: (022) 679 44 19

PORTUGAL

Caius - Tecnologias Audio e
Musica, Lda.
Rue de Catarina 131
4000 Porto, PORTUGAL
TEL: (02) 38 4456

RUSSIA

PETROSHOP Ltd.
11 Sayanskaya Street Moscow
11531, RUSSIA
TEL: 095 901 0892

SPAIN

Roland Electronics
de España, S. A.
Calle Bolivia 239 08020 Barcelona,
SPAIN
TEL: (93) 308 1000

SWEDEN

Roland Scandinavia A/S
Danvik Center 28 A, 2 tr.
S-131 30 Nacka SWEDEN
TEL: (08) 702 0020

SWITZERLAND

Roland (Switzerland) AG
Musitronic AG
Gerberstrasse 5, CH-4410 Liestal,
SWITZERLAND
TEL: (061) 921 1615

UKRAINE

TIC-TAC
Mira Str. 19/108
P.O.Box 180
295400 Munkachevo, UKRAINE
TEL: (03131) 414-40

UNITED KINGDOM

Roland (U.K.) Ltd., Swansea
Office
Atlantic Close, Swansea
Enterprise Park SWANSEA
West Glamorgan SA7 9FJ,
UNITED KINGDOM
TEL: (01792) 702701

As of March, 11, 1996

Roland Corporation

 Roland®

SB000143

UPC

SB000143



.0901

 Roland®