

Roland®

FOOT CONTROLLER GFC-50

Owner's Manual


Thank you, and congratulations on your choice of the Roland GFC-50 FOOT CONTROLLER.

The GFC-50 is a foot controller that can control other MIDI instruments.

Before using this unit, carefully read the sections entitled: "USING THE UNIT SAFELY" and "IMPORTANT NOTES" (p. 2-3; p. 5). These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, Owner's manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.

Copyright © 2000 ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.

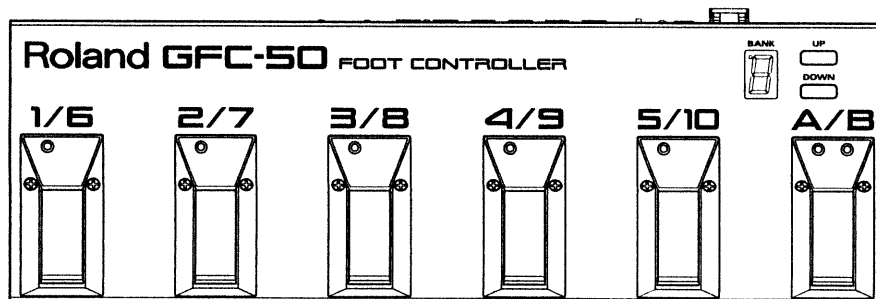




USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About ⚠ WARNING and ⚠ CAUTION Notices


⚠ WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
⚠ CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.


About the Symbols


	The ⚠ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The ⚡ symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The ● symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.



ALWAYS OBSERVE THE FOLLOWING


⚠ WARNING

- Before using this unit, make sure to read the instructions below, and the Owner's Manual. 



- Do not open (or modify in any way) the unit or its AC adaptor. 


- Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page. 



- Never use or store the unit in places that are:
 - Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are 
 - Damp (e.g., baths, washrooms, on wet floors); or are 
 - Humid; or are
 - Exposed to rain; or are
 - Dusty; or are
 - Subject to high levels of vibration.


- Make sure you always have the unit placed so it is level and sure to remain stable. Never place it on stands that could wobble, or on inclined surfaces. 

⚠ WARNING


- Be sure to use only the AC adaptor supplied with the unit. Also, make sure the line voltage at the installation matches the input voltage specified on the AC adaptor's body. Other AC adaptors may use a different polarity, or be designed for a different voltage, so their use could result in damage, malfunction, or electric shock. 



- Do not excessively twist or bend the power cord, nor place heavy objects on it. Doing so can damage the cord, producing severed elements and short circuits. Damaged cords are fire and shock hazards! 


- Do not allow any objects (e.g., flammable material, coins, pins); or liquids of any kind (water, soft drinks, etc.) to penetrate the unit. 



- Immediately turn the power off, remove the AC adaptor from the outlet, and request servicing by your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page when:
 - The AC adaptor or the power-supply cord has been damaged; or
 - Objects have fallen into, or liquid has been spilled onto the unit; or
 - The unit has been exposed to rain (or otherwise has become wet); or
 - The unit does not appear to operate normally or exhibits a marked change in performance.


WARNING

- In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the unit. 

- Protect the unit from strong impact. (Do not drop it!) 


- Do not force the unit's power-supply cord to share an outlet with an unreasonable number of other devices. Be especially careful when using extension cords—the total power used by all devices you have connected to the extension cord's outlet must never exceed the power rating (watts/amperes) for the extension cord. Excessive loads can cause the insulation on the cord to heat up and eventually melt through. 


- Before using the unit in a foreign country, consult with your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page. 


- Batteries must never be recharged, heated, taken apart, or thrown into fire or water. 




CAUTION


- The unit and the AC adaptor should be located so their location or position does not interfere with their proper ventilation. 


- Always grasp only the plug or the body of the AC adaptor when plugging into, or unplugging from, an outlet or this unit. 


- Whenever the unit is to remain unused for an extended period of time, disconnect the AC adaptor. 


- Try to prevent cords and cables from becoming entangled. Also, all cords and cables should be placed so they are out of the reach of children. 


CAUTION


- Never climb on top of, nor place heavy objects on the unit. 


- Never handle the AC adaptor body, or its plugs, with wet hands when plugging into, or unplugging from, an outlet or this unit. 


- Before moving the unit, disconnect the AC adaptor and all cords coming from external devices. 

- Before cleaning the unit, turn off the power and unplug the AC adaptor from the outlet (p. 7). 

- Whenever you suspect the possibility of lightning in your area, disconnect the AC adaptor from the outlet. 


- If used improperly, batteries may explode or leak and cause damage or injury. In the interest of safety, please read and observe the following precautions (p. 14). 


- Carefully follow the installation instructions for batteries, and make sure you observe the correct polarity. 

- Avoid using new batteries together with used ones. In addition, avoid mixing different types of batteries. 

- Remove the batteries whenever the unit is to remain unused for an extended period of time.

- If a battery has leaked, use a soft piece of cloth or paper towel to wipe all remnants of the discharge from the battery compartment. Then install new batteries. To avoid inflammation of the skin, make sure that none of the battery discharge gets onto your hands or skin. Exercise the utmost caution so that none of the discharge gets near your eyes. Immediately rinse the affected area with running water if any of the discharge has entered the eyes.

- Never keep batteries together with metallic objects such as ballpoint pens, necklaces, hairpins, etc. 

- Used batteries must be disposed of in compliance with whatever regulations for their safe disposal that may be observed in the region in which you live. 

FEATURES

- 6 sturdy pedals mounted on a solid baseboard.
- All Program Change information can be transmitted using only the pedals and buttons.
- The GFC-50 can accept connection of two external expression pedals and two foot switches. This allows you to control the connected MIDI instrument in real time with Control Change messages.
- The GFC-50 employs a two-way Battery/AC power supply.
- During battery operation the Economy Mode can be used to effectively extend battery life by about twice as long as usual. When the battery voltage is low, a warning indicator will appear.
- A Cord Hook is provided to prevent the unit from being disconnected accidentally during AC operation.

IMPORTANT NOTES

In addition to the items listed under “USING THE UNIT SAFELY” on page 2, please read and observe the following:

Power Supply: Use of Batteries

- Do not use this unit on the same power circuit with any device that will generate line noise (such as an electric motor or variable lighting system).
- The AC adaptor will begin to generate heat after long hours of consecutive use. This is normal, and is not a cause for concern.
- The use of an AC adaptor is recommended as the unit’s power consumption is relatively high. Should you prefer to use batteries, please use the alkaline type.
- When installing or replacing batteries, always turn off the power on this unit and disconnect any other devices you may have connected. This way, you can prevent malfunction and/or damage to speakers or other devices.
- Before connecting this unit to other devices, turn off the power to all units. This will help prevent malfunctions and/or damage to speakers or other devices.

Placement

- Using the unit near power amplifiers (or other equipment containing large power transformers) may induce hum. To alleviate the problem, change the orientation of this unit; or move it farther away from the source of interference.
- This device may interfere with radio and television reception. Do not use this device in the vicinity of such receivers.
- To avoid possible breakdown, do not use the unit in a wet area, such as an area exposed to rain or other moisture.

Maintenance


- For everyday cleaning wipe the unit with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.
- Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

Additional Precautions

- Use a reasonable amount of care when using the unit’s buttons, sliders, or other controls; and when using its jacks and connectors. Rough handling can lead to malfunctions.
- Never strike or apply strong pressure to the display.
- When connecting / disconnecting all cables, grasp the connector itself—never pull on the cable. This way you will avoid causing shorts, or damage to the cable’s internal elements.
- To avoid disturbing your neighbors, try to keep the unit’s volume at reasonable levels (especially when it is late at night).
- When you need to transport the unit, package it in the box (including padding) that it came in, if possible. Otherwise, you will need to use equivalent packaging materials.
- Use only the specified expression pedal (EV-5; sold separately). By connecting any other expression pedals, you risk causing malfunction and/or damage to the unit.


PANEL DESCRIPTIONS

Front Panel

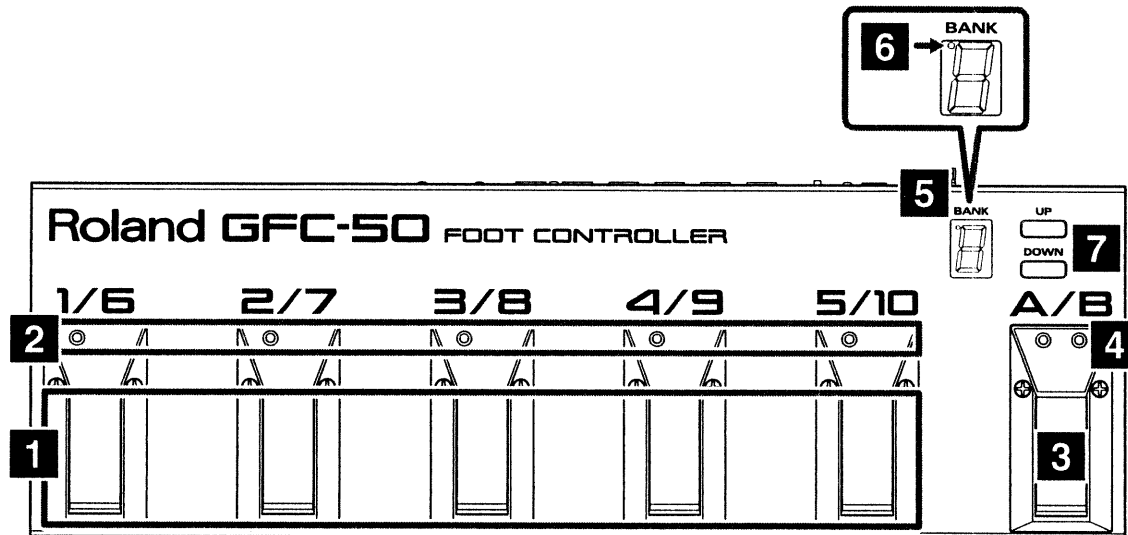


1. Number Pedals
2. Number Indicators
3. Number Shift Pedal
4. Number Shift Indicators (A/B)
5. BANK Display
6. Dot
7. Bank Shift Buttons (UP/DOWN)

Rear Panel

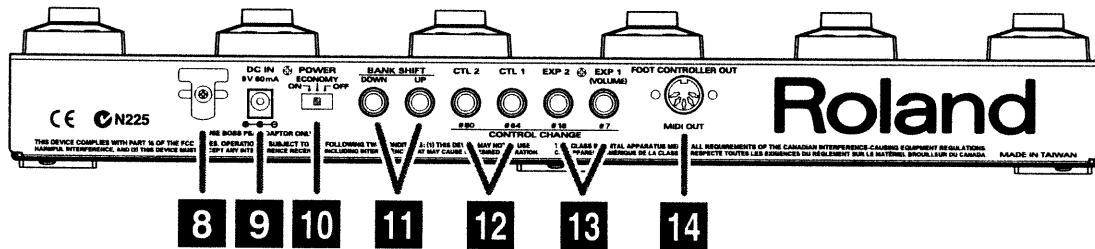

- 8.** Cord Hook
- 9.** AC Adaptor Jack
- 10.** POWER Switch
- 11.** BANK SHIFT Jacks (UP/DOWN) → p. 10
- 12.** CTL (Control Pedal) Jacks (1/2) → p. 12
- 13.** EXP (Expression Pedal) Jacks (1/2) → p. 12
- 14.** FOOT CONTROLLER OUT Connector

CONNECTIONS

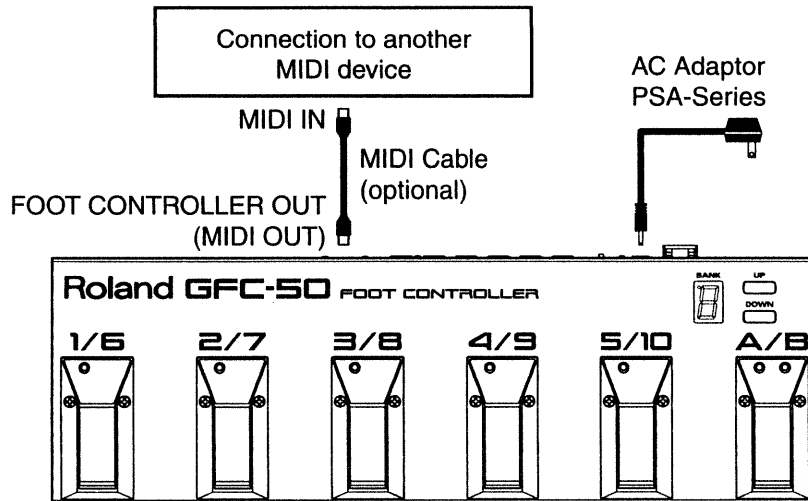


To prevent malfunction and/or damage to speakers or other devices, always turn down the volume, and turn off the power on all devices before making any connections.



If there are batteries in the unit while an AC adaptor is being used, normal operation will continue should the line voltage be interrupted (power blackout or power cord disconnection).



To prevent the inadvertent disruption of power to your unit (should the plug be pulled out accidentally), and to avoid applying undue stress to the AC adaptor jack, anchor the power cord using the cord hook, as shown in the illustration.

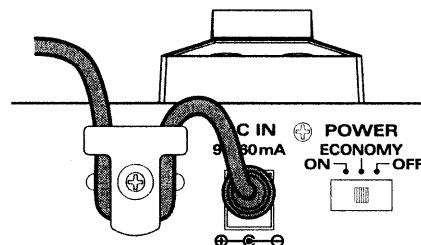

USE BOSS PSA ADAPTOR ONLY


THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING THAT OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING

POWER ON



Once the connections have been completed (p. 8), turn on power to your various devices in the order specified. By turning on devices in the wrong order, you risk causing malfunction and/or damage to speakers and other devices.

Ensure that all connections are correct and secure. Turn the GFC-50's Power switch to the ON or ECONOMY position. Turn on the other devices.

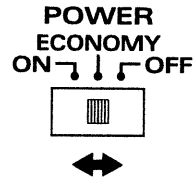

■ About the Economy Mode

When the GFC-50 is being operated with batteries, the Economy mode can be used to effectively extend battery life by about twice as long as usual.

The Bank Display may become somewhat dimmer and it may flicker a little, but this is not an indication of a problem.

* *The default MIDI channel of the GFC-50 is channel 1. Refer to "CHANGING MIDI CHANNEL" (p. 13) if you want to change the default setting.*

PROGRAM CHANGE NUMBERS

A Program Change number is selected using the "Bank" button and "Number" pedals. The Program Change message is transmitted the moment the Bank Shift button or Number pedal is pressed.

Changing Banks

Pressing a Bank Shift button (UP or DOWN) changes Bank numbers in sequence (0 to 12). The Bank Display shows the Bank Number currently selected.

Display	0	1	2	...	10	11	12
Banks	0	1	2	...	10	11	12


* When Bank 10, 11 or 12 is selected, the Dot in the upper left hand corner of the display will light.

Bank numbers 0 to 12 correspond to Program Change numbers as indicated in the following:

Banks	0	1	2	...	10	11	12
Program Change Number	0	10	20	...	100	110	120

You can change Bank numbers using a pedal by connecting a foot switch (BOSS FS-5U: optional) to the BANK SHIFT Jacks (UP/DOWN) on the rear of the GFC-50.

* When using the FS-5U, set the polarity switch as shown below.

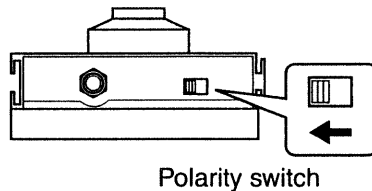

Changing Numbers

Using the Number Shift (A/B) Pedal and the Number Pedals, you can select numbers 1 to 10. Numbers 1 to 10 correspond to Program Change numbers 1 to 10 respectively. By selecting A or B with the Number Shift Pedal, you can select numbers 1 to 5 or 6 to 10 as shown below.

	1/6	2/7	3/8	4/9	5/10
A	1	2	3	4	5
B	6	7	8	9	10


With the Number Indicators and Number Shift Indicators, you can determine what number is currently set.

Setting a Program Change Number

Example 1:

Setting Program Change number 8.


$$0 \text{ (Bank: 0)} + 8 \text{ (Number)} = 8$$

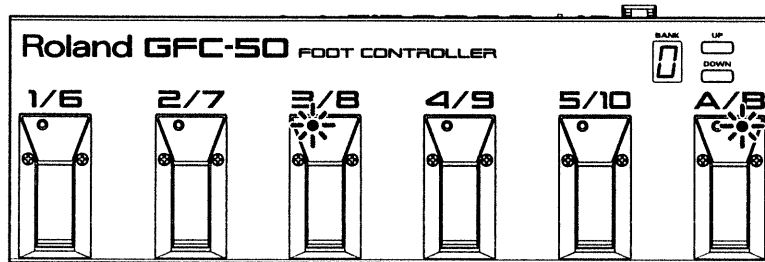

Example 2:

Setting Program Change number 12.


$$10 \text{ (Bank: 1)} + 2 \text{ (Number)} = 12$$

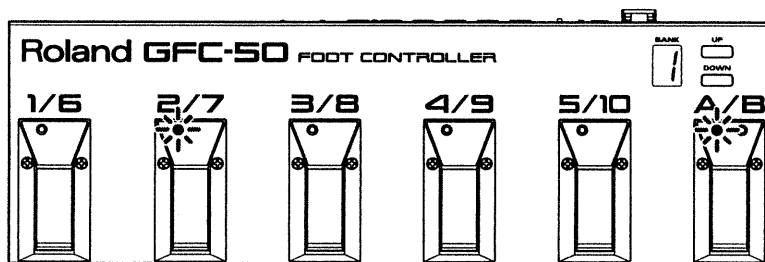

Example 3:

Setting Program Change number 120.

$$110 \text{ (Bank: 11)} + 10 \text{ (Number)} = 120$$

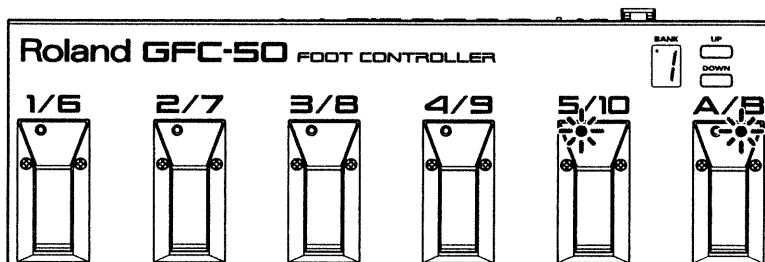

* The highest Program Change number is 128. Setting a number higher than 128 will cause the Pedal Indicators to flash, indicating that no Program Change message is being transmitted.

CONTROL CHANGE MESSAGES

The GFC-50 can accept connection of a maximum of two external expression pedals (Roland EV-5: optional) and two foot switches (BOSS FS-5L/FS-5U: optional). This allows you to control a connected MIDI instrument in real time with Control Change messages. The Control Change jacks on the rear of the GFC-50 correspond to the following Control Change numbers:

Expression Pedal

EXP 1: Volume (#7)


EXP 2: General Purpose Controller (#16)

Control Peal

CTL 1: Hold (#64)

CTL 2: General Purpose Controller (#80)

* “#” represents a Control Change number.

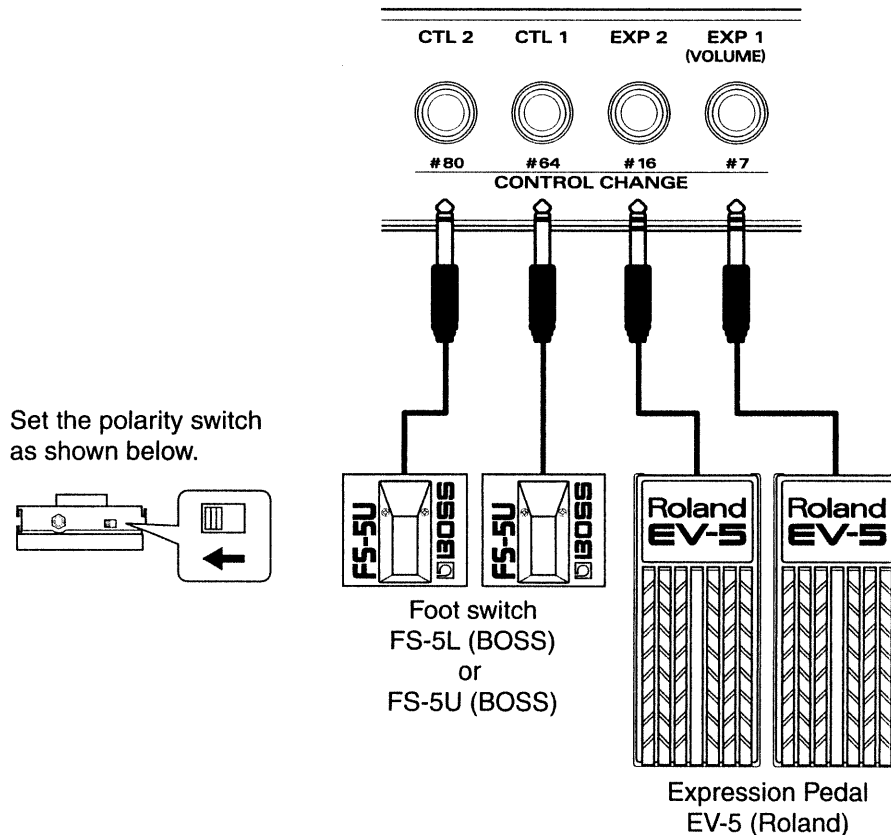

* Either a latch-type (FS-5L), or momentary-type (FS-5U) footswitch can be connected to each CTL Jack.

Latch Type: Pressing the pedal turns a connected unit (or function) ON or OFF.

Momentary Type: Only while the pedal is being pressed, the ON/OFF status can be changed.



Use only the specified expression pedal (EV-5; sold separately).

By connecting any other expression pedals, you risk causing malfunction and/or damage to the unit.

CHANGING MIDI CHANNEL

The GFC-50's default MIDI channel is channel 1. If you wish to change the default channel, follow this procedure:

- * *The MIDI channel you set will not be stored in memory. It will be necessary to set the MIDI channel each time the unit is turned on.*
- 1.** Switch on the unit while holding the Number Shift Pedal (A/B) down.
- 2.** Select the desired MIDI channel using the Bank Shift Buttons (UP/DOWN).
(The Bank Display shows the MIDI channel currently selected.)

Display	1	2	3	...	10	11	12	...	16
MIDI CHANNEL	1	2	3	...	10	11	12	...	16

- * *When any of MIDI channels 10 to 16 is selected, the Dot in the upper left hand corner of the display will light.*
- 3.** Press the Number Shift Pedal (A/B). (The MIDI channel has now been set.)

BATTERY REPLACEMENT


When to replace the batteries



When operating on battery power only, the unit's indicator will become flash when battery power gets too low. Replace the battery as soon as possible.

- * *Even if the unit is set to ON, it will automatically switch to the ECONOMY mode when the indicators begin to flash. The indicators will continue to flash until the batteries are replaced.*

How to replace batteries

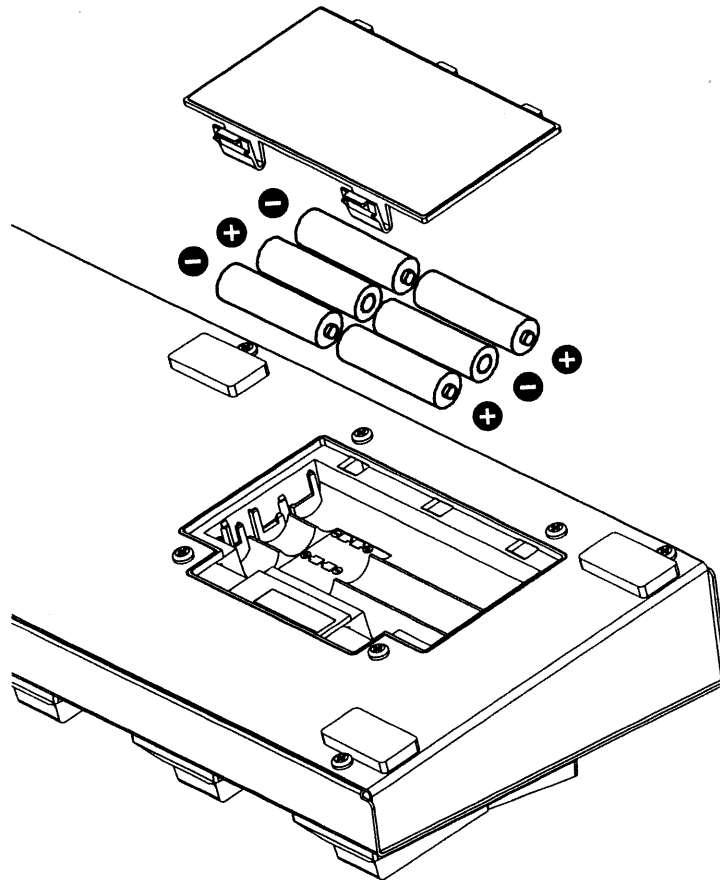

- * *Do not mix new batteries with used ones. Do not mix batteries of different types (e.g., carbon and alkaline).*
- * *Be sure to insert the batteries correctly (ensure correct polarity).*

MIDI IMPLEMENTATION

FOOT CONTROLLER

Model: GFC-50

Date: Oct. 1, 2000

Version: 1.00

1. TRANSMITTED DATA

●Control change

<u>Status</u>	<u>Second</u>	<u>Third</u>
BnH	ccH	vvH

n = MIDI channel number	0H - FH (ch.1 - ch.16)
cc = Control number	07H, 10H, 40H, 50H (7, 16, 64, 80)
vv = Control Value	00H - 7FH (Prog.1 - Prog.128)

This message can be transmitted when the external pedal is connected.

●Program change

<u>Status</u>	<u>Second</u>
CnH	ppH

n = MIDI channel number	0H - FH (ch.1 - ch.16)
pp = Program number	00H - 7FH (Prog.1 - Prog.128)

This message is transmitted when the patch of GFC-50 is changed.

FOOT CONTROLLER
Model GFC-50

Date : Oct. 1, 2000
Version : 1.00

MIDI Implementation Chart

Function...	Transmitted	Recognized	Remarks
Basic Channel	1 1-16	X X	
Mode	X X *****	X X	
Note Number :	X *****	X	
Velocity	X X	X X	
After Touch	X X	X X	
Pitch Bend	X	X	
Control	7 O EXP1 16 O EXP2 64 O CTL1 80 O CTL2	X X X X	Volume *1 General purpose controller *1 Hold *1 General purpose controller *1

Prog Change : True #	O 0-127			X		Program Change Number 1-128
System Exclusive	X			X		
System Common : Song Pos : Song Sel : Tune	X X X			X X X		
System Real Time : Clock : Command	X X			X X		
Aux Message : All sound off : Local ON/OFF : All Notes OFF : Active Sense : Reset	X X X X X			X X X X X		
Notes	* 1 Can be transmitted when the external pedal is connected.					

Mode 1 : OMNI ON, POLY Mode 2 : OMNI ON, MONO
Mode 3 : OMNI OFF, POLY Mode 4 : OMNI OFF, MONO

O : Yes
X : No

SPECIFICATIONS

GFC-50: Foot Controller

Controls

Pedal x 6
Bank Shift Buttons (UP/DOWN)
Power Switch

Display

Bank Display (7 segment)

Indicators

Number Indicators x 5
Number Shift Indicators (A/B)

Connectors

FOOT CONTROLLER OUT Connector
BANK SHIFT Jacks (UP/DOWN)
CTL (Control Pedal) Jacks (1/2)
EXP (Expression Pedal) Jacks (1/2)
AC Adaptor Jack

Power

DC 9V: AC Adaptor (PSA series)/
1.5V R6/LR6 (AA) type x 6 (optional)

Power Consumption (under normal conditions)

40 mA (in the "ON" mode)
28 mA (in the "ECONOMY" mode)

* **Expected battery life under continuous use:**

Carbon:

15 hours or greater (in the "ON" mode)
30 hours or greater
(in the "ECONOMY" mode)

Alkaline:

40 hours or greater (in the "ON" mode)
80 hours or greater
(in the "ECONOMY" mode)

These figures will vary depending on the actual conditions of use.

Dimensions

423 (W) x 135 (D) x 40 (H) mm
16-11/16 (W) x 5-3/8 (D) x 1-5/8 (H) inches

Weight

1.6 kg/3 lbs 9 oz (excluding AC adaptor)

Accessories

Owner's Manual
AC Adaptor (PSA series)

Options

Foot Switch:
FS-5U (BOSS)
FS-5L (BOSS)
Expression Pedal:
EV-5 (Roland)



In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.



This product complies with the requirements of European Directive 89/336/EEC.

For EU Countries

FEDERAL COMMUNICATIONS COMMISSION RADIO FREQUENCY INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Unauthorized changes or modification to this system can void the users authority to operate this equipment.
This equipment requires shielded interface cables in order to meet FCC class B Limit.

For the USA

NOTICE

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

AVIS

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

For Canada

Information

When you need repair service, call your nearest Roland Service Center or authorized Roland distributor in your country as shown below.

AFRICA

EGYPT

Al Fanny Trading Office
P.O. Box 2904,
El Horrieh Heliopolis, Cairo,
EGYPT
TEL: (02) 4185531

REUNION

Maison FO - YAM Marce!
25 Rue Jules Merman, ZI
Chaudron - BP79 97491
Ste Clotilde REUNION
TEL: 28 29 16

SOUTH AFRICA

That Other Music Shop
(PTY) Ltd.
11 Melle Street (Cnr Melle and
Juta Street)
Braamfontein, 2001,
Republic of SOUTH AFRICA
TEL: (011) 403 4105

Paul Bothner (PTY) Ltd.
17 Werdmuller Centre Claremont
7700
Republic of SOUTH AFRICA

P.O. Box 23032
Claremont, Cape Town
SOUTH AFRICA, 7735
TEL: (021) 64 4030

ASIA

CHINA

Beijing Xinghai Musical
Instruments Co., Ltd.
6 Huangmunchang Chao Yang
District, Beijing, CHINA
TEL: (010) 6774 7491

HONG KONG

Tom Lee Music Co., Ltd.
Service Division
22-32 Pun Shan Street, Tsuen
Wan, New Territories,
HONG KONG
TEL: 2415 0911

INDIA

Rivera Digitec (India) Pvt. Ltd.
409, Nirman Kendra Mahalaxmi
Flats Compound Off. Dr. Edwin
Moses Road, Mumbai-400011,
INDIA
TEL: (022) 498 3079

INDONESIA

PT Citra IntiRama
Jl. Cideng Timur No. 15J-150
Jakarta Pusat
INDONESIA
TEL: (021) 6324170

KOREA

Cosmos Corporation
1461-9, Seocho-Dong,
Seocho Ku, Seoul, KOREA
TEL: (02) 3486-8855

MALAYSIA

Bentley Music SDN BHD
140 & 142, Jalan Bukit Bintang
55100 Kuala Lumpur, MALAYSIA
TEL: (03) 2443333

PHILIPPINES

G.A. Yupangco & Co. Inc.
339 Gil J. Puyat Avenue
Makati, Metro Manila 1200,
PHILIPPINES
TEL: (02) 899 9801

SINGAPORE

Swee Lee Company
150 Sims Drive,
SINGAPORE 387381
TEL: 748-1669

CRISTOFORI MUSIC PTE
LTD
Blk 3014, Bedok Industrial Park E,
#02-2148, SINGAPORE 489980
TEL: 243 9555

TAIWAN

ROLAND TAIWAN
ENTERPRISE CO., LTD.
Room 5, 9fl. No. 112 Chung Shan
N.Road Sec.2, Taipei, TAIWAN,
R.O.C.
TEL: (02) 2561 3339

THAILAND

Theera Music Co., Ltd.
330 Veng NakornKasem, Soi 2,
Bangkok 10100, THAILAND
TEL: (02) 2248821

VIETNAM

Saigon Music
138 Tran Quang Khai St.,
District 1
Ho Chi Minh City
VIETNAM
TEL: (08) 844-4068

AUSTRALIA/ NEW ZEALAND

AUSTRALIA

Roland Corporation
Australia Pty., Ltd.
38 Campbell Avenue
Dee Why West, NSW 2099
AUSTRALIA
TEL: (02) 9982 8266

NEW ZEALAND

Roland Corporation (NZ) Ltd.
97 Mt. Eden Road, Mt. Eden,
Auckland 3, NEW ZEALAND
TEL: (09) 3098 715

CENTRAL/LATIN AMERICA

ARGENTINA

Instrumentos Musicales S.A.
Florida 656 2nd Floor
Office Number 206A
Buenos Aires
ARGENTINA, CP1005
TEL: (54-11) 4- 393-6057

BRAZIL

Roland Brasil Ltda.
R. Coronel Octaviano da Silveira
203 05522-010
Sao Paulo BRAZIL
TEL: (011) 3743 9377

COSTA RICA

JUAN Bansbach
Instrumentos Musicales
Ave.1. Calle 11, Apartado 10237,
San Jose, COSTA RICA
TEL: (506)258-0211

CHILE

Comercial Fancy S.A.
Avenida Rancagua #0330
Providencia Santiago, CHILE
TEL: 56-2-373-9100

EL SALVADOR

OMNI MUSIC
75 Avenida Notre YY Alameda,
Juan Pablo 2, No. 4010
San Salvador, EL SALVADOR
TEL: (503) 262-0788

MEXICO

Casa Veerkamp, s.a. de c.v.
Av. Toluca No. 323, Col. Olivar
de los Padres 01780 Mexico D.F.
MEXICO
TEL: (525) 668 04 80

La Casa Wagner de
Guadalajara s.a. de c.v.
Av. Corona No. 202 S.J.
Guadalajara, Jalisco Mexico
C.P.44100 MEXICO
TEL: (3) 613 1414

PANAMA

SUPRO MUNDIAL, S.A.
Boulevard Andrews, Albrook,
Panama City,
REP. DE PANAMA
TEL: (507) 315-0101

PARAGUAY

Distribuidora De
Instrumentos Musicales
J.E. Clear y ESQ. Manduvira
Edificio, El Dorado Planta Baja
Asuncion PARAGUAY
TEL: 595-21-492147

PERU

VIDEO Broadcast S.A.
Portinari 199 (ESQ. HALS),
San Borja, Lima 41,
REP. OF PERU
TEL: 51-14-758226

URUGUAY

Todo Musica S.A.
Cuareim 1844, Montevideo,
URUGUAY
TEL: 5982-924-2335

VENEZUELA

Musicaland Digital C.A.
Av. Francisco de Miranda,
Centro Parque de Cristal, Nivel
C2 Local 20 Caracas
VENEZUELA
TEL: (02) 285 9218

EUROPE

AUSTRIA

Roland Austria GES.M.B.H.
Siemensstrasse 4, P.O. Box 74,
A-6063 RUM, AUSTRIA
TEL: (0512) 26 44 260

BELGIUM/HOLLAND/ LUXEMBOURG

Roland Benelux N. V.
Houtstraat 3, B-2260, Oevel
(Westerlo) BELGIUM
TEL: (014) 575811

DENMARK

Roland Scandinavia A/S
Nordhavnsvej 7, Postbox 880,
DK-2100 Copenhagen
DENMARK
TEL: (039)16 6200

FRANCE

Roland France SA
4, Rue Paul Henri SPAAK,
Parc de l'Esplanade, F 77 462 St.
Thibault, Lagny Cedex FRANCE
TEL: 01 600 73 500

FINLAND

Roland Scandinavia As,
Fijial Finland
Lautasaarentie 54 B
Fin-00201 Helsinki, FINLAND
TEL: (9) 682 4020

GERMANY

Roland Elektronische
Musikinstrumente HmbH.
Obstrasse 96, 22844 Norderstedt,
GERMANY
TEL: (040) 52 60090

GREECE

STOLLAS S.A.
Music Sound Light
155, New National Road
26422 Patras, GREECE
TEL: 061-435400

HUNGARY

Intermusica Ltd.
Warehouse Area 'DEPO' Pf.83
H-2046 Torokbalint, HUNGARY
TEL: (23) 511011

IRELAND

Roland Ireland
Audio House, Belmont Court,
Donnybrook, Dublin 4,
Republic of IRELAND
TEL: (01) 2603501

ITALY

Roland Italy S. p. A.
Viale delle Industrie 8,
20020 Arese, Milano, ITALY
TEL: (02) 937-78300

NORWAY

Roland Scandinavia Avd.
Kontor Norge
Lilleakerveien 2 Postboks 95
Lilleaker N-0216 Oslo
NORWAY
TEL: 273 0074

POLAND

P. F. H. Brzostowicz
UL. Gibraltarska 4,
PL-03664 Warszawa POLAND
TEL: (022) 679 44 19

PORTUGAL

Tecnologias Musica e Audio,
Roland Portugal, S.A.
RUA DE SANTA CARARINA
131/133, 4000-450 PORTO
PORTUGAL
TEL: (022) 208 4456

ROMANIA

FBS LINES
Plata Libertatii 1,
RO-4200 Cheorgheni
TEL: (066) 164-609

RUSSIA

Slami Music Company
Sadojava-Triumfalnaja st., 16
103006 Moscow, RUSSIA
TEL: 095 209 2193

SPAIN

Roland Electronics
de España, S. A.
Calle Bolivia 239, 08020
Barcelona, SPAIN
TEL: (93) 308 1000

SWEDEN

Roland Scandinavia A/S
SWEDISH SALES OFFICE
Danvik Center 28, 2 tr.
S-131 30 Nacka SWEDEN
TEL: (08) 702 0020

SWITZERLAND

Roland (Switzerland) AG
Musitronic AG
Gerberstrasse 5, CH-4410 Liestal,
SWITZERLAND
TEL: (061) 921 1615

UKRAINE

TIC-TAC
Mira Str. 19/108
P.O. Box 180
295400 Munkachevo, UKRAINE
TEL: (03131) 414-40

UNITED KINGDOM

Roland (U.K.) Ltd.
Atlantic Close, Swansea
Enterprise Park, SWANSEA
SA7 9FJ,
UNITED KINGDOM
TEL: (01792) 700139

MIDDLE EAST

BAHRAIN

Moon Stores
Bab Al Bahrain Road,
P.O. Box 20077
State of BAHRAIN
TEL: 211 005

CYPRUS

Radex Sound Equipment Ltd.
17 Diagorou St., P.O. Box 2046,
Nicosia CYPRUS
TEL: (02) 453 426

ISRAEL

Haliit P. Greenspoon &
Sons Ltd.
8 Retzif Fa'aliya Hashnya St.
Tel-Aviv-Yaho ISRAEL
TEL: (03) 6823666

JORDAN

AMMAN Trading Agency
Prince Mohammed St. P.O. Box
825 Amman 11118 JORDAN
TEL: (06) 4641200

KUWAIT

Easa Husain Al-Yousifi
Abdullah Salem Street,
Safat KUWAIT
TEL: 5719499

LEBANON

A. Chahine & Fils
P.O. Box 16-5857 Gergi Zeidan St.
Chahine Building, Achrafieh
Beirut, LEBANON
TEL: (01) 335799

QATAR

Badie Studio & Stores
P.O. Box 62,
DOHA QATAR
TEL: 423554

SAUDI ARABIA

aDawlah Universal
Electronics APL
P.O. Box 2154 ALKHOBAR 31952,
SAUDI ARABIA
TEL: (03) 898 2081

SYRIA

Technical Light & Sound
Center
Khaled Ibn Al Walid St.
P.O. Box 13520
Damascus - SYRIA
TEL: (011) 2235 384

TURKEY

Barkat muzik aletleri ithalat
ve ihracat Ltd Sti
Siraselviler cad.Gurey is hani 84-
86/6, Taksim. Istanbul. TURKEY
TEL: (0212) 2499324

U.A.E.

Zak Electronics & Musical
Instruments Co. L.L.C.
Zabeed Road, Al Sherouq Bldg.,
No. 14, Grand Floor DUBAI
U.A.E.
TEL: (04) 3360715

NORTH AMERICA

CANADA

Roland Canada Music Ltd.
(Head Office)
5480 Parkwood Way Richmond
B. C., V6V 2M4 CANADA
TEL: (604) 270 6626

Roland Canada Music Ltd.

(Toronto Office)
Unit 2, 109 Woodbine Downs
Blvd, Etobicoke, ON
M9W 6Y1 CANADA
TEL: (0416) 213 9707

U. S. A.

Roland Corporation U.S.
5100 S. Eastern Avenue
Los Angeles, CA 90040-2938,
U. S. A.
TEL: (323) 890 3700

As of June 1, 2000 (Roland)

 Roland®

G6017289

UPC

G6017289



12981

Roland