

# Tone List (Expansion Mode)

## A Group

Piano	Chromatic Perc	Organ	Guitar	Bass	Strings / Orchestra	Ensemble	Brass
11 Piano 1	21 Celesta	31 Organ 1	41 Nylon-str. Gt.	51 Wood Bass	61 Violin	71 Strings (B-1)	81 Trumpet
12 Piano 2	22 Glockenspiel	32 Organ 2	42 Steel-str. Gt.	52 Fingered Bs.	62 Viola	72 Slow Strings	82 Trombone
13 Piano 3	23 Music Box	33 Organ 3	43 E.Guitar (B-7)	53 Picked Bs.	63 Cello	73 Syn. Strings 1	83 Tuba
14 Honky-Tonk	24 Vibraphone	34 Pipe Organ (A-8)	44 Clean Gt.	54 Fretless Bs.	64 Contrabass	74 Syn. Strings 2	84 Muted Trumpet
15 E. Piano 1	25 Marimba	35 Reed Organ	45 Muted Gt.	55 Slap Bass 1	65 Tremolo Str.	75 Choir Aahs	85 French Horn
16 E. Piano 2	26 Xylophone	36 Accordion Fr	46 Overdrive Gt.	56 Slap Bass 2	66 Pizzicato Str.	76 Voice Oohs	86 Brass 1
17 Harpsichord	27 Tubular-Bell	37 Harmonica	47 Distortion Gt.	57 Synth Bass 1	67 Harp	77 SynVox	87 Synth Brass 1
18 Clav.	28 Santur	38 Bandneon	48 Gt. Harmonics	58 Synth Bass 2	68 Timpani	78 Orchestra Hit	88 Synth Brass 2

## B Group

Reed	Pipe	Synth Lead	Synth Pad	Synth SFX	Ethnic	Percussive	SFX
11 Soprano Sax	21 Piccolo	31 Square Wave	41 Fantasia (B-8)	51 Ice Rain	61 Sitar	71 Tinkle Bell	81 Gt. Fret Noise
12 Sax (B-4)	22 Flute (B-5)	32 Saw Wave	42 Warm Pad	52 Soundtrack	62 Banjo	72 Agogo	82 Breath Noise
13 Tenor Sax	23 Recorder	33 Syn. Calliope	43 Polysynth	53 Crystal	63 Shamisen	73 Steel Drums	83 Seashore
14 Baritone Sax	24 Pan Flute	34 Chiffer Lead	44 Space Voice	54 Atmosphere	64 Koto	74 Woodblock	84 Bird
15 Oboe	25 Bottle Blow	35 Charang	45 Bowed Glass	55 Brightness	65 Kalimba	75 Taiko	85 Telephone 1
16 English Horn	26 Shakuhachi	36 Solo Vox	46 Metal Pad	56 Goblin	66 Bag Pipe	76 Melo. Tom 1	86 Helicopter
17 Bassoon	27 Whistle	37 5th Saw Wave	47 Halo Pad	57 Echo Drops	67 Fiddle	77 Synth Drum	87 Applause
18 Clarinet	28 Ocarina	38 Bass & Lead	48 Sweep Pad	58 Star Theme	68 Shanai	78 Reverse Cym.	88 Gun Shot

\* Tone numbers in this column are found in the Tone Standard mode.

※ ( ) 内は通常時のトーン・ナンバーです。

## Music Style List (Expansion Mode)

<b>11</b> Rock	<b>21</b> 8 Beat 1 (B-2)	<b>31</b> Boogie	<b>41</b> Slow Swing 1	<b>51</b> Bossa Nova	<b>61</b> Country Waltz	<b>71</b> Pasodoble	<b>81</b> Pop 1
<b>12</b> Rock 2	<b>22</b> 8 Beat 2	<b>32</b> Rock'n'roll	<b>42</b> Slow Swing 2	<b>52</b> Samba	<b>62</b> Waltz	<b>72</b> Kars	<b>82</b> Pop 2
<b>13</b> Rap	<b>23</b> 8 Beat 3	<b>33</b> Twist	<b>43</b> Swing	<b>53</b> Latin	<b>63</b> March	<b>73</b> Anadolu	<b>83</b> Pop 3
<b>14</b> House	<b>24</b> 8 Beat 4	<b>34</b> R&B	<b>44</b> Foxtrot	<b>54</b> Salsa	<b>64</b> Polka	<b>74</b> Arab	<b>84</b> Pop 4 (B-1)
<b>15</b> Dance (A-6)	<b>25</b> 16 Beat (B-3)	<b>35</b> Country Ballad	<b>45</b> Big Band	<b>55</b> ChaCha	<b>65</b> Baroque	<b>75</b> Malfouf	<b>85</b> Pop 5
<b>16</b> Funk (A-7)	<b>26</b> 16 Beat 2	<b>36</b> Slow Rock 2	<b>46</b> Shuffle	<b>56</b> Rhumba (B-6)	<b>66</b> Country	<b>76</b> Keroncong	<b>86</b> Pop 6
<b>17</b> Funk 2	<b>27</b> 16 Beat 3	<b>37</b> Ballad 1	<b>47</b> Swing Waltz	<b>57</b> Mambo	<b>67</b> Beguine	<b>77</b> Trot	<b>87</b> Rock'n'roll 2
<b>18</b> Fusion	<b>28</b> 16 Beat 4	<b>38</b> Ballad 2	<b>48</b> Dixieland	<b>58</b> Tango	<b>68</b> Reggae	<b>78</b> Enka	<b>88</b> Jazz Waltz

\* Music Style numbers in this column are found in the Music Style Standard mode.

\* The Original accompaniment of Music Style 84 "Pop 4 (B-1)" does not contain percussion sounds.

※ ( )内は通常時でのミュージック・スタイル・ナンバーです。

※ 84「Pop 4 (B-1)」のオリジナルにはドラム演奏が入っていません。



**00233089**

**Roland**

UPC 00233089



18981