



Thank you and congratulations on your choice of the PDS-2. The PDS-2 is a special practice stand for the RP-2, which allows you to play the pad either sitting or standing, since the height and angle is readily adjustable.

このたびは、ローランド・パッド・スタンド PDS-2 をお買い上げいただき、まことにありがとうございます。
PDS-2 は、立っても座っても演奏できるよう、高さ / 角度の調整が可能な RP-2 専用のスタンドです。

Functions / 各部の機能

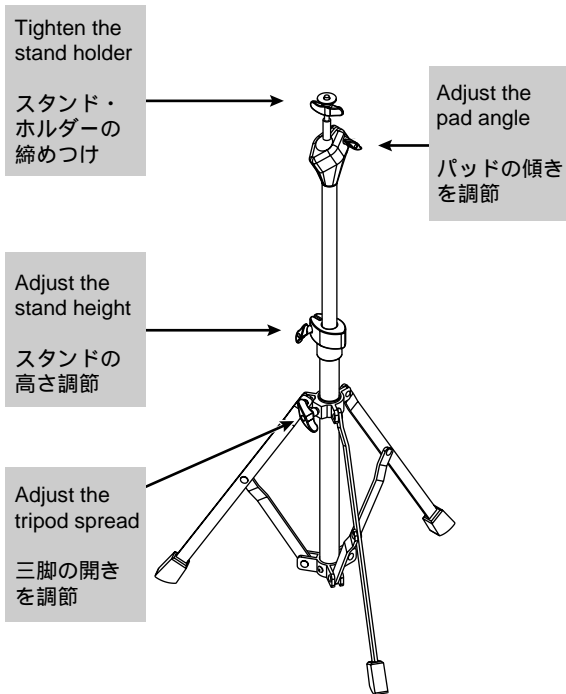


Setup / セッティングのしかた

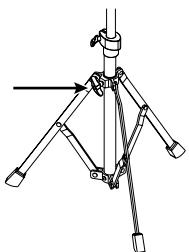

1. First open the tripod and set the spread of the tripod appropriately.

1. 適度に脚を開いて、三脚の開き具合を設定します。

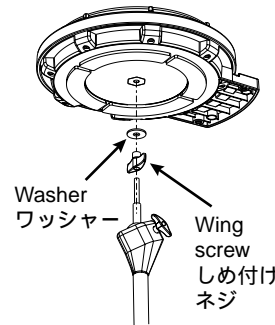

2. Attach the wing screw and washer in the order shown in the figure



When shipped from the factory, the order of the wing screw and washer was the reverse of that shown here. Be sure to attach them in the order shown in the illustration at left.

3. Attach the pad.

Turn the pad until the screw is just about all the way in; then stop, and tighten the wing screw from underneath the stand.



Do not forcefully try to turn the pad after the screw is already all the way in. Doing so may damage the stand's screw.

2. 締め付けネジとワッシャーの順番を、図のようにセットします。




工場出荷時、締め付けネジとワッシャーの順番は逆になっています。必ず、左図の順番で取り付けてください。

3. パッドを取り付けます。

パッドを回転させながら、ネジが軽く奥までしまったら、スタンド下から締め付けネジをしめてください。



ネジが奥まで締まった状態で、さらに力を加えてパッドを回転させないでください。スタンドのネジ部が破損する場合があります。

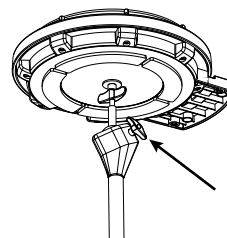

4. Adjust the angle of the pad.
4. パッドの傾きを調整します。

Copyright © 2002 ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.



In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.



© 2002 ローランド 本書の一部、もしくは全部を無断で複写・転載することを禁じます。
製品の仕様および外観は、改良のため予告なく変更することがあります。

Before using this unit, carefully read the sections entitled: "USING THE UNIT SAFELY" and "IMPORTANT NOTES". These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, Owner's manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.


 

 

 
USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About  WARNING and  CAUTION Notices


 WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
 CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.


About the Symbols


	The  symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The  symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The  symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.



----- ALWAYS OBSERVE THE FOLLOWING -----


WARNING


- Before using this unit, make sure to read the instructions below, and the Owner's Manual. 


- Do not open or perform any internal modifications on the unit. 


- Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page. 

- Never use or store the unit in places that are:
 - Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are 
 - Damp (e.g., baths, washrooms, on wet floors); or are 
 - Humid; or are
 - Exposed to rain; or are
 - Dusty; or are
 - Subject to high levels of vibration.


- Make sure you always have the unit placed so it is level and sure to remain stable. Never place it on stands that could wobble, or on inclined surfaces. 


- In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the unit. 


- To prevent accidents, never allow small children to play near the stand. 


- Protect the unit from strong impact. (Do not drop it!) 

CAUTION

- Never climb on top of, nor place heavy objects on the unit. 

- Should you remove screws, make sure to put them in a safe place out of children's reach, so there is no chance of them being swallowed accidentally. 

- Make sure to firmly tighten all wing screws and bolts after you have assembled the stand and attached a pad or unit to it. You should probably also try to make a habit of checking and retightening them if necessary before every performance. You risk injury if you have loose screws or clamps, since a pad or unit can fall unexpectedly. 

- When setting up or storing the tripod stand, be careful not to pinch the fingers you use to handle the stand. 

IMPORTANT NOTES

In addition to the items listed under "USING THE UNIT SAFELY" on this page, please read and observe the following:

Maintenance

- For everyday cleaning wipe the unit with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.