


Functions

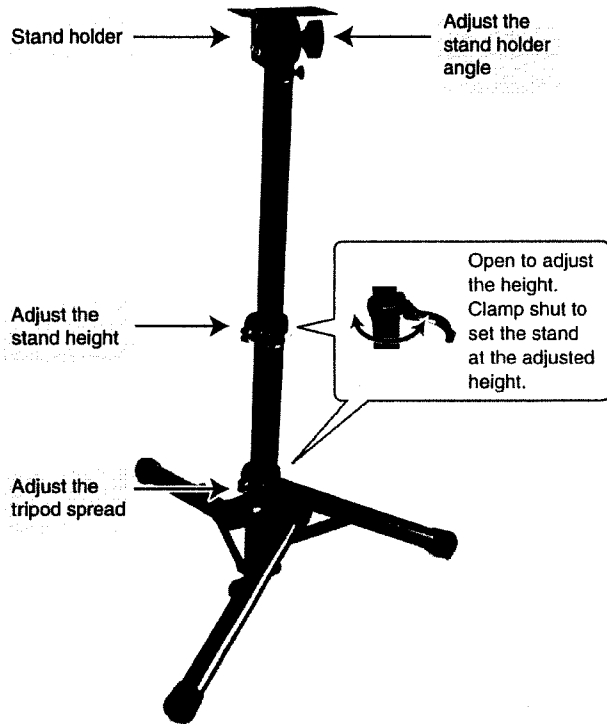


- Fully open the tripod to stabilize the stand.
- Use the screws included with the PDS-25 when attaching the PAD-8, PAD-80, or HPD-15 to the PDS-25's stand holder.
For the PM-16, TMC-6, SPD-6, SPD-8, SPD-11, SPD-20, TD-5, TD-6, TD-7, TD-8 and TD-10, please use the bolts included with the particular unit.

Length of Screws for Each Product



Screws	M4 x 8 mm	M5 x 8 mm	M5 x 12 mm	M5 x 20 mm	M5 x 35 mm
Products	PM-16	TD-5 / 7	TD-6 / 8 / 10	SPD-6	PAD-8 / 80
			SPD-8 / 11 / 20		HPD-15
			TMC-6		

Accessories

 
4 mm hexagonal wrench



Cable tie

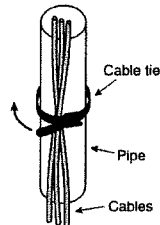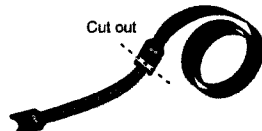


Bolts (M5 x 35 mm)

 


Setting Up the Stand

1. Spread out the tripod legs. Secure the legs in the fully opened position.

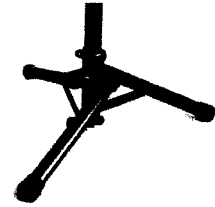


Attaching the Percussion Pad


1. Disengage the stand holder.

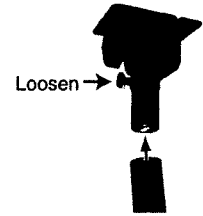

2. Attach the stand holder to the percussion pad.

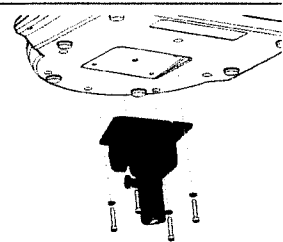

3. Attach the assembly from Step 2 to the stand.

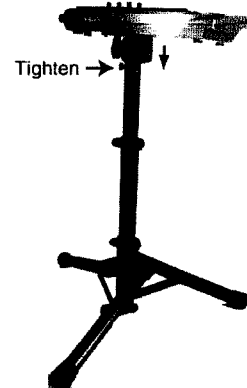



* In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.

Before using this unit, carefully read the sections entitled: "USING THE UNIT SAFELY" and "IMPORTANT NOTES." These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, Owner's manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.







USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About  WARNING and  CAUTION Notices


 WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
 CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.


About the Symbols



	The  symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The  symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The  symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.


----- ALWAYS OBSERVE THE FOLLOWING -----


WARNING


- Before using this unit, make sure to read the instructions below, and the Owner's Manual. 

- Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page. 


- Never use or store the unit in places that are:
 - Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are 
 - Damp (e.g., baths, washrooms, on wet floors); or are 
 - Humid; or are
 - Exposed to rain; or are
 - Dusty; or are
 - Subject to high levels of vibration.


- Make sure you always have the unit placed so it is level and sure to remain stable. Never place it on stands that could wobble, or on inclined surfaces. 


- In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the unit. 


- To prevent accidents, never allow small children to play near the stand. 


CAUTION

- This stand intended for use only with the following pads or drum modules; PAD-8, PAD-80, HPD-15, PM-16, SPD-6, SPD-8, SPD-11, SPD-20, TD-5, TD-6, TD-8 and TD-10. Use with other apparatus is capable of resulting in instability causing possible injury. 

- Never climb on top of, nor place heavy objects on the unit. 

- Make sure to firmly tighten all bolts and bolts after you have assembled the stand and attached a pad or unit to it. You should probably also try to make a habit of checking and retightening them if necessary before every performance. You risk injury if you have loose screws or clamps, since a pad or unit can fall unexpectedly. 

- When setting up or storing the tripod stand, be careful not to pinch the fingers you use to handle the stand. 

- Should you remove the bolts included or screws, make sure to put them in a safe place out of children's reach, so there is no chance of them being swallowed accidentally. 

IMPORTANT NOTES

In addition to the items listed under "USING THE UNIT SAFELY," please read and observe the following:

Maintenance

- For everyday cleaning wipe the unit with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.
- Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

 Roland®

11331

UPC

11331



18991

Roland