

XP PRODUCT UPDATE

Program Presets

There are 24 factory presets occupying program locations 1 through 24. These presets can be edited and overwritten using edit and record procedures described in this manual. There are two preset recall features enabling you to restore all factory program presets or one factory program preset.

TO RESTORE ALL FACTORY PROGRAM PRESETS

While depressing both EQ UP and DOWN buttons, turn power switch to the ON position. The unit will power-up at program number 1 with program numbers 1 through 24 restored to the factory presets. Programs 25 through 99 and 00 will be unaltered.

TO RESTORE ONE FACTORY PROGRAM PRESET

1. With unit connected to power and power switch in the ON position, select the desired program number (using the program UP/DOWN buttons) to be restored to the factory preset.
2. Turn power switch to the OFF position.
3. While depressing both PROGRAM UP and DOWN buttons, turn power switch to the ON position. The unit will power-up at the previously selected program number with its memory restored to the factory preset. All other program memory locations will be unaltered.

NOTE: Restoring one factory program preset will restore any program location to its factory preset. Locations 25 through 99 and location 00 are set at the factory to the same clean sound and "flat" EQ settings. User presets can be "built up" easily from there by adding more distortion, EQ and effects.