

MINI

— switch

USER MANUAL

strymon[®]

Table of Contents

Connect to Your Strymon Pedal	3
BigSky	5
Brigadier	6
Deco	7
DIG	8
El Capistan	9
Flint	10
Lex	11
Mobius	12
Riverside	13
TimeLine	14
Specifications & Warranty	15

Connect to Your Strymon Pedal

Connect MiniSwitch to the expression or boost jack of your Strymon pedal with the included TRS cable.




Connect to Your Strymon Pedal (cont.)

Operation & Set-up for Products with Toggle Switches

With MiniSwitch, you can place your pedal anywhere on your board and tap in your tempos remotely. Perfect for large rigs or boards with pedals fighting for real estate.


Remove the back cover of your pedal to gain access to the internal jumper switch. Select either FAV / BOOST MODE or TAP TEMPO mode.

*Close up view of circuit boards.

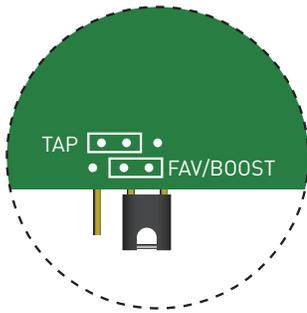

FAV / BOOST MODE

Place the jumper on the RIGHT 2 pins. (this is how MiniSwitch ships from the factory).

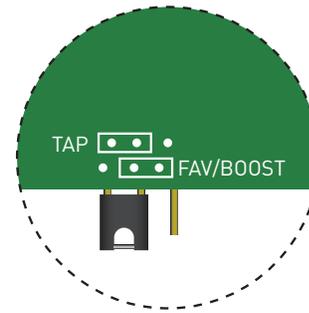

TAP TEMPO MODE

Place the jumper on the LEFT 2 pins.
Products that support TAP TEMPO MODE:

BigSky

TAP TEMPO MODE SETUP

- 1 Press and hold the VALUE knob for 2 seconds to access the Globals menu.



- 2 Turn until the display reads EXP MD (expression mode).



- 3 Press the VALUE knob.



- 4 Turn until the display reads TAP.




NOTE: To switch back to Expression pedal operation, follow steps 1-3 above, and then turn the VALUE knob until the display reads EXP MD.

Brigadier

FAVORITE MODE SETUP

1 Set both toggles to the MIDDLE position.

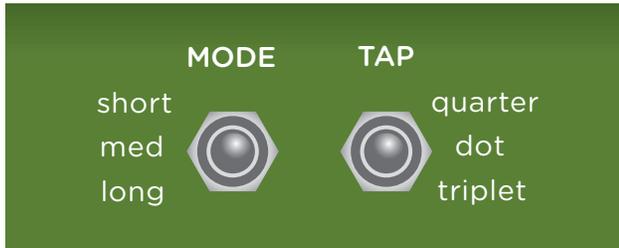

2 Power up holding BOTH footswitches.




To switch back to Expression pedal operation, set both toggles to the TOP position and power up holding both footswitches.

How to save and access a favorite setting:

1 Press and hold BYPASS on your Strymon pedal to save a new favorite setting.



2 Press footswitch to engage favorite setting.

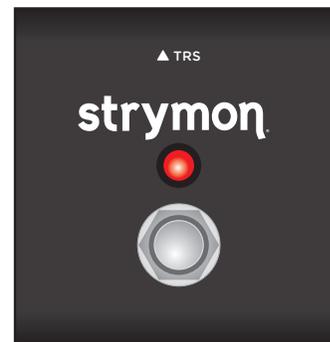

Deco

FAVORITE MODE SETUP

- 1 Power up holding BOTH footswitches.



- 3 Press footswitch to toggle between the saved favorite setting and the current state of knobs & switches.



- 2 While holding footswitches, turn the SATURATION all the way to the right.



TAP TEMPO MODE SETUP

With Deco set to Tap tempo mode use MiniSwitch to tap in your Lag Time. Tapping quarter notes sets the Lag Time to 8th notes.

- 1 Power up holding BOTH footswitches.




- 2 While holding footswitches, turn the SATURATION to the 12 o'clock position.



DIG

FAVORITE MODE SETUP

1 Set both toggles to the MIDDLE position.

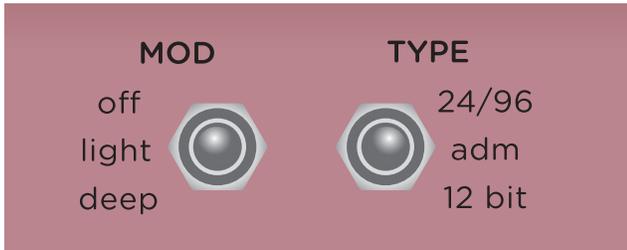

2 Power up holding BOTH footswitches.



To switch back to Expression pedal operation, set both toggles to the TOP position and power up holding both footswitches.

How to save and access a favorite setting:

1 Press and hold BYPASS on your Strymon pedal to save a new favorite setting.




2 Press footswitch to toggle between the saved favorite setting and the current state of knobs & switches.



TAP TEMPO MODE SETUP

1 Set both toggles to the DOWN position.

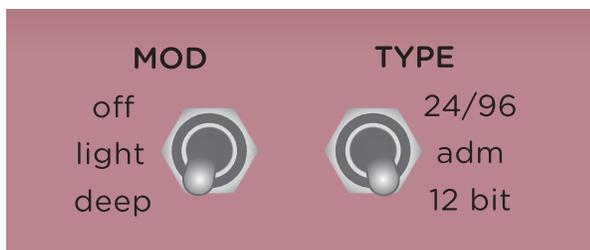

2 Power up holding BOTH footswitches.




To switch back to Expression pedal operation, set both toggles to the TOP position and power up holding both footswitches.

El Capistan

FAVORITE MODE SETUP

1 Set both toggles to the MIDDLE position.

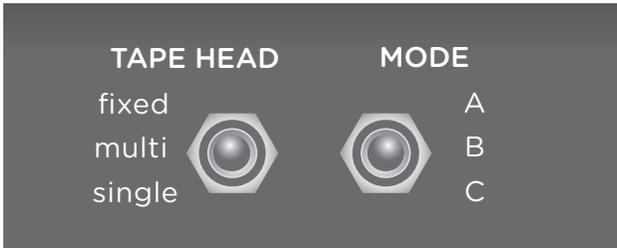

2 Power up holding BOTH footswitches.




To switch back to Expression pedal operation, set both toggles to the TOP position and power up holding both footswitches.

How to save and access a favorite setting:

1 Press and hold BYPASS on your Strymon pedal to save a new favorite setting.



2 Press footswitch to toggle between the saved favorite setting and the current state of knobs & switches.

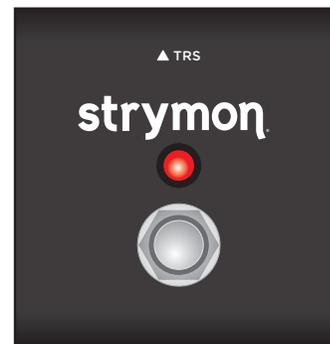

Flint

FAVORITE MODE SETUP

1 Set both toggles to the MIDDLE position.



2 Power up holding BOTH footswitches.




To switch back to Expression pedal operation, set both toggles to the TOP position and power up holding both footswitches.

How to save and access a favorite setting:

1 Press and hold BYPASS on your Strymon pedal to save a new favorite setting.




2 Press footswitch to toggle between the saved favorite setting and the current state of knobs & switches.

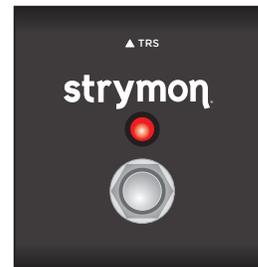

TAP TEMPO MODE SETUP

1 Set both toggles to the DOWN position.

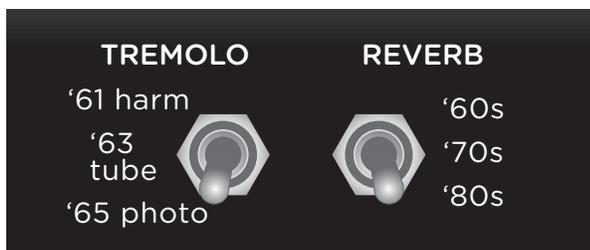

2 Power up holding BOTH footswitches.



To switch back to Expression pedal operation, set both toggles to the TOP position and power up holding both footswitches.

Lex

FAVORITE MODE SETUP

Power up holding BOTH FOOTSWITCHES.



While holding both footswitches:



- Turn TOPMOST LEFT KNOB full clockwise to use MiniSwitch as a favorite preset select switch.



- Turn TOPMOST LEFT KNOB to 12 o'clock to use MiniSwitch as an external speed switch.

*To switch back to Expression pedal operation, while powering up hold both footswitches, and turn the TOPMOST LEFT KNOB full counterclockwise.

How to save and access a favorite setting:

- 1 Press and hold BYPASS on your Strymon pedal to save a new favorite setting.



- 2 Press footswitch to toggle between the saved favorite setting and the current state of knobs & switches.



Mobius

TAP TEMPO MODE SETUP

- 1 Press and hold the VALUE knob for 2 seconds to access the Globals menu.



- 2 Turn until the display reads EXP MD (expression mode).



- 3 Press the VALUE knob.



- 4 Turn until the display reads TAP.



NOTE: To switch back to Expression pedal operation, follow steps 1-3 above, and then turn the VALUE knob until the display reads EXP MD.

Riverside

BOOST SWITCH SETUP:

- 1 Press and hold the FAVORITE footswitch at power up until both LEDs flash.




- 2 To enable the BOOST switch for the **BOOST jack**, turn the DRIVE knob counter-clockwise. The FAVORITE LED will light up **GREEN**.



- 3 Press the ON or FAVORITE footswitch once again to store this setting and begin using Riverside.

FAVORITE MODE SETUP:

- 1 Press and hold the FAVORITE footswitch at power up until both LEDs flash.

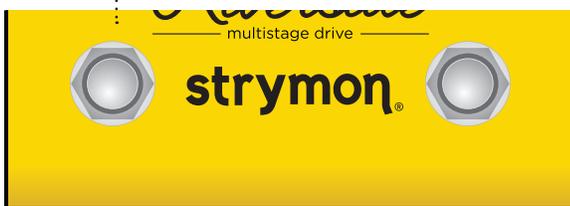

- 2 To enable Favorite In for the **EXP jack**, turn the LEVEL knob fully clockwise. The ON LED will light up **RED**.



- 3 Press the ON or FAVORITE footswitch once again to store this setting and begin using Riverside.

- 4 Press footswitch to toggle between the saved favorite setting and the current state of knobs & switches.



Timeline

TAP TEMPO MODE SETUP

1 Press and hold the VALUE knob for 2 seconds to access the Globals menu.



2 Turn until th).



3 Press the VALUE knob.



4 Turn until the display reads TAP.



NOTE: To switch back to Expression pedal operation, follow steps 1-3 above, and then turn the VALUE knob until the display reads EXP MD.

Specification

Dimensions	2.25" deep x 2" wide x 1.8" tall
Cable	1/4" TRS (tip / ring / sleeve)

Strymon Non-Transferrable Limited Warranty

Warranty

Strymon warrants the product to be free from defects in material and workmanship for a period of two (2) years from the original date of purchase when bought new from an authorized dealer in the United States of America or Canada. If the product fails within the warranty period, Strymon will repair or, at our discretion, replace the product at no cost to the original purchaser. Please contact your dealer for information on warranty and service outside of the USA and Canada.

Exclusions

This warranty covers defects in manufacturing discovered while using this product as recommended by Strymon. This warranty does not cover loss or theft, nor does the coverage extend to damage caused by misuse, abuse, unauthorized modification, improper storage, lightning, or natural disasters.

Limits of Liability

In the case of malfunction, the purchaser's sole recourse shall be repair or replacement, as described in the preceding paragraphs. Strymon will not be held liable to any party for damages that result from the failure of this product. Damages excluded include, but are not limited to, the following: lost profits, lost savings, damage to other equipment, and incidental or consequential damages arising from the use, or inability to use this product. In no event will Strymon be liable for more than the amount of the purchase price, not to exceed the current retail price of the product. Strymon disclaims any other warranties, expressed or implied. By using the product, the user accepts all terms herein.

How to Obtain Service Under this Warranty

For North American customers: Contact Strymon through our website at strymon.net/support for Return Authorization and information. Proof of original ownership may be required in the form of a purchase receipt.

For International Customers: Contact the Strymon dealer from which the product was purchased from in order to arrange warranty repair service.

Strymon® is a division of Damage Control®, LLC.