



YAMAHA

PERSONAL ELECTRONIC PIANO

YPP-45

Owner's Manual

 
Bedienungsanleitung

Mode d'emploi

Manual de instrucciones

SPECIAL MESSAGE SECTION


PRODUCT SAFETY MARKINGS: Yamaha electronic products may have either labels similar to the graphics shown below or molded/stamped facsimiles of these graphics on the enclosure. The explanation of these graphics appears on this page. Please observe all cautions indicated on this page and those indicated in the safety instruction section.

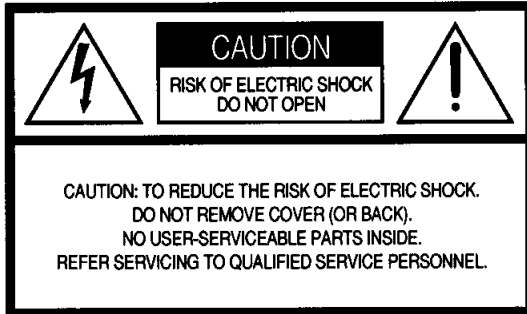

See bottom of Keyboard enclosure for graphic symbol markings



 The exclamation point with the equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

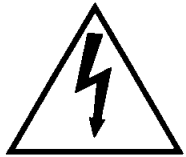

The lightning flash with arrowhead symbol within the equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock.

IMPORTANT NOTICE: All Yamaha electronic products are tested and approved by an independent safety testing laboratory in order that you may be sure that when it is properly installed and used in its normal and customary manner, all foreseeable risks have been eliminated. DO NOT modify this unit or commission others to do so unless specifically authorized by Yamaha. Product performance and/or safety standards may be diminished. Claims filed under the expressed warranty may be denied if the unit is/has been modified. Implied warranties may also be affected.

SPECIFICATIONS SUBJECT TO CHANGE: The information contained in this manual is believed to be correct at the time of printing. However, Yamaha reserves the right to change or modify any of the specifications without notice or obligation to update existing units.

ENVIRONMENTAL ISSUES: Yamaha strives to produce products that are both user safe and environmentally friendly. We sincerely believe that our products and the production methods used to produce them, meet these goals. In keeping with both the letter and the spirit of the law, we want you to be aware of the following:

 
Battery Notice: This product MAY contain a small non-rechargeable battery which (if applicable) is soldered in place. The average life span of this type of battery is approximately five years. When replacement becomes necessary, contact a qualified service representative to perform the replacement.

Warning: Do not attempt to recharge, disassemble, or incinerate this type of battery. Keep all batteries away from children. Dispose of used batteries promptly and as regulated by applicable laws. Note: In some areas, the servicer is required by law to return the defective parts. However, you do have the option of having the servicer dispose of these parts for you.

Disposal Notice: Should this product become damaged beyond repair, or for some reason its useful life is considered to be at an end, please observe all local, state, and federal regulations that relate to the disposal of products that contain lead, batteries, plastics, etc.

NOTICE: Service charges incurred due to lack of knowledge relating to how a function or effect works (when the unit is operating as designed) are not covered by the manufacturer's warranty, and are therefore the owners responsibility. Please study this manual carefully and consult your dealer before requesting service.

NAME PLATE LOCATION: The graphic below indicates the location of the name plate. The model number, serial number, power requirements, etc., are located on this plate. You should record the model number, serial number, and the date of purchase in the spaces provided below and retain this manual as a permanent record of your purchase.

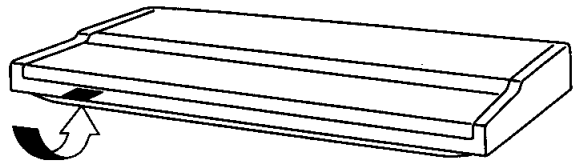

Model _____

Serial No. _____

Purchase Date _____



Congratulations, and thank you for buying the YAMAHA YPP-45. We are sure you will be pleased with the natural sound and easy operation of this keyboard.

Features include AWM technology (for a clear, realistic sound), five different voices, touch-sensitive keys, and much more. Please read this manual to learn how to best use and enjoy your new instrument. We wish you many years of musical pleasure with your YPP-45.

CONTENTS

1. BEFORE PLAYING	2
A. Power Supply	2
B. Setting the Music Stand	3
C. Using the Foot Switch	3
D. Using Headphones	3
E. Connecting YPP-45 to another Audio System	3
2. PLAYING	4
A. Basic Playing Operation	4
B. Demonstration Play	5
3. PLAYING TIPS & FEATURES	6
A. Touch Sensitivity	6
B. Using the Metronome	6
C. Transposition	7
D. Fine Tuning	7
4. MIDI	8
A. What is MIDI?	8
B. Types of MIDI Information	9
C. MIDI Channels	10
D. Applications	11
E. Multi-Timbre Mode	13
MAINTENANCE	15
TROUBLESHOOTING	15
SPECIFICATIONS	16
MIDI IMPLEMENTATION CHART	66

 
 
1. BEFORE PLAYING

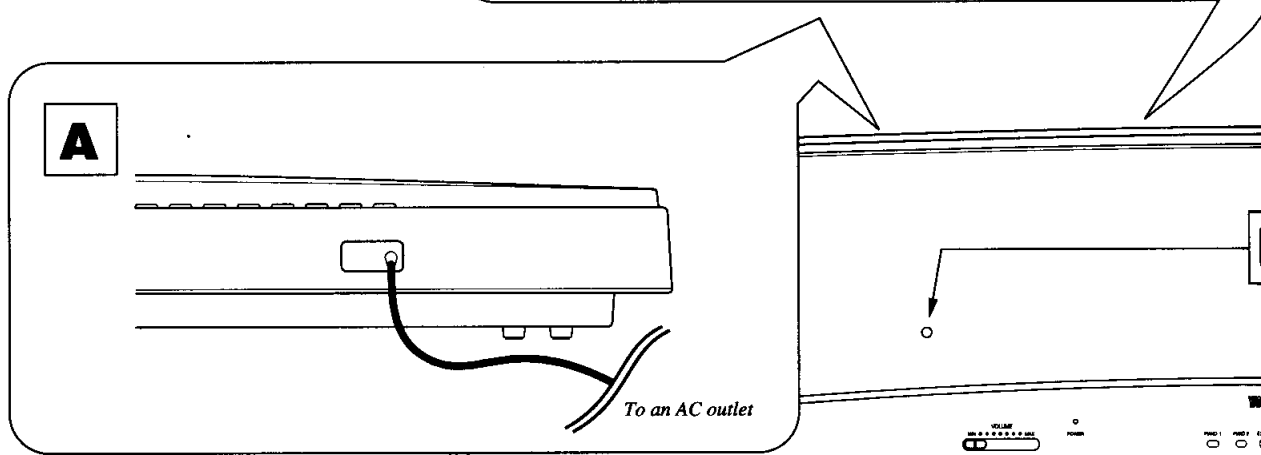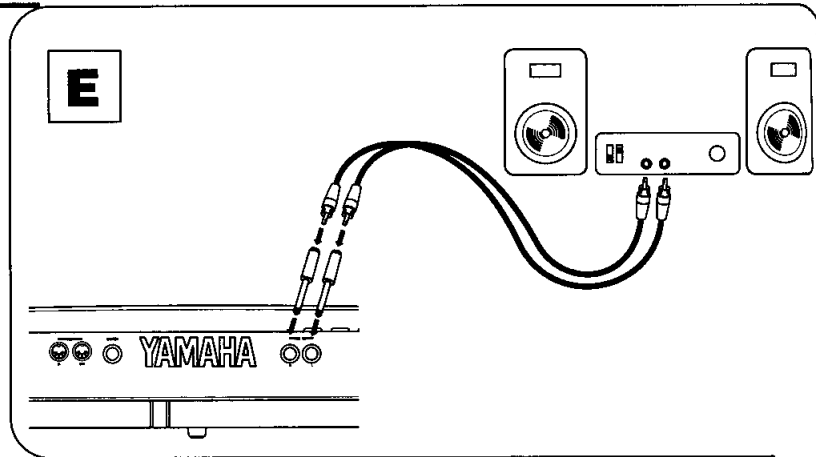


A Power Supply

Be sure the POWER switch is not in the ON position (pushed in) and connect the power plug to an AC current. Also, remember never to pull on the power cable itself when disconnecting it from the outlet or when relocating the YPP-45, as it will cause disconnection of the cable.

   * Your YPP-45 is designed to meet the standard voltage of your area. Make sure that your local AC mains voltage matches the power requirement specified on the name plate on the bottom panel of the instrument. If you have any doubts about voltage compatibility, consult your local Yamaha dealer. If you plan to use the instrument in an area of a different voltage, be sure to use an appropriate converter.

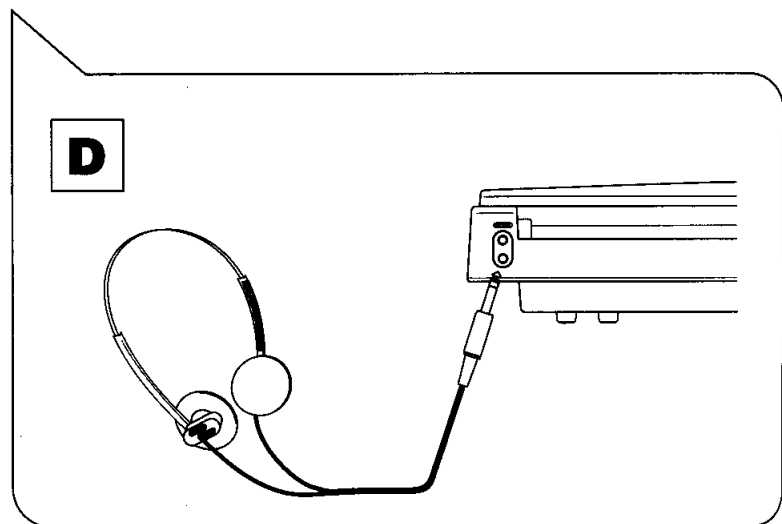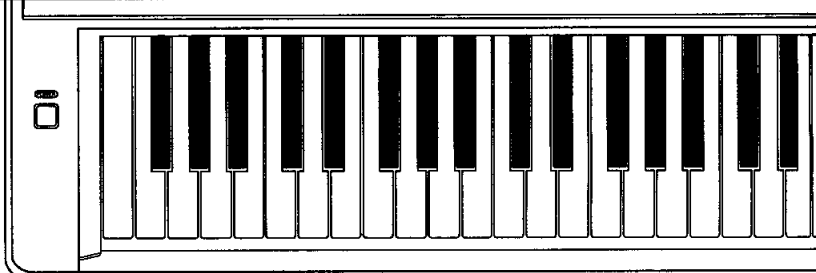

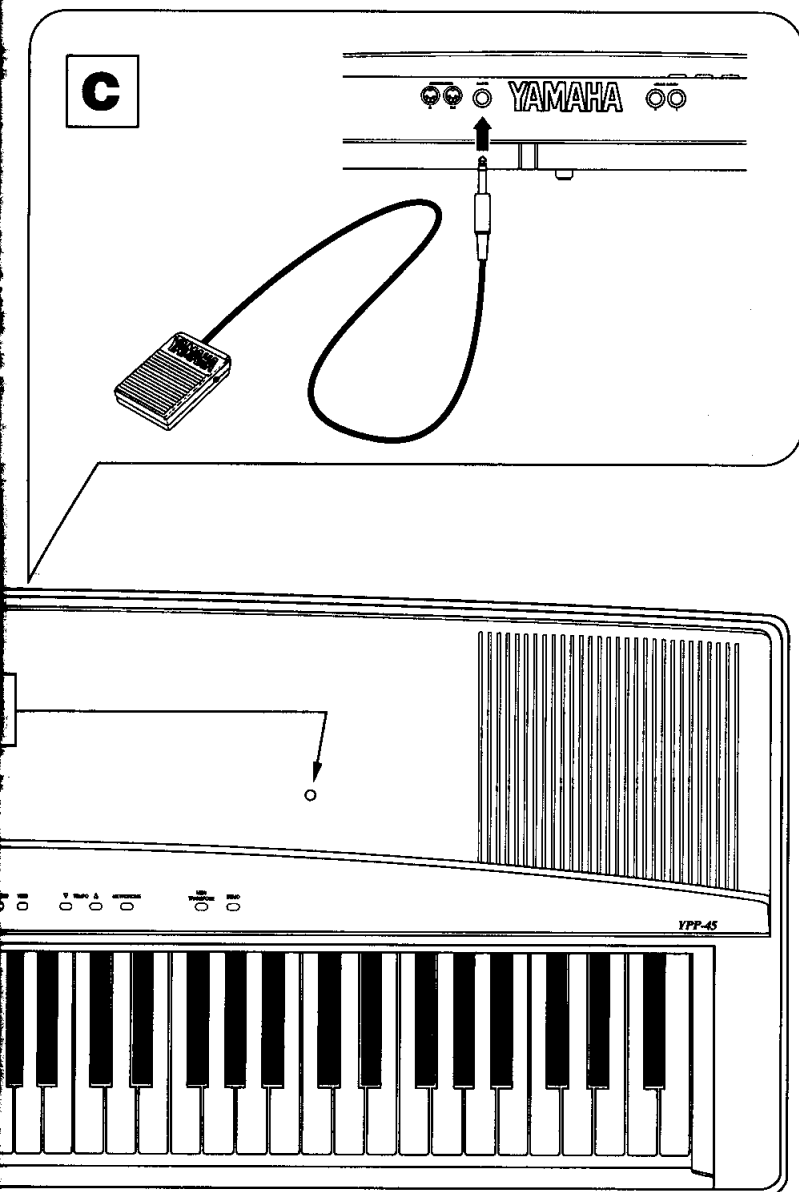

B Setting the Music Stand

Insert both ends of the supplied music stand into the 2 holes located on the top panel next to the speakers.

C Using the Foot Switch

Connect the supplied foot switch to the DAMPER jack on the rear panel. If you depress the foot switch while playing, you can sustain the sound.

 
D Using Headphones

There are 2 PHONES jacks on the left of the front panel of the YPP-45. Connecting your headphones to the PHONES jack(s) turns off the speakers, so 1 or 2 people can practice and listen without disturbing anybody else.

E Connecting YPP-45 to another Audio System

If you want more volume, connect the L and R AUX. OUT jacks of the YPP-45, using suitable cables, to the LINE IN's of your stereo system or similar device. If the device is a mono audio system (keyboard amplifier, etc.) use only the L AUX. OUT jack of the YPP-45.

2. PLAYING

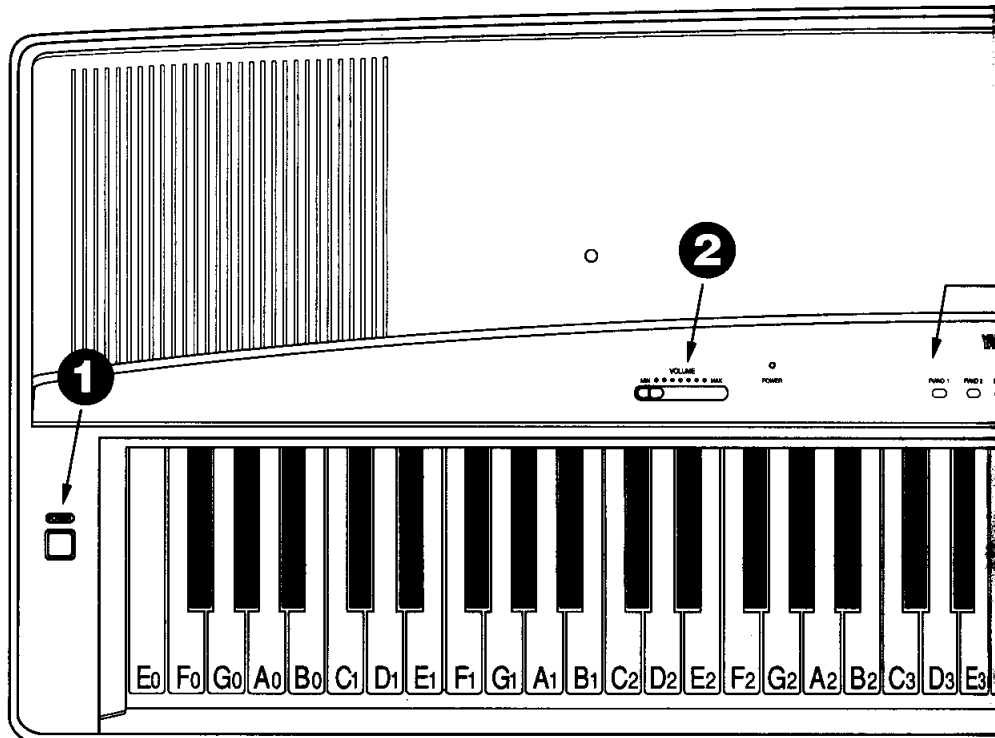

A. Basic Playing Operation

1) Power

When all the necessary connections have been made, turn on the POWER switch ❶.

2) Volume

Adjust the volume with the VOLUME slide control ❷. This slider controls the speakers' and headphones' volume, as well as the output level of the AUX. OUT jacks.

3) Selecting Voices

 
Select the sound you wish to play with by pressing one of the 5 Voice Select buttons ❸.

* When the YPP-45 is first turned on, PIANO 1 is automatically selected.

4) Playing

Normally you can play up to 16 notes simultaneously except for PIANO 2 which can be played up to 14 notes at a time. While depressing the foot switch connected to the DAMPER jack, you can play up to 28 notes with any voices.

* The tone of some voices may change slightly at one or more points on the Keyboard. This is due to the way in which the voice waveforms were initially sampled and is normal.

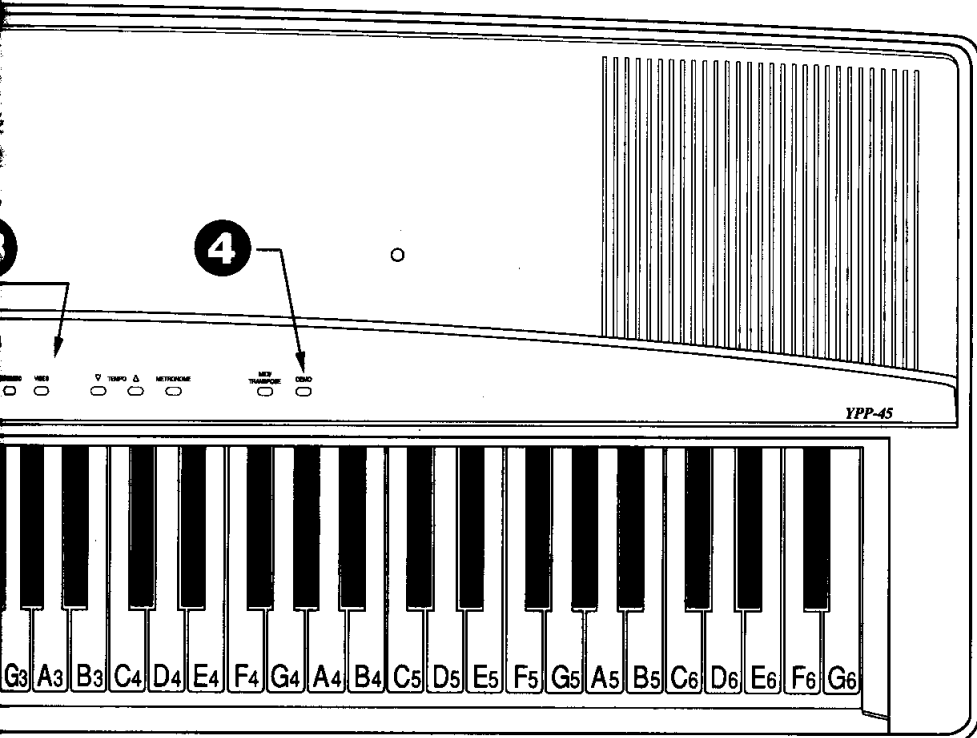

B. Demonstration Play

1) Listening to the Demonstration

The YPP-45 has a demonstration song for each voice. Press the yellow DEMO button ④, and the demonstration song for each voice will be played in order from PIANO 1 to VIBES. This sequence is repeated indefinitely.

To stop the performance, press the DEMO button again.

- * The demonstration songs will not be output as MIDI performance messages (See section 4, MIDI).
- * During demonstration play, the Metronome function will not be available.

2) Playing Individual

Demonstration Songs

If you wish to play the demonstration Songs individually, first press the DEMO button. While holding it down, press one of the Voice Select buttons. The song corresponding to the selected voice will be played once.

If you wish to stop the performance, press the DEMO button again.

VOICE	SONG NAME	COMPOSER
PIANO 1	PIANO SONATA K.V. 331 Var. 6	W. A. MOZART
PIANO 2	MOMENTS MUSICAUX, Opus94 No. 3 F minor	SCHUBERT
E. PIANO	—————	Yamaha Original
HARPSICHORD	INVENTION No. 8	J. S. BACH
VIBES	—————	Yamaha Original

 
3. PLAYING TIPS & FEATURES

A Touch Sensitivity

The YPP-45 is touch sensitive, which means that the sound changes according to the player's touch. If you use a stronger touch (i.e. play harder), the sound gets louder.

To adjust the sensitivity, press and hold the F[#]₆ and G₆ keys (highest black and white keys), then press one of the following Voice Select buttons: PIANO 1 (Range 1), PIANO 2 (Range 2), E. PIANO (Range 3).


- The range 1 setting allows maximum tone volume to be produced with a relatively light touch of the keys.
- The range 2 setting produces a fairly "standard" keyboard response.
- The range 3 setting requires that the keys be played quite hard to produce maximum tone volume.
- * When the YPP-45 is turned on, the range 2 setting is automatically selected.

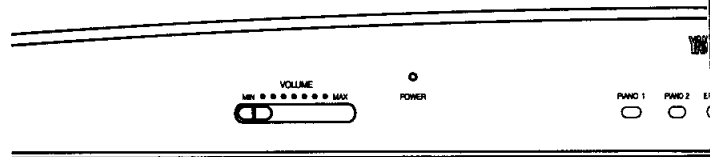


B Using the Metronome

To activate the metronome, press the METRONOME button **5**. The initial tempo, after the instrument has been turned on, is always 120 beats per minute. The two TEMPO buttons **6** are used to adjust the tempo. To increase the tempo, press the TEMPO ▲ button several times, or hold it down until the desired tempo is reached. To decrease the tempo, follow the same procedure with the TEMPO ▼ button. Pressing both TEMPO buttons at the same time will bring the tempo back to 120 beats per minute. The range of the metronome is from 40 to 280 beats per minute. To turn off the metronome, press the METRONOME button again.

  * Tempos of the demonstration songs cannot be changed. After a demo song is stopped, The metronome tempo will automatically return to 120 beats per minute (same as when power turned on).

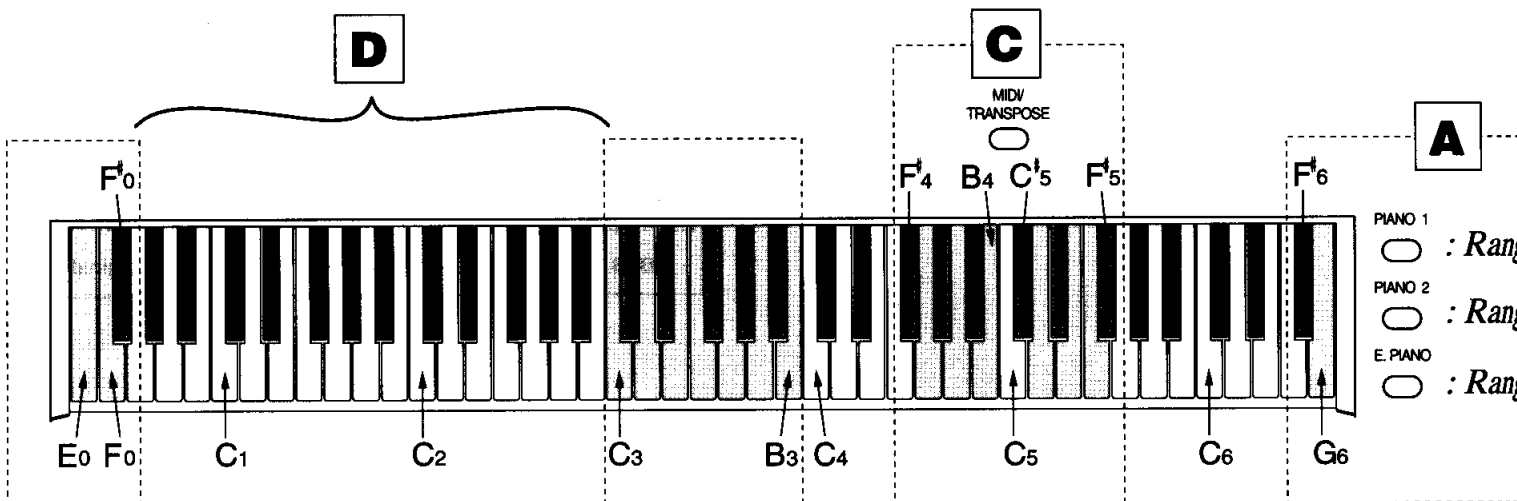

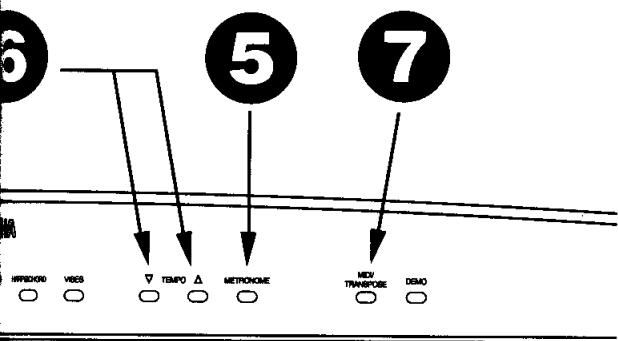

C Transposition

The overall pitch of the YPP-45 can be transposed up or down as far as 6 semitones (half steps) in either direction. Transposition occurs in 100 cent steps (1 semitone).

You can use the Transposition function to play a passage of music in several different keys, without actually changing the notes you play. Similarly, if you have to do some playing (for instance, accompanying or improvising) in a difficult key, you can transpose the YPP-45, so that the played C major scale (i.e. the white keys) will sound like a scale in the desired key.

1) Procedure

First, press and hold down the MIDI/TRANPOSE button ⑦.

Then, press one of the F[#]4 to F[#]5 keys, which corresponds to the desired key.

TRANSPOSE	F [#] 4	G [#] 4	A [#] 4	B [#] 4	C [#] 5	D [#] 5	E [#] 5	F [#] 5	F [#] 5
TRANSPOSE	F	G	A	B	C	D	E	F	F

when played in C major
(i.e. white keys only)

2) Returning to the Standard Pitch

To bring the YPP-45 back to the standard pitch (Key of C), press the MIDI/TRANPOSE button, and while holding it down, press the C5 key. Or, you can turn off the POWER switch, then turn it on again after a few seconds.

D Fine Tuning

This function is very useful if you are playing in a band or other ensemble. It allows you to tune your instrument with the others. The YPP-45 can be fine-tuned up or down up to a quarter tone (+/-50 cents). You can also use the Fine Tuning function in conjunction with the Transposition function, in either order.

1) Raising the Pitch

While holding down both the E0 and F0 keys (lowest two white keys), press any one of the C3 to B3 keys. Each time a key is pressed, the pitch will be raised, up to a maximum of 50 cents.

2) Lowering the Pitch

While holding down both the E0 and F[#]0 keys (lowest white and black keys), press any one of the C3 to B3 keys. Each time a key is pressed, the pitch will be lowered, up to a maximum of 50 cents.

3) Returning to the Standard Pitch (A₃=440Hz)

While holding down the E0, F0 and F[#]0 keys (lowest three keys) simultaneously, press any one of the C3 to B3 keys. Or, you can turn off the POWER switch, then turn it on again after a few seconds.

4. MIDI

A. What is MIDI?

The YPP-45 is a MIDI-equipped keyboard. MIDI (Musical Instrument Digital Interface) is a worldwide standard for communicating performance information between electronic musical instruments. With MIDI, the YPP-45 can control, and be controlled by, other MIDI-equipped instruments, such as synthesizers, sequencers and drum machines.

In a simple MIDI setup between two instruments, the instrument which is controlling is called the **Master**, and the instrument being controlled is called the **Slave** (Diagram A). You can also set up the two instruments so that they control each other, i.e. both machines are simultaneously Masters and Slaves (Diagram B). To connect the YPP-45 to another MIDI-equipped instrument, use the MIDI-IN or MIDI-OUT jacks on the rear panel, and join the instruments with the MIDI cable as shown in Diagram A or B.

DIAGRAM A


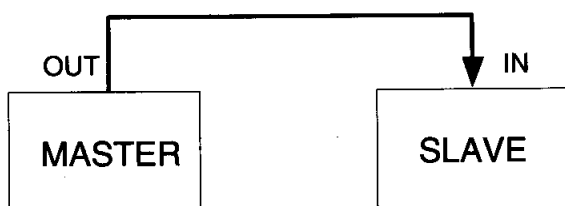 


DIAGRAM B

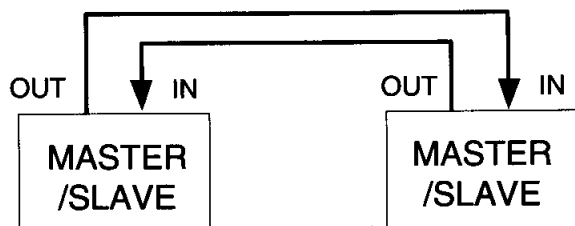 


Note: Always use a high-quality MIDI cable to connect MIDI OUT to MIDI IN terminals. Never use MIDI cables longer than about 15 meters, since cables longer than this can pick up noise which can cause data errors.

Diagram A depicts a **One-Way** connection, and Diagram B depicts a **Hand-Shaking** connection. All the following MIDI explanations will relate to these terms, as well as to the terms Master and Slave. So please be clear about these concepts before proceeding.

Note: If you connect more than two instruments, the third instrument becomes the second Slave. To do this, make an additional One-Way connection from the MIDI-THRU jack of the first Slave to the MIDI-IN jack of the second Slave:

 DIAGRAM

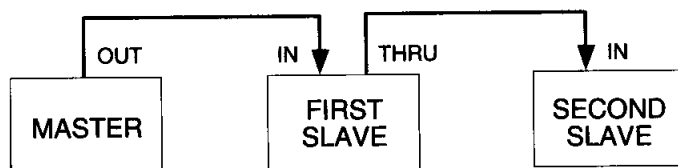

At this time, the first Slave simply transmits, from its MIDI-THRU jack, the information received at its MIDI-IN jack. In this way, a Master can control two Slaves simultaneously.

Note: Some MIDI instruments, such as the YPP-45, are not equipped with a MIDI-THRU jack, so are best suited to be the final Slave in a MIDI chain.

* MIDI is a uniform standard which defines the methods for transmission/reception of various performance information. However, each MIDI instrument does not always carry a complete range of MIDI features. For instance, a MIDI-equipped drum machine would have rhythmic features (i.e. start/stop, etc.) for synchronized performance which a simple keyboard would not. So, simply making the MIDI connection is not enough. It is important to understand the MIDI capabilities of each instrument to obtain best results. To find the MIDI specifications of a device, refer to its **MIDI implementation chart**. The chart for the YPP-45 is found on page 66 of this manual.

 
B. Types of MIDI Information

What kind of information is communicated by MIDI? The most universal is information about the notes being performed (or played back) from the Master. This is called **Note On** message, which includes information about the **key** being depressed (transmitted as MIDI note number), and, in the case of touch sensitive instruments such as the YPP-45, the **velocity** (speed) of depression (transmitted as velocity data). For instance, when the YPP-45 is set up as a Master, playing something on it will activate the sound module of the Slave, and you will hear, simultaneously, the voices of both instruments as you play. If your Slave instrument is equipped to receive velocity data, the volume and timbre of its voice will also vary according to your performance.

In addition to Note On information, the YPP-45 is also equipped to deal with **Program Change** and **Control Change** messages.

1) Program Change Message

Program Change message is used to change voices on a Slave instrument. For instance, with the YPP-45 set up as a Master, if you select one of its voices, a Program Change message (including **MIDI Program Number**) will be transmitted to the Slave. If the Slave has the MIDI capabilities to receive this message, its own voice will be changed according to the MIDI Program Number it has received. Conversely, when the YPP-45 is the Slave, it can receive the message and will automatically select its voice according to the MIDI Program Number from the Master.

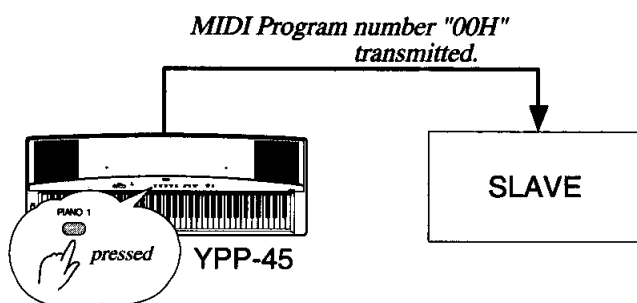

The following chart shows the relation between YPP-45 voices and MIDI Program Numbers.

MIDI Program Number	YPP-45 Voice/Voice Select Button
00H	PIANO 1
01H	PIANO 2
02H	E. PIANO
03H	HARPSICHORD
04H	VIBES

 
* This relation applies to both transmission and reception. MIDI Program Numbers other than those in the chart cannot be transmitted or received. (H: Hexadecimal number; used in describing MIDI data)

Cancelling Program Change Message

Program Change message is automatically available when the YPP-45 is turned on. Though it is a very useful feature, you may sometimes run into a situation where you wish to cancel it. **To cancel Program Change message, while holding down the MIDI/TRANPOSE button, press the Voice Select button PIANO 2.** To reactivate this message, repeat the same procedure.

2) Control Change Message

Control Change message deals with various aspects of the played sound. For instance, when you're using the YPP-45 as a Master, and you depress the foot switch, a Control Change message (including **MIDI Control Number** and a **Damper value**) will be transmitted, and the Slave's sound will also be sustained (unless it cannot receive the message). If the YPP-45 is the Slave, it will receive Control Change messages from the Master. The YPP-45, as a Master, can transmit only Damper information (MIDI Control Number 64 in the following chart). As a Slave, however, it can receive a lot more information, as shown in the chart below:

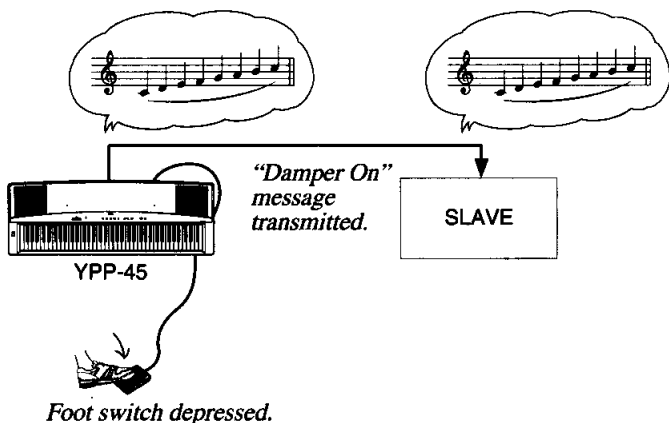

YPP-45 Control Change Message Reception Capabilities

MIDI Control Number	Name	Value
64	Damper	0-63: Off 64-127: On
122	Local On/Off (*1)	0: Off, 1-127: On
123	All Notes Off (*2)	0
124	Omni Off (*3)	0
125	Omni On (*3)	0

(*1) **Local On/Off:** Upon reception of a Local Off message, the YPP-45's keyboard will be separated from its internal sound module. See notes on page 13 for details.

(*2) **All Notes Off:** As soon as the YPP-45 receives this instruction, all of its notes sounding at that time will be muted.

(*3) **Omni Off/On:** See the following section, "MIDI Channels", for details.

Cancelling Control Change Message

Normally, Control Change message is automatically available when the YPP-45 is turned on. But you may wish to create a situation where, for example, the Slave YPP-45 sounds are not sustained in tandem with the Master sounds. **To cancel the Control Change message, while holding down the MIDI/TRANPOSE button, press the Voice Select button E. PIANO.** To reactivate this message, repeat the same procedure.

The above-described Note On, Program Change, and Control Change messages are known as MIDI channel information. That is, these messages are communicated through

MIDI channels. Please read the next section to find out more about these channels.

C. MIDI Channels


There are 16 MIDI channels (1-16). Unless MIDI instruments are set to the same MIDI channel, they cannot communicate MIDI channel information (Note On, Program Change, Control Change, etc.), even if the cables are connected properly. MIDI channels can be compared to television channels, i.e. information from several TV stations is transmitted through the air, so to receive the desired program, you have to select one channel on your TV set.

When the YPP-45 is turned on, **both its transmitting and receiving MIDI channels are set to 1.** If required, these channels can be reset.

1) Setting a MIDI Transmitting Channel

While holding down the MIDI/TRANPOSE button, press one of 16 keys from C1 to D² according to the table below.


Key	C ₁	C ₁ [♯]	D ₁	D ₁ [♯]	E ₁	F ₁	F ₁ [♯]	G ₁	G ₁ [♯]	A ₁	A ₁ [♯]	B ₁	C ₂	C ₂ [♯]	D ₂	D ₂ [♯]
Channel	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16

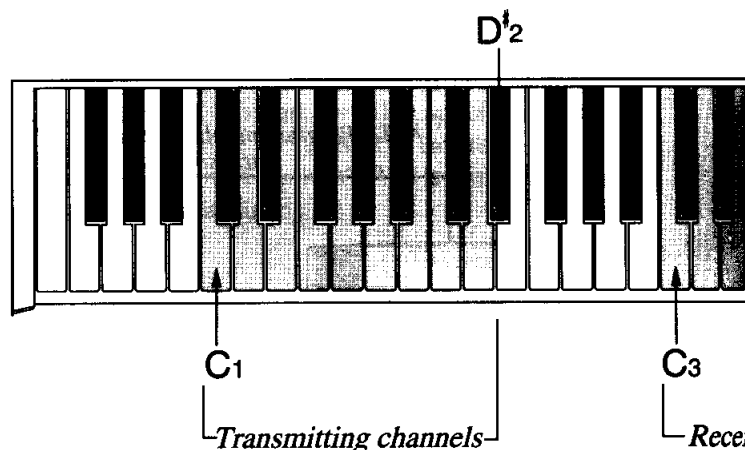 

3) Omni On Mode

If required, the YPP-45 can be set to receive information on all MIDI channels (1-16). This mode is called **Omni On**. To set the YPP-45 to this mode, while holding down the MIDI/TRANSPOSE button, press the E4 key. To get out of this mode, either select a specific receiving channel, or turn off the YPP-45, then turn it on again after a few seconds.

 
Note: If you have several Slaves, all set to OMNI ON Mode, they will all receive the same instructions, and therefore play the same music. To achieve individual control of the Slaves, that is, to get each one to respond to different instructions and play its own part in an ensemble, you must set the Slaves' MIDI receiving channels individually. When a specific channel is selected, it means the instrument is in Omni Off mode.

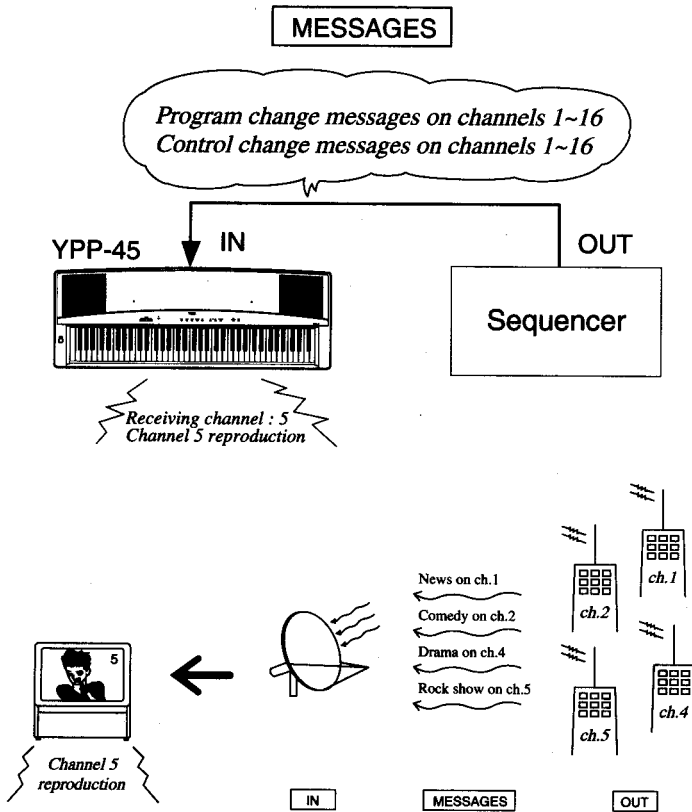

2) Setting a MIDI Receiving Channel

While holding down the MIDI/TRANSPOSE button, press one of 16 keys from C3 to D[♯]4 according to the table below.

Key	C ₃	C [♯] ₃	D ₃	D [♯] ₃	E ₃	F ₃	F [♯] ₃	G ₃	G [♯] ₃	A ₃	A [♯] ₃	B ₃	C ₄	C [♯] ₄	D ₄	D [♯] ₄
Channel	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16

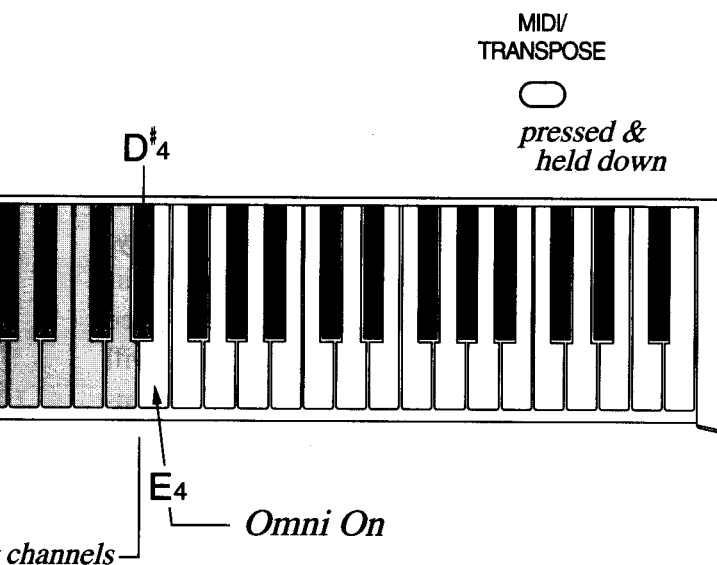 

D. Applications



1) MIDI Setup Examples

The following three examples show how several of the YPP-45's MIDI functions can be applied in specific setups. In order to make best use of MIDI, it is important to determine which instruments are most effective as Masters or as Slaves. This will depend on the individual situation. Consulting the MIDI implementation chart of each instrument in your setup will help you to decide in each case. If one instrument has more transmission capabilities than the other(s), it will generally be better suited as the Master. Conversely, instruments with more recognition capabilities will be better Slaves.

Example 1: Using the YPP-45 with another keyboard or sound module

Beginners using MIDI should first make a Hand-Shaking connection between the two MIDI keyboards. After matching the transmitting and receiving MIDI channels, you can use either instrument as Master or Slave. Whichever keyboard you play, you will hear the sounds of both instruments. In addition, the Slave will duplicate the Master's sustain, touch response, etc., as long as it is equipped to receive MIDI messages such as Program Change, Control Change, and so on.

  
- * Practicing with a Hand-Shaking connection is a good way to learn which instrument will make the better Master or Slave in a One-Way connection.
- * If you are connecting the YPP-45 to a MIDI sound module, the latter is best used as a Slave in a One-Way connection.

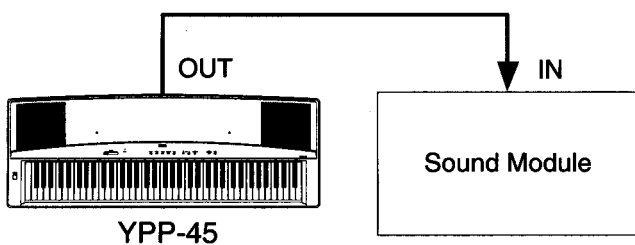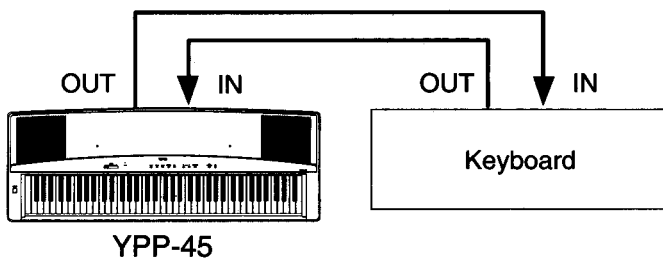

Example 2: Using the YPP-45 with a drum machine

If you have a MIDI-compatible rhythm/drum machine, use it as a Slave of the YPP-45. After matching MIDI channels, play the YPP-45 keyboard. Now you can have various percussion sounds at your fingertips. Playing a key on the YPP-45 will transmit a specific MIDI Note Number to the drum machine, which reproduces the percussion sound corresponding to it.

 Here's another idea: If your drum machine includes a melody instrument such as bass or vibraphone, you can access this sound from the YPP-45. First, look up the MIDI receiving channel assigned for controlling the sound. Then, set both instruments to this channel. You can now play the drum machine's melody instrument sound from the YPP-45. If you wish, you can accompany your performance with a rhythmic pattern (start/stopped locally on the drum machine). Your entire performance for the melodic instrument can be input into the drum machine as sequence data.

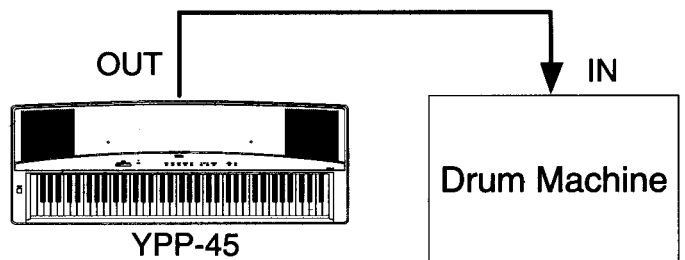


Example 3: Using the YPP-45 with a sequencer (and other keyboards)

Knowing how to use the YPP-45 effectively with a sequencer makes you a MIDI pro!


After you've recorded all the parts of your performance on the sequencer, you'll want to play back your ensemble, with each part matched (via MIDI channels) to the appropriate instrument or sound module. Say you've recorded a two-part ensemble, cello and flute, on MIDI channels 1 and 2, each channel matched to a separate instrument or sound module in your MIDI system (instruments A and B in the Diagram below). When you play back the ensemble, you may wish to experiment with the sounds. Here's one thing you can try: put the YPP-45 (one of the Slaves in your setup) in OMNI ON mode, and select the voice you wish, say PIANO 1. Thus, the YPP-45 will receive performance data on both MIDI channels 1 and 2, and therefore will play back both parts in PIANO 1 voice, as a complement to the cello and flute sounds from instruments A and B.

 - * Another use of OMNI ON mode is for checking the contents of an untitled performance data disk whose MIDI channels are unspecified. After loading the data into the sequencer, transmit it from the sequencer to the YPP-45 in OMNI ON mode. Regardless of the MIDI channels to which the data was assigned, the YPP-45 in OMNI ON mode will play it back.

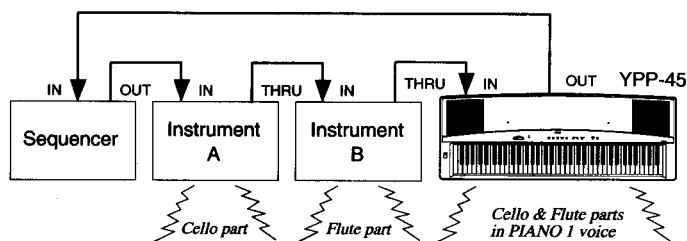

If you set up a Hand-Shaking connection between the YPP-45 and the sequencer, there are two things to be noted:

 
- * If the sequencer is set to transmit the same MIDI information as received at its MIDI IN jack (This is called **Echo On**, **Soft Thru On**, etc., depending on the make), set the YPP-45 to **Local Control Off** (*See next section). If you fail to do this, pressing a single key will sound twice as many notes as in normal play. As a result, it will reduce the polyphonic notes you can play at a time.
- * Conversely, when the sequencer is set to **Echo Off** (**Soft Thru Off**, etc.), you cannot play directly from the keyboard with the YPP-45 in **Local Control Off**, because the sequencer doesn't retransmit any received MIDI data. In this case, you have to set the YPP-45 to **Local Control On** (*See next section), which enables you to control the sound module from either the keyboard or the sequencer.

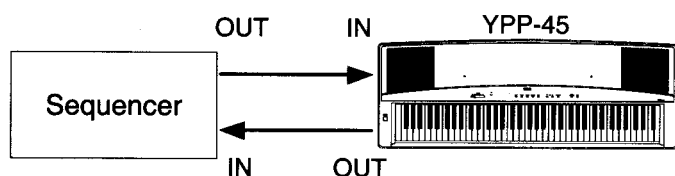

Echo On

Local Off

 OR

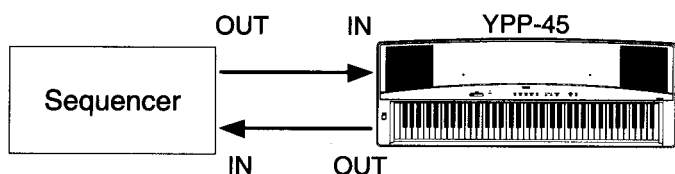

Echo Off

Local On

2) General notes on Local Control

Normally, the YPP-45's keyboard is connected to its internal sound module, which means that when you play, a sound is output from the instrument, and when you select a different voice, the sound changes. This state is called **Local Control On**. However, if desired, the YPP-45 can be set to **Local Control Off**. In this state, the keyboard is disconnected from the sound module, which means that if you play something, a sound will not be produced from the instrument itself, but your performance can be transmitted via MIDI to an external instrument.

Setting to Local Control Off

While holding down the **MIDI/TRANPOSE** button, press **Voice Select** button **PIANO 1**. To return the YPP-45 to **Local Control On**, repeat the same procedure.

E. Multi-Timbre Mode

One of the most exciting features of the YPP-45 is that it is capable of playing all of its five voices at the same time. This feature is called **Multi-timbre**, and is most useful when using the YPP-45 as a Slave from a sequencer.

1) What is Multi-timbre?

The YPP-45 has two play modes: Normal and Multi-timbre. When the instrument is turned on, it is always in Normal mode, that is, you play a single voice on the keyboard. When in Multi-timbre mode, however, the YPP-45 will act as ten independent sound modules, with all five preset voices available for use in an ensemble performance.

 
2) Entering Multi-timbre mode

While holding down the MIDI/TRANSCOPE button, press the HARPSICHORD Voice Select button. To exit from Multi-timbre mode, repeat the same operation once again.

Now, try using the YPP-45 in Multi-timbre mode with a sequencer(*).

* To best use the YPP-45 in Multi-timbre mode, you will need a Master device which can control other devices with different MIDI channels at the same time. This could be a sequencer, MIDI-equipped personal computer, or MIDI master keyboard.

The following diagram relates to a Hand-Shaking connection between the YPP-45 and a sequencer. Try going quickly through the following steps, to become familiar with the use of Multi-timbre mode. The object is to record an ensemble performance of several parts onto the sequencer, then play it back with each part sounding in a different YPP-45 voice.

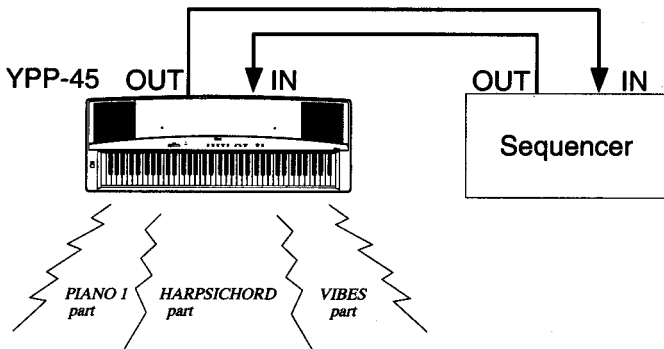

Step 1: Set the YPP-45 in Multi-timbre mode.

Step 2: Ensure the YPP-45 is set to Local Control On and the sequencer to Echo Off, or the YPP-45 to Local Control Off and the sequencer to Echo On.

Remember the notes on page 13.

Step 3: Select a MIDI transmitting channel from 1-10(*) on the YPP-45, then select the voice you desire.

* In Multi-timbre mode, the YPP-45's sound module can receive MIDI messages on channels 1-10. MIDI messages on channels 11-16 cannot control the YPP-45's sound module. Also note when you enter Multi-timbre mode, if you do not select a desired voice, the YPP-45 will automatically select one as shown in the following chart:

Channel 1:	PIANO 1
Channel 2:	PIANO 2
Channel 3:	E. PIANO
Channel 4:	HARPSICHORD
Channel 5:	VIBES
Channel 6:	PIANO 1
Channel 7:	PIANO 2
Channel 8:	E. PIANO
Channel 9:	HARPSICHORD
Channel 10:	VIBES

Step 4: Play one of the ensemble parts on the keyboard, pedalling as needed, and record it onto one of the tracks of the sequencer. You may, of course, change voices during play.

Step 5: Repeat Steps 3 and 4 as needed. In each case, select the appropriate MIDI channel (according to the voice desired for that part) and record onto a new track or overdub onto previously recorded tracks.

Step 6: Play back the completed ensemble performance from the sequencer. You will hear the different voices, corresponding to the different parts of the ensemble, played out simultaneously.

MAINTENANCE

- Every once in a while, wipe the cabinet clean with a soft cloth slightly moistened with a diluted soap solution, then wipe again with a dry cloth. Don't use chemically treated cloths or other chemicals like oil, solvents or insecticides.
- Do not expose the unit to direct sunlight, moisture or extremes in temperature. This includes not placing the unit on top of amplifiers, receivers or other heat sources, especially those with temperatures higher than 60°C (140°F).
- Place the unit on a firm, level, vibration-free surface. Do not set anything on top of it.
- Keep the unit away from sources of strong magnetism, and from highly dusty or humid areas.
- Do not remove the unit's cover, as this can cause electric shock. All repairs should be referred to a YAMAHA service center or qualified YAMAHA personnel.

YAMAHA IS NOT RESPONSIBLE FOR DAMAGE CAUSED BY IMPROPER USE.

TROUBLESHOOTING

Many "problems" can be solved quite easily. Before calling your YAMAHA dealer, please refer to the following table.

PROBLEM	POSSIBLE SOLUTION
<ul style="list-style-type: none"> • Power does not come on. • Volume is too low. • Sounds cannot be sustained. • No sound. • Distorted sound. • MIDI information is not being transmitted or received. 	<ul style="list-style-type: none"> • Make sure the power plug is firmly connected to the AC current. • Adjust the VOLUME slide control. • Make sure the foot switch is firmly connected to the DAMPER jack. • Remove headphones if plugged in. • Reset the YPP-45 to Local Control On if not in this state. • Lower the volume. • Match MIDI channels of transmitting and receiving instruments.

SPECIFICATIONS

Keyboard	76 keys (E0-G6) with touch sensitivity
Voice Technology	AWM
Voices	PIANO 1, PIANO 2, E. PIANO, HARPSICHORD, VIBES
Effects	DAMPER (foot) switch
Metronome	METRONOME button, TEMPO buttons
Controls	POWER switch, VOLUME slider, MIDI/TRANSCOPE button, DEMO button
Jacks	MIDI (IN, OUT), DAMPER, AUX. OUT (L, R), PHONES x 2
Amplifier	7.0 W x 1
Speakers	12.0 cm / 4 3/4" (8) x 2
Dimensions	1,203 mm x 774 mm x 433 mm / 47 3/8" x 30 1/2" x 17" (WxHxD, including the keyboard stand LW-11) 1,203 mm x 147 mm x 433mm / 47 3/8" x 5 3/4" x 17" (W x H x D, not including the keyboard stand LW-11)
Weight	22.5 kg / 49 lbs., 10 oz. (including the keyboard stand LW-11) 14 kg / 30 lbs., 14 oz. (not including the keyboard stand LW-11)
Accessories	Music Stand, Foot Switch FC5, Dust Cover

- * Depending on the distribution system and the regulations in your country or area, the Keyboard stand LW-11 may or may not be included with the product. If it is not included, it can be purchased separately.
- * YAMAHA reserves the right to make design and specification changes in the interests of product improvement without prior notice.

Function ...	Transmitted	Recognized	Remarks
Basic Channel	1-16	1-16	Default 1
Mode Messages	x	OMNI ON/OFF x	Default Mode3*
Note Number : True Voice	28-103 * * * * *	21-108 21-108	
Velocity Note On Note Off	9nH, v=1-127 9nH, v=0	9nH, v=1-127 9nH, v=0 or 8nH	
After Key's Touch Ch's	x x	x x	
Pitch Bender	x	x	
Control Change 64	o	o	DAMPER
Program Change : True #	o 0-4 * * * * *	o 0-4 0-4	
System Exclusive	o	o	
System : Song Pos : Song Sel Common : Tune	x x x	x x x	
System : Clock Real Time : Commands	x x	x x	
Aux : Local ON/OFF : All Notes OFF Messages : Active Sense : Reset	x x o x	o o (122-125) o x	
Notes :			

*Mode 1: OMNI ON, POLY MODE 2: OMNI ON, MONO
Mode 3: OMNI OFF, POLY Mode 4: OMNI OFF, MONO

o: YES
x: NO

FCC INFORMATION (U.S.A.)

1. IMPORTANT NOTICE: DO NOT MODIFY THIS UNIT!

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use the product.

2. IMPORTANT: When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product **MUST** be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

3. NOTE: This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices. This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of other electronic devices. Compliance

with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures:

Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to co-axial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Corporation of America, Electronic Service Division, 6600 Orangethorpe Ave, Buena Park, CA90620

The above statements apply **ONLY** to those products distributed by Yamaha Corporation of America or its subsidiaries.

* This applies only to products distributed by YAMAHA CORPORATION OF AMERICA.

Wichtiger Hinweis für die Benutzung in der Bundesrepublik Deutschland.

Bescheinigung des Importeurs

Hiermit wird bescheinigt, daß der/die/das

Personal Electronic Piano Typ: YPP-45

(Gerät, Typ, Bezeichnung)

in Übereinstimmung mit den Bestimmungen der

VERFÜGUNG 1046/84

(Amtsblattverfügung)

funk-entstört ist.

Der Deutschen Bundespost wurde das Inverkehrbringen dieses Gerätes angezeigt und die Berechtigung zur Überprüfung der Serie auf Einhaltung der Bestimmungen eingeräumt.

Yamaha Europa GmbH

Name des Importeurs

* Dies bezieht sich nur auf die von der Yamaha Europa GmbH vertriebenen Produkte.

IMPORTANT NOTICE FOR THE UNITED KINGDOM

Connecting the Plug and Cord

IMPORTANT. The wires in this mains lead are coloured in accordance with the following code:

BLUE : NEUTRAL

BROWN : LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.

Making sure that neither core is connected to the earth terminal of the three pin plug.

* This applies only to products distributed by Yamaha-Kemble Music (U.K.) Ltd.

CANADA

THIS DIGITAL APPARATUS DOES NOT EXCEED THE "CLASS B" LIMITS FOR RADIO NOISE EMISSIONS FROM DIGITAL APPARATUS SET OUT IN THE RADIO INTERFERENCE REGULATION OF THE CANADIAN DEPARTMENT OF COMMUNICATIONS.

LE PRESENT APPAREIL NUMERIQUE N'EMET PAS DE BRUITS RADIOELECTRIQUES DEPASSANT LES LIMITES APPLICABLES AUX APPAREILS NUMERIQUES DE LA "CLASSE B" PRESCRITES DANS LE REGLEMENT SUR LE BROUILLAGE RADIOELECTRIQUE EDICTE PAR LE MINISTERE DES COMMUNICATIONS DU CANADA.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

ATTENTION: POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.

* This applies only to products distributed by Yamaha Canada Music Ltd.
* Ceci ne s'applique qu'aux produits distribués par Yamaha Canada Musique Ltée.

Dit produkt is gefabriceerd in overeenstemming met de radiostoringsvoorschriften van de Richtlijn van de Raad (82/499/EEG).
ΑΥΤΗ Η ΣΥΣΚΕΥΗ ΑΝΤΑΠΟΚΡΙΝΕΤΑΙ ΣΤΙΣ ΑΠΑΙΤΗΣΕΙΣ ΤΩΝ ΟΔΗΓΙΩΝ ΤΗΣ ΕΥΡΩΠΑΙΚΗΣ ΟΙΚΟΝΟΜΙΚΗΣ ΚΟΙΝΟΤΗΤΑΣ 82/499/Ε.Ο.Κ..

Este produto está de acordo com o radio de interferencia frequente requeridos do Conselho Diretivo 82/499/EEC.

Dette apparat overholder det gældende EF-direktiv vedrørende radiostøj.
Cet appareil est conforme aux prescriptions de la directive communautaire 87/308/CEE.

Diese Geräte entsprechen der EG-Richtlinie 82/499/EWG und/oder 87/308/EWG.

This product complies with the radio frequency interference requirements of the Council Directive 82/499/EEC and/or 87/308/EEC.

Questo apparecchio è conforme al D.M.13 aprile 1989 (Direttiva CEE/87/308) sulla soppressione dei radiodisturbi.

Este producto está de acuerdo con los requisitos sobre interferencias de radio frecuencia fijados por el Consejo Directivo 87/308/CEE.

YAMAHA CORPORATION

IMPORTANT SAFETY INSTRUCTIONS

INFORMATION RELATING TO PERSONAL INJURY, ELECTRICAL SHOCK, AND FIRE HAZARD POSSIBILITIES HAS BEEN INCLUDED IN THIS LIST.

WARNING- When using any electrical or electronic product, basic precautions should always be followed. These precautions include, but are not limited to, the following:

- 1.** Read all Safety Instructions, Installation Instructions, Special Message Section items, and any Assembly Instructions found in this manual **BEFORE** marking any connections, including connection to the main supply.
- 2.** Main Power Supply Verification: Yamaha products are manufactured specifically for the supply voltage in the area where they are to be sold. If you should move, or if any doubt exists about the supply voltage in your area, please contact your dealer for supply voltage verification and (if applicable) instructions. The required supply voltage is printed on the name plate. For name plate location, please refer to the graphic found in the Special Message Section of this manual.
- 3.** This product may be equipped with a polarized plug (one blade wider than the other). If you are unable to insert the plug into the outlet, turn the plug over and try again. If the problem persists, contact an electrician to have the obsolete outlet replaced. Do **NOT** defeat the safety purpose of the plug.
- 4.** Some electronic products utilize external power supplies or adapters. Do **NOT** connect this type of product to any power supply or adapter other than one described in the owners manual, on the name plate, or specifically recommended by Yamaha.
- 5.** **WARNING:** Do not place this product or any other objects on the power cord or place it in a position where anyone could walk on, trip over, or roll anything over power or connecting cords of any kind. The use of an extension cord is not recommended! If you must use an extension cord, the minimum wire size for a 25' cord (or less) is 18 AWG. **NOTE:** The smaller the AWG number, the larger the current handling capacity. For longer extension cords, consult a local electrician.
- 6.** Ventilation: Electronic products, unless specifically designed for enclosed installations, should be placed in locations that do not interfere with proper ventilation. If instructions for enclosed installations are not provided, it must be assumed that unobstructed ventilation is required.
- 7.** Temperature considerations: Electronic products should be installed in locations that do not significantly contribute to their operating temperature. Placement of this product close to heat sources such as; radiators, heat registers and other devices that produce heat should be avoided.
- 8.** This product was **NOT** designed for use in wet/damp locations and should not be used near water or exposed to rain. Examples of wet/damp locations are; near a swimming pool, spa, tub, sink, or wet basement.
- 9.** This product should be used only with the components supplied or; a cart, rack, or stand that is recommended by the manufacturer. If a cart, rack, or stand is used, please observe all safety markings and instructions that accompany the accessory product.
- 10.** The power supply cord (plug) should be disconnected from the outlet when electronic products are to be left unused for extended periods of time. Cords should also be disconnected when there is a high probability of lightning and/or electrical storm activity.
- 11.** Care should be taken that objects do not fall and liquids are not spilled into the enclosure through any openings that may exist.
- 12.** Electrical/electronic products should be serviced by a qualified service person when:
 - a. The power supply cord has been damaged; or
 - b. Objects have fallen, been inserted, or liquids have been spilled into the enclosure through openings; or
 - c. The product has been exposed to rain; or
 - d. The product does not operate, exhibits a marked change in performance; or
 - e. The product has been dropped, or the enclosure of the product has been damaged.
- 13.** Do not attempt to service this product beyond that described in the user-maintenance instructions. All other servicing should be referred to qualified service personnel.
- 14.** This product, either alone or in combination with an amplifier and headphones or speaker/s, may be capable of producing sound levels that could cause permanent hearing loss. **DO NOT** operate for a long period of time at a high volume level or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should consult an audiologist. **IMPORTANT:** The louder the sound, the shorter the time period before damage occurs.
- 15.** Some Yamaha products may have benches and/or accessory mounting fixtures that are either supplied as a part of the product or as optional accessories. Some of these items are designed to be dealer assembled or installed. Please make sure that benches are stable and any optional fixtures (where applicable) are well secured **BEFORE** using. Benches supplied by Yamaha are designed for seating only. No other uses are recommended.

PLEASE KEEP THIS MANUAL

IMPORTANT SAFETY INSTRUCTION

PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THIS PRODUCT.
AN IMPORTANT PRECAUTIONARY MESSAGE HAS BEEN INCLUDED IN THIS LIST.

YAMAHA
YAMAHA CORPORATION

NAME PLATE LOCATION: The nameplate is located on the bottom panel. The Model, Serial Number, Power requirements, etc., are indicated on this plate. You should note the model, serial number and the date of purchase in the spaces provided below and retain this manual as a permanent record of your purchase.

Model _____

Serial No. _____

Purchase Date _____

LAGE DES TYPENSCHILDS: Das Typenschild befindet sich am Geräteboden. Modellbezeichnung, Seriennummer, Betriebsstrom etc. sind auf dem Typenschild angegeben. Tragen Sie Modellbezeichnung, Seriennummer und Kaufdatum in die unten vorhandenen Felder ein und bewahren Sie dieses Handbuch als permanenten Kaufbeleg auf.

Modell _____

Seriennummer _____

Kaufdatum _____

EMPLACEMENT DE LA PLAQUE SIGNALÉTIQUE: La plaque signalétique se trouve sur le panneau inférieur. Le modèle, le numéro de série, l'alimentation requise et autres paramètres sont indiqués sur cette plaque. Inscrire le modèle, le numéro de série et la date de l'achat dans l'espace prévu cidessous et conserver le mode d'emploi à titre d'enregistrement permanent de l'achat.

Modèle _____

N° de série _____

Date de l'achat _____

UBICACION DE LA PLACA DE CARACTERISTICAS: La placa de características está situada en el panel inferior. En esta placa se indican el modelo, el número de serie, la tensión de alimentación, etc. Anote el modelo, el número de serie, y la fecha de adquisición en los espacios ofrecidos a continuación, y guarde este manual como registro permanente de su adquisición.

Modelo _____

N.º de serie _____

Fecha de adquisición _____