

Traveler™

User's Guide for Windows



1280 Massachusetts Avenue
Cambridge, MA 02138
Business voice: (617) 576-2760
Business fax: (617) 576-3609
Technical support: (617) 576-3066
Tech support fax: (617) 354-3068
Tech support email: techsupport@motu.com
Web site: www.motu.com

About the Mark of the Unicorn License Agreement and Limited Warranty on Software

TO PERSONS WHO PURCHASE OR USE THIS PRODUCT: carefully read all the terms and conditions of the "click-wrap" license agreement presented to you when you install the software. Using the software or this documentation indicates your acceptance of the terms and conditions of that license agreement.

Mark of the Unicorn, Inc. ("MOTU") owns both this program and its documentation. Both the program and the documentation are protected under applicable copyright, trademark, and trade-secret laws. Your right to use the program and the documentation are limited to the terms and conditions described in the license agreement.

Reminder of the terms of your license

This summary is not your license agreement, just a reminder of its terms. The actual license can be read and printed by running the installation program for the software. That license agreement is a contract, and clicking "Accept" binds you and MOTU to all its terms and conditions. In the event anything contained in this summary is incomplete or in conflict with the actual click-wrap license agreement, the terms of the click-wrap agreement prevail.

YOU MAY: (a) use the enclosed program on a single computer; (b) physically transfer the program from one computer to another provided that the program is used on only one computer at a time and that you remove any copies of the program from the computer from which the program is being transferred; (c) make copies of the program solely for backup purposes. You must reproduce and include the copyright notice on a label on any backup copy.

YOU MAY NOT: (a) distribute copies of the program or the documentation to others; (b) rent, lease or grant sublicenses or other rights to the program; (c) provide use of the program in a computer service business, network, time-sharing, multiple CPU or multiple user arrangement without the prior written consent of MOTU; (d) translate, adapt, reverse engineer, decompile, disassemble, or otherwise alter the program or related documentation without the prior written consent of MOTU.

MOTU warrants to the original licensee that the disk(s) on which the program is recorded be free from defects in materials and workmanship under normal use for a period of ninety (90) days from the date of purchase as evidenced by a copy of your receipt. If failure of the disk has resulted from accident, abuse or misapplication of the product, then MOTU shall have no responsibility to replace the disk(s) under this Limited Warranty.

THIS LIMITED WARRANTY AND RIGHT OF REPLACEMENT IS IN LIEU OF, AND YOU HEREBY WAIVE, ANY AND ALL OTHER WARRANTIES, BOTH EXPRESS AND IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE LIABILITY OF MOTU PURSUANT TO THIS LIMITED WARRANTY SHALL BE LIMITED TO THE REPLACEMENT OF THE DEFECTIVE DISK(S), AND IN NO EVENT SHALL MOTU OR ITS SUPPLIERS, LICENSORS, OR AFFILIATES BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF USE, LOSS OF PROFITS, LOSS OF DATA OR DATA BEING RENDERED INACCURATE, OR LOSSES SUSTAINED BY THIRD PARTIES EVEN IF MOTU HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS WHICH MAY VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW THE LIMITATION OR EXCLUSION OF LIABILITY FOR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

Update Policy

In order to be eligible to obtain updates of the program, you must complete and return the attached Mark of the Unicorn Purchaser Registration Card to MOTU.

Copyright Notice

Copyright © 2004 by Mark of the Unicorn, Inc. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form or by any means whatsoever, without express written permission of Mark of the Unicorn, Inc., 1280 Massachusetts Avenue, Cambridge, MA, 02138, U.S.A.

Limited Warranty on Hardware

Mark of the Unicorn, Inc. and S&S Research ("MOTU/S&S") warrant this equipment against defects in materials and workmanship for a period of NINETY (90) DAYS from the date of original retail purchase. This warranty applies only to hardware products; MOTU software is licensed and warranted pursuant to separate written statements.

If you discover a defect, first write or call Mark of the Unicorn at (617) 576-2760 to obtain a Return Merchandise Authorization Number. No service will be performed on any product returned without prior authorization. MOTU will, at its option, repair or replace the product at no charge to you, provided you return it during the warranty period, with transportation charges prepaid, to Mark of the Unicorn, Inc., 1280 Massachusetts Avenue, MA 02138. You must use the product's original packing material for in shipment, and insure the shipment for the value of the product. Please include your name, address, telephone number, a description of the problem, and the original, dated bill of sale with the returned unit and print the Return Merchandise Authorization Number on the outside of the box below the shipping address.

This warranty does not apply if the equipment has been damaged by accident, abuse, misuse, or misapplication; has been modified without the written permission of MOTU, or if the product serial number has been removed or defaced.

ALL IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO NINETY (90) DAYS FROM THE DATE OF THE ORIGINAL RETAIL PURCHASE OF THIS PRODUCT.

THE WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHERS, ORAL OR WRITTEN, EXPRESS OR IMPLIED. NO MOTU/S&S dealer, agent, or employee is authorized to make any modification, extension, or addition to this warranty.

MOTU/S&S ARE NOT RESPONSIBLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY, OR UNDER ANY LEGAL THEORY, INCLUDING LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE OR REPLACEMENT OF EQUIPMENT AND PROPERTY AND COST OF RECOVERING REPROGRAMMING, OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH MOTU/S&S PRODUCTS.

Some states do not allow the exclusion or limitation of implied warranties or liability for incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

MOTU, AudioDesk, MOTU, Mark of the Unicorn and the unicorn silhouette logo are trademarks of Mark of the Unicorn, Inc.

This equipment has been type tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television equipment reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by any combination of the following measures:

- Relocate or reorient the receiving antenna
- Increase the separation between the equipment and the receiver
- Plug the equipment into an outlet on a circuit different from that to which the receiver is connected

If necessary, you can consult a dealer or experienced radio/television technician for additional assistance.

PLEASE NOTE: only equipment certified to comply with Class B (computer input/output devices, terminals, printers, etc.) should be attached to this equipment, and it must have shielded interface cables in order to comply with the Class B FCC limits on RF emissions.

WARNING: changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Contents

- 5 **Quick Reference:
Traveler Front Panel**
- 6 **Quick Reference:
Traveler Rear & Side Panels**
- 7 **Quick Reference:
MOTU FireWire Audio Console**
- 9 **About the Traveler**
- 15 **Packing List & Windows System Requirements**
- 17 **IMPORTANT!
Run the Traveler Software Installer First**
- 19 **Installing the Traveler Hardware**
- 39 **MOTU FireWire Audio Console**
- 45 **Traveler Front Panel Operation**
- 51 **Cubase, Nuendo and Other ASIO Software**
- 59 **Sonar and other WDM Software**
- 65 **Reducing Monitoring Latency**
- 71 **CueMix Console**
- 79 **FireWire SMPTE Console**
- 83 **Performance Tips & Troubleshooting**

SAFETY PRECAUTIONS AND ELECTRICAL REQUIREMENTS

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR OTHER MOISTURE.

CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING: DO NOT PERMIT FINGERS TO TOUCH THE TERMINALS OF POWER PLUGS WHEN INSTALLING OR REMOVING THE PLUG TO OR FROM A POWER SOURCE.

IMPORTANT SAFEGUARDS

1. Read instructions - All the safety and operating instructions should be read before operating the MOTU Traveler.
2. Retain instructions - The safety instructions and owner's manual should be retained for future reference.
3. Heed Warnings - All warnings on the MOTU Traveler and in the owner's manual should be adhered to.
4. Follow Instructions - All operating and use instructions should be followed.
5. Cleaning - Unplug the MOTU Traveler from the computer before cleaning and use a damp cloth. Do not use liquid or aerosol cleaners.
6. Power Sources - This MOTU Traveler should be operated only from the type of power source indicated on the marking label.
7. Power-Cord Protection - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords and plugs, convenience receptacles, and the point where they exit from the MOTU Traveler.
8. Lightning - For added protection for the MOTU Traveler during a lightning storm, unplug its power supply from any wall outlets. This will prevent damage to the MOTU Traveler due to lightning and power line surges.
9. Servicing - Do not attempt to service this MOTU Traveler yourself as opening or removing covers will expose you to dangerous voltage and other hazards. Refer all servicing to qualified service personnel.
10. Damage Requiring Service - Unplug the MOTU Traveler from the computer and refer servicing to qualified service personnel under the following conditions.
 - a. When the power supply cord or plug is damaged.
 - b. If liquid has been spilled or objects have fallen into the MOTU Traveler.
 - c. If the MOTU Traveler has been exposed to rain or water.
 - d. If the MOTU Traveler does not operate normally by following the operating instructions in the owner's manual.
 - e. If the MOTU Traveler has been dropped or the cabinet has been damaged.
 - f. When the MOTU Traveler exhibits a distinct change in performance, this indicates a need for service.
11. Replacement Parts - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
12. Safety Check - Upon completion of any service or repairs to this MOTU Traveler, ask the service technician to perform safety checks to determine that the product is in safe operating conditions.

ENVIRONMENT



Operating Temperature: 10°C to 40°C (50°F to 104°F)

AVOID THE HAZARDS OF ELECTRICAL SHOCK AND FIRE

Do not handle the power supply, or power cables with wet hands.

CAUTION: DANGER OF EXPLOSION IF BATTERY IS REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY MANUFACTURER. DISPOSE OF USED BATTERY ACCORDING TO MANUFACTURER'S INSTRUCTIONS.

Quick Reference: Traveler Rear & Side Panels

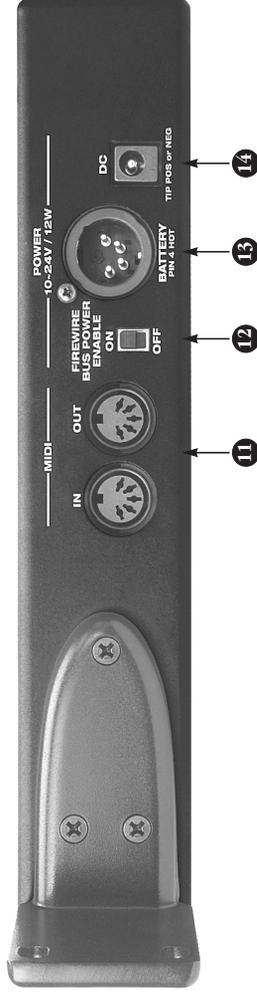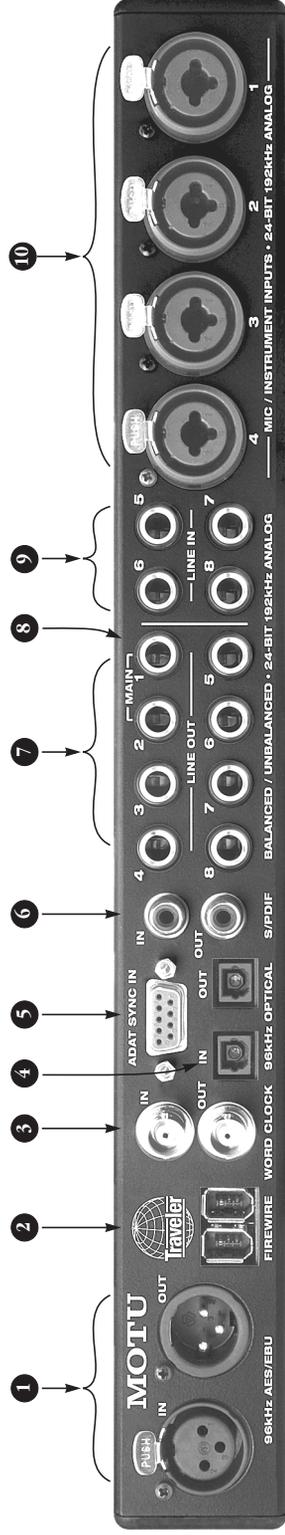

- These jacks provide stereo, 24-bit AES/EBU digital input and output at any sample rate up to 96kHz. They are disabled at the 4x rates (176.4 and 192kHz).
- Connect the Traveler to the computer here using the standard 1394 FireWire A cable provided with your Traveler. **Important note: it is best to turn off the Traveler when plugging in the FireWire cable, as this avoids the possibility of static discharge, which can harm the electrical components in the Traveler or your computer.** Use the second FireWire port to daisy-chain up to four MOTU FireWire audio interfaces to a single FireWire bus. You can also connect other FireWire devices. For details, see "Connecting multiple MOTU FireWire interfaces" on page 37.
- These are standard word clock jacks. Use them for a variety of applications, such as for digital transfers with devices that cannot slave to the clock supplied by their digital I/O connection with the Traveler. When the Traveler is operating at a 2x sample rate (88.2 or 96 kHz) or 4x sample rate (176.4 or 192kHz), the word clock output can either match the Traveler's sample rate or be reduced to the equivalent 1x rate (either 44.1 or 48 kHz). This setting is made via the FireWire Audio Console. See "Word Out" on page 44.
- These optical digital I/O connectors can be connected either to an ADAT-compatible "lightpipe" device (such as a digital mixer) or to a S/PDIF optical ("TOSlink")

- If you are using the Traveler with an ADAT, use this standard ADAT SYNC INPUT to connect the traveler to the end of your ADAT sync chain. For example, if you have three ADATs, chain the ADATs in the usual fashion (SYNC OUT to SYNC IN, etc.), and then connect the last ADAT's SYNC OUT to this SYNC IN. This connection allows you to make sample-accurate audio transfers between AudioDesk (or other sample-accurate software) and the ADATs. If you have a MOTU MIDI Timepiece AV or Digital Timepiece, make it the master of the ADAT SYNC chain so that you can control everything from AudioDesk (or your other MIDI Machine Control compatible software).
- These jacks provide stereo, 24-bit S/PDIF digital input and output at any sample rate up to 96kHz. They are disabled at the 4x rates (176.4 and 192kHz).

- The Traveler's eight analog outputs are gold-plated, balanced +4dB TRS (tip/ring/sleeve) quarter-inch connectors that can also accept an unbalanced plug. They are equipped with 24-bit, 128x oversampling converters.
- These two balanced, quarter-inch jacks serve as the powered studio monitors and then control the volume from the front panel volume knob. (Push the knob first to switch to main out volume control.) To hear disk tracks in your audio software on these main outs, assign the disk tracks (and master fader) to these main outs (Analog 1-2). You can also use GreMix DSP to monitor live Traveler inputs here as well.
- These 4-analog inputs are gold-plated, balanced TRS (tip/ring/sleeve) quarter-inch connectors that can also accept an unbalanced plug. The front panel LCD and CueMix Console software let you adjust them for either +4dB or -10dB input signals. They are 24-bit, 64x oversampling converters. These inputs (5 through 8) do not have microphone preamps, so they are best used for other instruments with line level signals.
- These four Neutrik™ combo (XLR/TRS) jacks accept either a mic cable or a cable with a quarter-inch plug. Both the low-impedance XLR jack and the high-imped-


- Connect a MIDI device here using standard MIDI cables. Connect the Traveler's MIDI OUT port to the MIDI IN port on the other device. Conversely, connect the Traveler's MIDI IN port to the MIDI OUT port on the other device. You can connect different devices to each port, such as a controller device to the IN port and a sound module to the OUT port. You can also daisy-chain MIDI devices, but be sure to manage their MIDI channels (so that they don't receive or transmit on the same channel).
- For bus-powered operation, turn on the Bus Power Enable switch. For battery operation (i.e. powering the Traveler from a battery pack via the 4-in XLR jack), turn this switch to the OFF position.
- Connect a 10-24V battery pack or other power supply here via a 4-in XLR cable. Remember to also turn off the bus power switch to the left.
- This jack accepts any standard 10-24V DC power supply with either tip-positive or tip-negative polarity. Remember to also turn the BUS POWER switch to the OFF position.

Quick Reference: MOTU FireWire Audio Console

Determines the clock source for your Traveler. If you're just using the analog ins and outs, set this to 'Internal'. The other settings are for digital transfers via S/PDIF, AES/EBU or external synchronization via the ADAT SYNC in port.

If you have a foot switch connected to another MOTU FireWire interface, these settings let you map the foot switch to any computer keyboard key for both the up and down position. This setting does not apply to the Traveler, which does not have a foot switch input.

Check this option if the audio software you are using with the Traveler does not support Windows WDM drivers and instead only supports legacy MME (Wave) drivers. When checked, this option makes all of the Traveler inputs and outputs available to legacy Wave-driver compatible audio software.

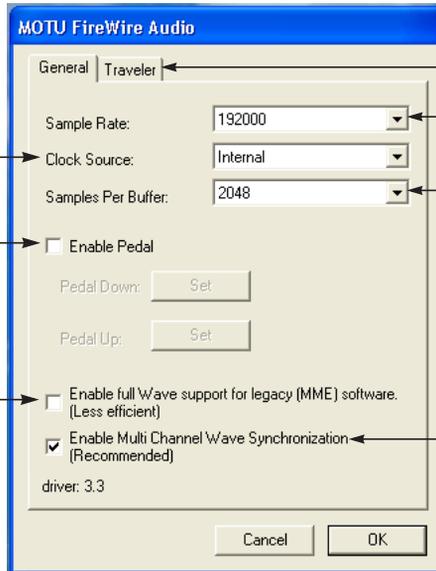

Click the tabs to access general MOTU FireWire interface settings or settings specific to the Traveler (or other connected interface.)


Choose the sample rate for the system here.

Choosing a smaller setting here reduces the delay you may hear when listening to live input that you are running through effects plug-ins in your software. But lower settings also increase the strain on your computer. For details, see "Samples Per Buffer" on page 43.

This option should always be left on (checked). There are only a few rare cases in which you would want to turn it off. For details, refer to the MOTU tech support database at www.motu.com.

This menu lets you choose what you will hear from the headphone jack. To mirror the main outs, choose *Analog 1-2*. Or you can mirror any other output pair. To hear the phones as their own independent output, choose *Phones 1-2*.

- Phones
- Analog 1-2
- Analog 3-4
- Analog 5-6
- Analog 7-8
- AES-EBU
- SPDIF
- ADAT 1-2
- ADAT 3-4
- ADAT 5-6
- ADAT 7-8

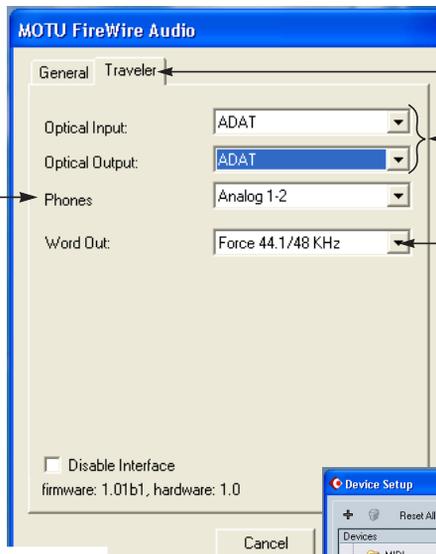


Click the Traveler tab to access these settings.

Choose the desired optical format you'd like to use for the optical input and output (ADAT or TOS Link). Note that they don't have to be the same.

If you are running a Traveler interface at a high sample rate (88.2, 96, 176.4 or 192kHz), this option appears in the interface tab. It lets you choose a word clock output rate that either matches the global sample rate (e.g. 192kHz) or reduces the word clock output to the corresponding 1x rate (either 44.1 or 48kHz).

Device Setup in Cubase SX

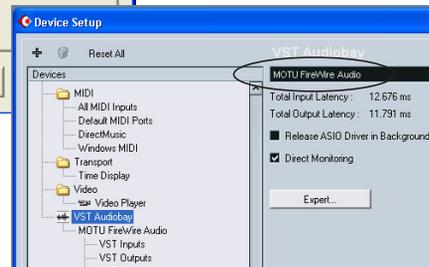

How to access these settings

Traveler There are several ways to access these settings:

- From the Windows Start menu, choose Programs>MOTU>MOTU FireWire Audio Console.
- From within Cubase SX, go to the Device Setup window and click the *VST Audiobay*.
- From within other applications, refer to their documentation.



CHAPTER 1 About the Traveler

OVERVIEW

The Traveler is a computer-based hard disk recording system for Mac OS and Windows that offers 20 inputs and 22 outputs. Analog recording and playback is offered at any standard sample rate up to 192kHz. At 96kHz or lower, all inputs and outputs, both analog and digital, can be accessed simultaneously. The Traveler consists of a light (3.8 pounds) and small (14.75x9 inches) aluminum alloy-encased interface that connects directly to a computer via a standard IEEE 1394 FireWire™ cable. The Traveler offers the following:

- Bus-powered and battery-powered operation
- Four combo XLR/TRS mic/guitar inputs with preamps and 48V phantom power
- Digital Precision Trim™ preamp gain adjustment
- Four 24-bit analog TRS inputs
- Eight 24-bit analog TRS outputs
- Eight-channel ADAT optical digital I/O
- S/PDIF digital I/O (optical and RCA)
- AES/EBU digital I/O
- ADAT SYNC IN and word clock I/O
- MIDI I/O
- On-board SMPTE synchronization
- Headphone jack
- Main volume knob (for headphone + main outs)
- CueMix™ DSP no-latency mixing & monitoring
- Front-panel programming
- Stand-alone mixing

With a variety of I/O formats, mic preamps, no-latency monitoring of live input and synchronization capabilities, the Traveler is a complete, portable “studio in a box” when used with a Macintosh or Windows computer. A WDM driver is included for audio applications running under Windows Me/2000/XP. Also included are ASIO2 and GSIF2 drivers for multi-channel operation with any Windows audio software that supports these drivers.

THE TRAVELER I/O REAR PANEL

The Traveler rear panel has the following connectors:

- Eight gold-plated, balanced +4dB quarter-inch (TRS) analog outputs (with 24-bit 192kHz converters)
- Four combo XLR/TRS mic/instrument inputs
- Four gold-plated, balanced -10/+4 dB quarter-inch (TRS) analog inputs (with 24-bit 192kHz converters)
- One set of ADAT optical ‘light pipe’ connectors (8 channels of ADAT optical I/O at 44.1/48kHz or 4 channels at 88.2/96kHz), individually switchable to optical S/PDIF (‘TOSLink’)
- RCA S/PDIF in/out
- AES/EBU in/out
- One 9-pin ADAT SYNC IN connector
- Word clock in/out
- Two 1394 FireWire jacks

20 inputs and 22 outputs

All Traveler inputs and outputs can be used simultaneously, for a total of 20 inputs and 22 outputs:

Connection	Input	Output
Analog 24-bit 192kHz on bal/unbal TRS	4	8
Mic preamps 24-bit 192kHz on XLR/TRS combo	4	-
ADAT optical digital (at 44.1 or 48kHz)	8	8
AES/EBU 24-bit 96kHz digital	stereo	stereo
SPDIF 24-bit 96kHz digital	stereo	stereo
Headphone output	-	stereo
Total	20	22

All inputs and outputs are discrete and can be active simultaneously.

The ADAT optical ports provide 4 channels of I/O at 88.2 or 96kHz. They can also be independently configured as stereo TOSLink SPDIF at any supported sample rate (up to 96kHz).

All digital I/O is disabled for 192kHz operation.

The headphone outputs can operate as an independent output pair, or they can mirror any other Traveler output pair, such as the main outs.

Mic/instrument inputs

The four mic/instrument inputs are equipped with preamps and Neutrik™ “combo” XLR/TRS jacks, which accept low-Z XLR microphone inputs or high-Z quarter-inch guitar/instruments inputs.

The total gain range for these preamps, including the 20dB pad, is 73dB, allowing you to connect anything from guitars and microphones to +4dB or -10dB line level signals. Preamp gain and pad can be controlled from the front panel digital rotary encoders/switches or the included CueMix Console™ software.

Analog

All four quarter-inch analog inputs are equipped with 24-bit 192kHz, 64x oversampling A/D converters. All eight analog outputs have 24-bit 128x oversampling D/A converters. All audio is carried to the computer in a 24-bit data stream. All eight analog outputs and four quarter-inch inputs are on balanced TRS +4dB quarter-inch jacks. All of these jacks can also accept unbalanced plugs.

The quarter-inch analog inputs can be switched in pairs between a +4 and -10dB reference level. An additional 6dB of software boost can be applied to each channel individually via the CueMix Console software application or via the front panel LCD display.

Optical

The Traveler optical jacks support two digital audio formats: ADAT and S/PDIF. The ADAT optical format provides eight channels of 24-bit digital audio at either 44.1 or 48 kHz, and four channels at 88.2 or 96kHz. The optical S/PDIF format (often referred to as *TOSLink*), supplies stereo S/PDIF input or output. The optical jacks are disabled at the 4x sample rates (176.4 and 192kHz).

AES/EBU

The Traveler rear panel provides a standard AES/EBU digital input and output that supports digital I/O at 44.1, 48, 88.2 and 96 kHz. The AES/EBU jacks are disabled at the 4x sample rates (176.4 and 192kHz).

S/PDIF

The Traveler rear panel provides S/PDIF input and output in two different formats: RCA “coax” and optical “TOSLink”. The RCA jacks are dedicated to the S/PDIF format. The TOSLink jacks can be used either for either TOSLink or ADAT optical. The optical input/output jacks can operate independently. For example, the optical input can be set to

TOSLink while the optical output is set to ADAT. The RCA and optical S/PDIF jacks are disabled at the 4x sample rates (176.4 and 192kHz).

On-board SMPTE synchronization

The Traveler can resolve directly to SMPTE time code via any analog input, without a separate synchronizer. The Traveler can also generate time code via any analog output. The Traveler provides a DSP-driven phase-lock engine with sophisticated filtering that provides fast lockup times and sub-frame accuracy. Direct time code synchronization is supported by Cubase, Nuendo and other audio sequencer software that supports the ASIO2 sample-accurate sync protocol.

The included FireWire SMPTE Console™ software provides a complete set of tools to generate SMPTE for striping, regenerating or slaving other devices to the computer.

ADAT sync: sample-accurate synchronization

The Traveler's standard 9-pin ADAT SYNC IN connector provides sample-accurate synchronization with all Alesis ADAT tape decks connected to the system—or any device that supports the ADAT sync format. For example, if you digitally transfer a single track of material from an ADAT via light pipe into audio workstation software on the computer, and then transfer the track back to the ADAT, it will be recorded exactly at its original location, down to the sample.

Word clock

The Traveler provides standard word clock that can slave to any supported sample rate. In addition, word clock can resolve to and generate “high” and “low” sample rates. For example, if the Traveler global sample rate is set to 96 kHz, the word clock input can resolve to a “low” rate of 48 kHz. Similarly, when the Traveler is operating at 96 kHz, the MOTU FireWire Audio Console lets you choose a word clock output rate of 48 kHz.

1394 FireWire

The two 1394 FireWire jacks accept a standard IEEE 1394 FireWire cable to connect the Traveler to a FireWire-equipped Macintosh or Windows computer. The second jack can be used to daisy chain multiple interfaces — up to four MOTU FireWire interfaces — on a single FireWire bus. It can also be used to connect other FireWire devices without the need for a FireWire hub. The Traveler has the ability to power itself from its FireWire connection to the computer.

THE TRAVELER FRONT PANEL

Phantom power

Individual 48V phantom power can be enabled for each preamp with the four front panel switches.

Digital Precision Trim™ rotary encoders

The four Digital Precision Trim™ detented rotary encoders provide preamp gain adjustment and also serve as 20dB pad switches when pushed. When you turn these trim knobs, input gain can be adjusted in 1dB increments, and the LCD display provides active numeric feedback as the adjustment is made.

Headphone output and main volume control

The Traveler front panel includes a quarter-inch stereo headphone output jack and volume knob. The volume knob also controls the rear-panel main outs. Push the knob to toggle between them. The LCD display provides feedback.

CueMix™ DSP no-latency on-board mixing

The CueMix DSP section of the front-panel provides access to the Traveler's on-board mixing features, as well as global system settings. Together, these features provide complete stand-alone operation, without a computer. The Traveler can mix all inputs to any output pair, and up to four such mixes can be independently programmed and simultaneously operated.

Backlit LCD display

Any Traveler setting can be accessed directly from the front panel using the six rotary encoders and the 2x16 backlit LCD display. CueMix DSP settings such as input gain, panning, +4/-10 input level, 6dB boost, stereo pair grouping, mix output assignment and others are quickly accessed, clearly marked and easy to adjust. Sixteen presets can be created, saved, recalled and duplicated.

Metering section

The front panel of the Traveler displays several banks of input metering and output activity LEDs. The round analog, SPDIF and AES/EBU output activity LEDs, as well as the ADAT optical in/out activity LEDs, display signal presence. The threshold for these lights is approximately -42 dB. The four-segment input meters provide dedicated multi-segment metering for their respective inputs.

The *Clock* lights indicate the global sample rate (as chosen in the MOTU FireWire Audio Console software). The LOCK and TACH LEDs provide feedback for the Traveler's on-board SMPTE synchronization features.

TRAVELER SIDE PANEL

MIDI I/O

The Traveler's standard MIDI IN and MIDI OUT jacks supply 16 channels of MIDI I/O to and from the computer via the Traveler's FireWire connection.

Bus power

The Traveler can draw power from three possible sources:

1. the computer (via the FireWire cable connection between the Traveler and the computer)
2. an external battery pack (purchased separately)
3. a DC power supply

If you are using FireWire bus power only, then the Bus Power switch needs to be turned on. However, if you are using battery or DC power, and you do not wish to draw power from the computer (to conserve your laptop battery, for example), you can disable bus power by moving the Bus Power switch to the *Off* position.

Battery power

The 4-pin XLR battery power jack allows you to connect a standard DC battery pack for extended remote recording. The battery pack must supply a minimum of 10-18 volts and 12 watts. For further details, contact your preferred supplier of professional audio/video equipment.

Power supply

If you do not want the Traveler to draw power from the computer, and AC power is available, you can power the Traveler from any standard 10-18V, 12 watt DC power supply with any polarity (tip positive or negative).

16-BIT AND 24-BIT RECORDING

The Traveler system handles all data with a 24-bit signal path, regardless of the I/O format. You can record and play back 16-bit or 24-bit audio files at any supported sample rate via any of the Traveler's analog or digital inputs and outputs. 24-bit audio files can be recorded with any compatible host application that supports 24-bit recording.

HOST AUDIO SOFTWARE

The Traveler system ships with a standard WDM Windows driver that allows you to record, edit, play back and mix your Traveler projects using your favorite Windows audio software.

The Traveler also includes ASIO2 and GSIF2 drivers for multi-channel compatibility with any audio application that supports these drivers.

A COMPUTER-BASED SYSTEM

Regardless of what software you use with the Traveler, the host computer determines the number of tracks the software can record and play simultaneously, as well as the amount of real-time effects processing you can apply to your mix. A faster computer with more RAM and faster hard drives will allow more simultaneous tracks and real-time effects than a slower computer with less RAM and slower hard drives. Today's fastest computers can typically play as many as 72 tracks or more.

CHAPTER 2 **Packing List & Windows System Requirements**

PACKING LIST

The Traveler ships with the items listed below. If any of these items are not present in your Traveler box when you first open it, please immediately contact your dealer or MOTU.

- One Traveler I/O rack unit
- One set of removable rack ears
- One 1394 “FireWire” cable
- One Traveler Mac/Windows manual
- One AudioDesk Manual
- One cross-platform CD-ROM
- Product registration card

WINDOWS SYSTEM REQUIREMENTS

The Traveler system requires the following Windows system:

- A 300 MHz Pentium-based PC compatible or faster equipped with at least one FireWire port
- A Pentium III processor or faster is recommended
- At least 256 MB (megabytes) of RAM (512 MB or more is recommended)
- Windows Me, 2000 or XP
- A large hard drive (preferably at least 20 GB)

PLEASE REGISTER TODAY!

Please send in the registration card included with your Traveler system. As a registered user, you will be eligible to receive on-line technical support email and announcements about product enhancements as soon as they become available. Only registered users receive these special update notices, so please, complete and mail this registration card!

Thank you for taking the time to register your new MOTU products!

IMPORTANT! Run the Traveler Software Installer First

OVERVIEW

- Install the Traveler software first! 17
- Installing the Traveler software 17
- MOTU FireWire Audio Console..... 18
- ASIO MOTU FireWire Audio Driver 18
- The MOTU FireWire audio WDM driver 18
- MOTU GSIF FireWire driver 18
- CueMix Console 18
- FireWire SMPTE Console 18

INSTALL THE TRAVELER SOFTWARE FIRST!

Before you connect the Traveler audio interface to your computer and turn it on, insert the Traveler software CD and run the Traveler Software Installer. This ensures that all the Traveler components are properly installed in your system.

If Windows asks you to locate the drivers

If you've already connected the Traveler to your computer and switched it on, Windows probably issued an alert notifying you that the Traveler requires drivers, followed by another window asking you to locate the drivers on disk. If this happens:

- 1 Cancel the driver search.
- 2 Switch off the Traveler.
- 3 Run the Traveler Software Installer as instructed in the next section.

INSTALLING THE TRAVELER SOFTWARE

To install the Traveler software, insert the MOTU Audio CD-ROM and follow the directions it gives you on your computer screen. The Traveler ships with the following software and drivers for Windows Me, 2000 and XP:

Software component	Purpose
MOTU FireWire Audio Console	Provides access to all of the settings in the Traveler hardware.
ASIO MOTU FireWire Audio Driver	Allows Cubase or other ASIO-compliant software to do multi-channel input and output with the Traveler. Only required if you are using Cubase or another ASIO-dependent program.
MOTU FireWire WDM Driver	Allows any WDM-driver compatible audio software to do multichannel input and output with the Traveler.
MOTU FireWire GSIF Driver	Allows you to use your Traveler with Tascam GigaStudio.
MOTU FireWire MIDI Driver	Provides MIDI input and output via the Traveler MIDI ports.
FireWire CueMix Console	Gives you complete control over the Traveler's CueMix DSP feature, which provides no-latency monitoring of live inputs.
FireWire SMPTE Console	Provides access to the Traveler's SMPTE time code and video sync features.

MOTU FIREWIRE AUDIO CONSOLE

The MOTU FireWire Audio Console (available in the Start menu) gives you access to all of the settings in the Traveler, such as the clock source and sample rate. For complete details, see chapter 5, “MOTU FireWire Audio Console” (page 39).

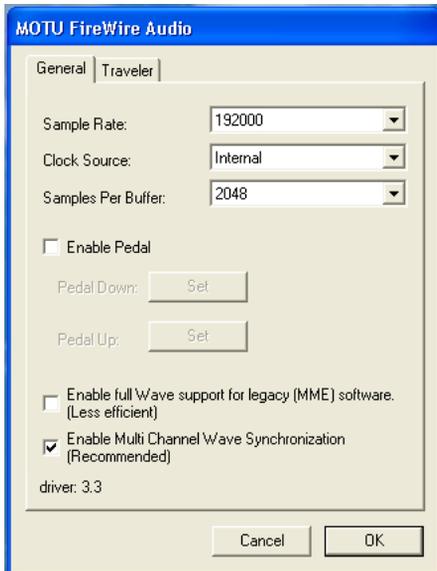


Figure 3-1: The MOTU FireWire Audio Console gives you access to all of the settings in the Traveler hardware.

ASIO MOTU FIREWIRE AUDIO DRIVER

ASIO stands for *Audio Streaming Input and Output*. The ASIO MOTU FireWire driver allows Traveler to provide multi-channel input and output for Steinberg’s Cubase SX and Nuendo software, or any other audio application that supports ASIO drivers.

The ASIO MOTU FireWire driver is only required if you are using Cubase SX, Nuendo, or another audio program that relies on the ASIO driver to support multi-channel I/O with the Traveler.

The ASIO MOTU FireWire driver is installed by the Traveler Software Installer and properly registered with Windows, so you don’t need to be concerned about its installation or location.

For details about using Cubase and Nuendo with the Traveler, see chapter 7, “Cubase, Nuendo and Other ASIO Software” (page 51).

THE MOTU FIREWIRE AUDIO WDM DRIVER

The MOTU FireWire Audio WDM driver provides standard multi-channel input and output for audio applications running under Windows Me, 2000 or XP. See chapter 8, “Sonar and other WDM Software” (page 59) for details.

The MOTU FireWire Audio installer CD installs the MOTU FireWire Audio WDM driver into Windows for you.

MOTU GSIF FIREWIRE DRIVER

The MOTU GSIF FireWire Driver allows you to access the Traveler as an audio interface for Tascam GigaStudio and related products. The GSIF driver features low-latency multi-channel performance.

MOTU FIREWIRE MIDI DRIVER

This driver allows you to access the Traveler’s MIDI input and output ports. The ports are published in Windows and are available to all MIDI software.

CUEMIX CONSOLE

This program provides a mixing console that gives you control over the Traveler’s no-latency CueMix DSP features. For details, see chapter 10, “CueMix Console” (page 71).

FIREWIRE SMPTE CONSOLE

The FireWire SMPTE Console software provides a complete set of tools for resolving the Traveler to SMPTE time code, and to generate SMPTE for striping, regenerating or slaving other devices to the computer. For details, see chapter 11, “FireWire SMPTE Console” (page 79).

CHAPTER 4 Installing the Traveler Hardware

OVERVIEW

Here's an overview for installing the Traveler:

Important note before you begin! 19

Take these precautions to prevent damage to your computer, the Traveler and other equipment.

Connect the Traveler interface 20

Connect the Traveler to the computer.

Connect audio inputs and outputs 20

Make optical and analog connections as desired.

Connect MIDI gear 21

Connect a controller, synth or control surface.

Power options 22

Choose from among several convenient options.

A typical Traveler setup (no mixer) 25

An example setup for computer-based mixing/FX.

Using the Traveler with a mixer 26

An example setup for a mixer-based studio.

Making sync connections 27

If you need to resolve the Traveler with other devices, make the necessary sync connections.

Do you need a synchronizer? 28

Sample-accurate sync 29

Sample-accurate ADAT sync 30

Sample-accurate ADAT sync with no synchronizer .. 31

Syncing to SMPTE time code 32

Syncing to video and/or SMPTE time code using a synchronizer 33

Syncing optical devices 34

Syncing S/PDIF and AES/EBU devices 35

Syncing word clock devices 36

Syncing large systems 36

Connecting multiple MOTU FireWire interfaces 37

IMPORTANT NOTE BEFORE YOU BEGIN!

Before you begin installing the Traveler (or any bus-powered device), take these important precautionary measures to avoid damaging the sensitive electrical components in your computer, the Traveler or other devices being connected:

- Turn off the computer.
- Turn off the Traveler's front panel power switch.
- Turn off the power of any other devices.
- Touch the metal casing of the Traveler to discharge any static electricity that you may be carrying just before the installation.

After you have made all of the necessary connections, as described in this chapter, turn on the devices in this sequence:

1. Turn on the computer.
2. Turn on the Traveler.
3. Turn on other devices connected to the Traveler.

CONNECT THE TRAVELER INTERFACE

- 1 Make sure your computer and the Traveler are switched off.
- 2 Plug one end of the Traveler FireWire cable (included) into the FireWire socket on the computer as shown below in Figure 4-1.
- 3 Plug the other end of the FireWire cable into the Traveler I/O as shown below in Figure 4-1.

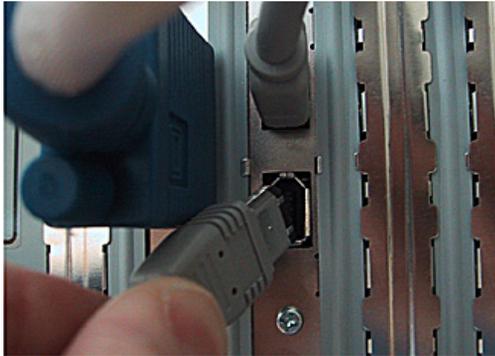


Figure 4-1: Connecting the Traveler to the computer.

CONNECT AUDIO INPUTS AND OUTPUTS

The Traveler audio interface has the following audio input and output connectors:

- 8 balanced, +4 dB quarter-inch analog outputs
- 4 balanced +4/-10 dB quarter-inch analog inputs
- 4 Neutrik™ XLR/quarter-inch analog inputs with preamps
- 1 pair of RCA S/PDIF in and out
- 1 pair of AES/EBU in and out
- 1 pair of optical in/out switchable between ADAT (“Lightpipe”) or optical S/PDIF (TOSLink)

Here are a few things you should keep in mind as you are making these connections to other devices.

Mic/guitar/instrument inputs

Connect a microphone, guitar or other similar instrument to the front-panel inputs, as recommended in the table below. If your microphone requires phantom power, move the 48V phantom power switch on the front panel to the right (enabled). Use the trim knobs on the front panel to adjust the input level as needed for each input. The LCD provides feedback for the current trim setting. The Traveler’s input trims are digital controlled, so they allow you to make fine-tuned adjustments in approximately 1dB increments. Use the four input level meters on the front panel (labeled *ANALOG 1-4*) to calibrate the level. These meters register for both the XLR and TRS input.

Input	48V phantom power	Pad
Condenser mic	On	Off
Dynamic mic	Off	Off
Guitar	Off	Off
Synth, sampler, etc.	Off	Off
+4dB line level input	Off	On

To toggle the pad, push the input's trim knob. The LCD provides feedback for the current pad setting. The pad settings above are recommended initial settings. Use the front-panel trim knobs to adjust input levels, and use the Traveler's front-panel 4-segment meters to adjust the gain accordingly. If necessary, after adjusting the trim, you can enable or disable the pad as needed, depending on actual signal levels.

Quarter-inch analog

The quarter-inch analog inputs (5-8) and outputs (1-8) are balanced TRS connectors that can also accept an unbalanced plug. The outputs are all referenced to +4dBu. The inputs can be manually set to either +4 or -10dBu. Use the front panel controls to adjust the reference level (+4/-10) as needed for each input (or input pair) as follows:

- 1 Turn the PARAM knob until you see the "4/10" setting displayed in the LCD, as shown below.

If turning the PARAM knob doesn't do anything, press the SETUP knob once, and then turn it.

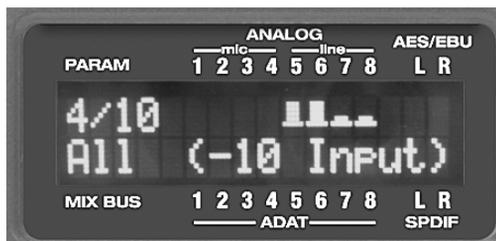


Figure 4-2: Setting the reference level for the four TRS analog inputs.

- 2 Turn the CURSOR knob until the desired input flashes.
- 3 Turn (or press) the VALUE knob to toggle the input between a +4 or -10dB reference level setting.

Optical

Reminder: optical goes OUT to IN and IN to OUT, like MIDI. The optical jacks can be connected to either an ADAT "lightpipe" device or an optical

S/PDIF "TOSLink" device. Just make the connections as needed and then you'll set the format later in the MOTU FireWire Audio Console. Input and output are independent. For example, you could connect ADAT optical input from your digital mixer and connect TOSLink optical output to your DAT deck.

The optical S/PDIF jacks are disabled at the 4x sample rates (176.4 and 192kHz).

Analog outputs 1-2 can serve as main outs

Analog outputs 1-2 can serve as main outputs. The main out volume is controlled by the volume knob on the front panel. Push the knob to toggle between phone and main out volume control. In a standard studio configuration, the main outs are intended for a pair of studio monitors, but they can also be used as regular outputs for any purpose.

CONNECT MIDI GEAR

Connect your MIDI device's MIDI IN jack to the Traveler's MIDI OUT jack (Connection A below). Conversely, connect the MIDI device's MIDI OUT jack to the Traveler's MIDI IN jack (Connection B).

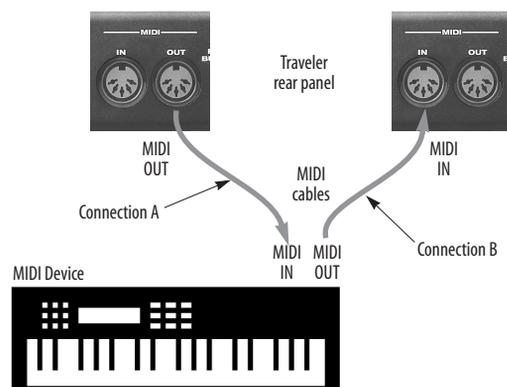


Figure 4-3: Connecting a MIDI device to the Traveler.

One-way MIDI connections

MIDI devices that do not receive MIDI data, such as a dedicated keyboard controller, guitar controller, or drum pad, only need Connection B

shown in Figure 4-3. Similarly, devices that never send data, such as a sound module, only need Connection A. Make both connections for any device that needs to both send and receive MIDI data.

Connecting additional gear with MIDI THRU

If you need to connect several pieces of MIDI gear, run a MIDI cable from the MIDI THRU of a device already connected to the Traveler to the MIDI IN on the additional device as shown below in Figure 4-4. The two devices then share the Traveler's MIDI OUT port. This means that they share the same set of 16 MIDI channels, too, so try to do this with devices that receive on only one MIDI channel (such as effects modules) so their receive channels don't conflict with one another.

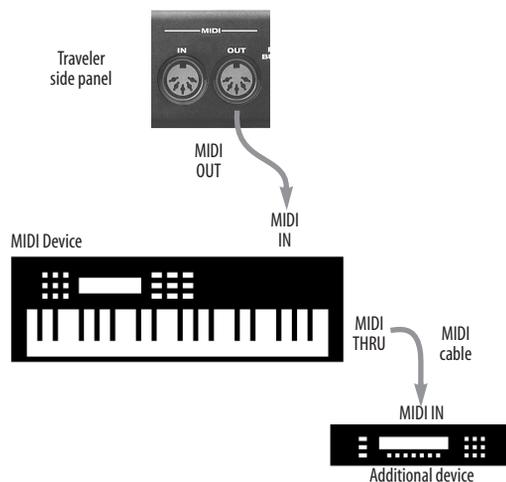


Figure 4-4: Connecting additional devices with MIDI THRU ports.

POWER OPTIONS

The Traveler can draw power from three possible sources:

1. the computer (via FireWire)
2. an external battery pack
3. a DC power supply



Figure 4-5: The Traveler's battery and power supply options.

Bus power requirements

The Traveler draws all the power it needs from the FireWire bus connection to the computer. However, the FireWire connection to the computer must meet all of the requirements discussed below.

6-pin FireWire connectors

The Traveler can only draw power over the FireWire bus from a 6-pin to 6-pin cable, or a 6-pin to 9-pin (FireWire B) cable. It cannot draw power from a FireWire cable with a 4-pin connector, as shown below:

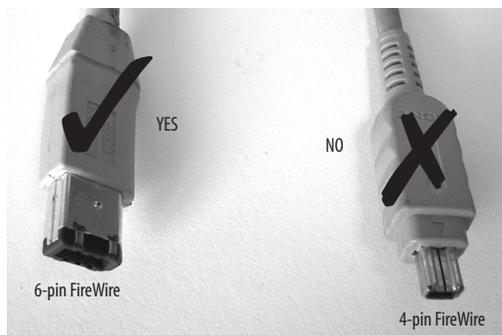


Figure 4-6: 4-pin FireWire connectors cannot be used for bus power.

When operating under bus power, daisy-chaining is not recommended

The Traveler can be daisy-chained with other FireWire devices from a single FireWire connection to the computer. However, if the Traveler is operating under bus power, this is not recommended. If you need to daisy chain the Traveler with other devices on the same FireWire bus, power the Traveler with a DC power supply (or battery), and turn off the Bus Power switch on the side panel. The other devices on the chain should also have their own power supply. In general, bus-powered FireWire devices should not be daisy-chained.

FireWire adapter products must be powered

If you are using a FireWire adapter (a third-party product that supplies one or more FireWire ports to your computer), it must have direct access to a power supply:

- **PCI FireWire cards** — If you plan to connect the Traveler to a PCI card and run the Traveler under bus power, the PCI card must have a direct connection to the power supply harness inside your computer. This is the same power supply harness to which you connect internal hard drives, CD/DVD drives, etc.
- **PCMCIA slot adapters** — If you plan to connect the Traveler to a PC card FireWire adapter (inserted in the PC card slot in your laptop), it must provide a 6-pin connection and it must also have its own power supply. Most commonly, these types of products have a DC power adapter that plugs into an AC wall outlet. As you can see, however, this situation does not allow for remote battery operation, as the PC card adapter requires AC.

Examples of bus- powered operation

Here are a few typical examples of bus-powered Traveler operation:

Bus power from a desktop computer

Your desktop computer is running off of its usual AC power connection, and the Traveler draws power from the FireWire cable connected to the computer. There are no limits to running time.

Bus power from an AC-powered laptop

This scenario is identical to the desktop situation described above: the laptop is powered by AC, the Traveler is powered via the FireWire bus and there are no limits to running time.

Bus power from a battery-powered laptop

The laptop is being powered by its own battery, and the Traveler is being powered by its FireWire connection to the computer. So the laptop battery is supplying power to both the laptop and the Traveler. This is the most compact and portable operating scenario. Running time is determined by the capacity of the laptop battery. For extended recording sessions, bring extra, fully charged laptop batteries.

Powering the Traveler from a battery pack

The 4-pin XLR battery jack on the Traveler side panel allows you to connect a standard DC battery pack, which is ideal for extended remote recording. These products can provide multiple hours of operation, depending on their capacity. The battery pack should supply 10-18 volts and 12 watts. A typical application would employ a 12 volt battery, therefore requiring 1 amp. In this scenario, a 1 amp-hour battery will power the unit for 1 hour. A 10 amp-hour battery will power the unit for 10 hours. Follow the manufacturer's recommendations for battery discharge for proper battery maintenance. For further details, contact your preferred supplier of professional audio/video equipment.

DC power supply

If you do not want the Traveler to draw power from the computer, and AC power is available, you can power the Traveler from any standard 8-18 volt, 12 watt DC power supply with any polarity (tip positive or negative), and amperage as shown below. To prevent the Traveler from drawing power from the computer, turn off the Bus Power switch.

Voltage	Amperage
9 volts	1.33 amps
12 volts	1 amp
18 volts	0.66 amps

The Bus Power Enable/Disable switch

The Bus Power Enable/Disable switch on the side panel of the Traveler lets you control whether or not the Traveler draws power from the computer via FireWire.

For example, when battery or DC power supply options are not being used, and FireWire is the only available power source, turn on the Bus Power switch.

If you are powering the Traveler via battery or DC power supply, and you do not want it to draw power from the computer (perhaps because it is a laptop running under its own battery, and you don't want the Traveler to run down the laptop's battery unnecessarily), turn off the Bus Power switch.

A TYPICAL TRAVELER SETUP (NO MIXER)

Here is a typical Traveler studio setup. This rig can be operated without an external mixer. All mixing and processing can be done in the computer with audio software. During recording, you can use the

Traveler's CueMix™ DSP no-latency monitoring to listen to what you are recording via the main outs, headphone outs, or any other output pair. You can control monitoring either from the front panel or from the included CueMix Console software.

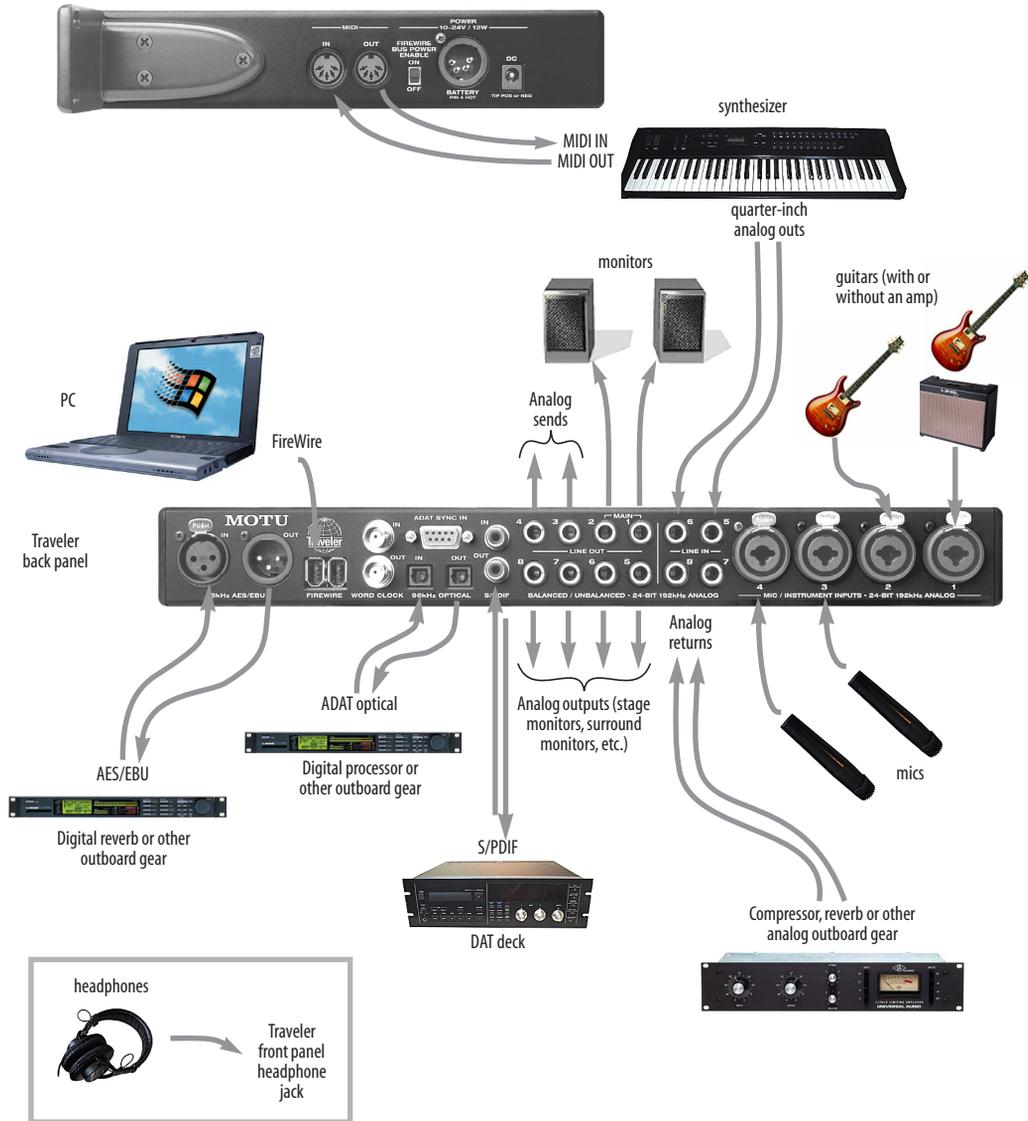


Figure 4-7: A typical Traveler studio setup.

USING THE TRAVELER WITH A MIXER

While there are many ways to use the Traveler with an external mixer, typically the Traveler serves as a multi-channel “pipeline” between the mixer and the computer. If your mixer is analog, connect the analog section of the Traveler to your mixer. If your mixer is digital, and it has ADAT optical I/O, you can connect them optically as shown below in Figure 4-8. The Traveler’s available analog, SPDIF

and AES/EBU inputs and outputs can serve as an extension to the mixer I/O, but then you will probably find yourself mixing in two places: the mixer and the computer. A word of advice: if you would like to use the Traveler with an external mixer, use the mixer for mixing. Trying to mix large multitrack projects in two places can become very cumbersome very quickly.

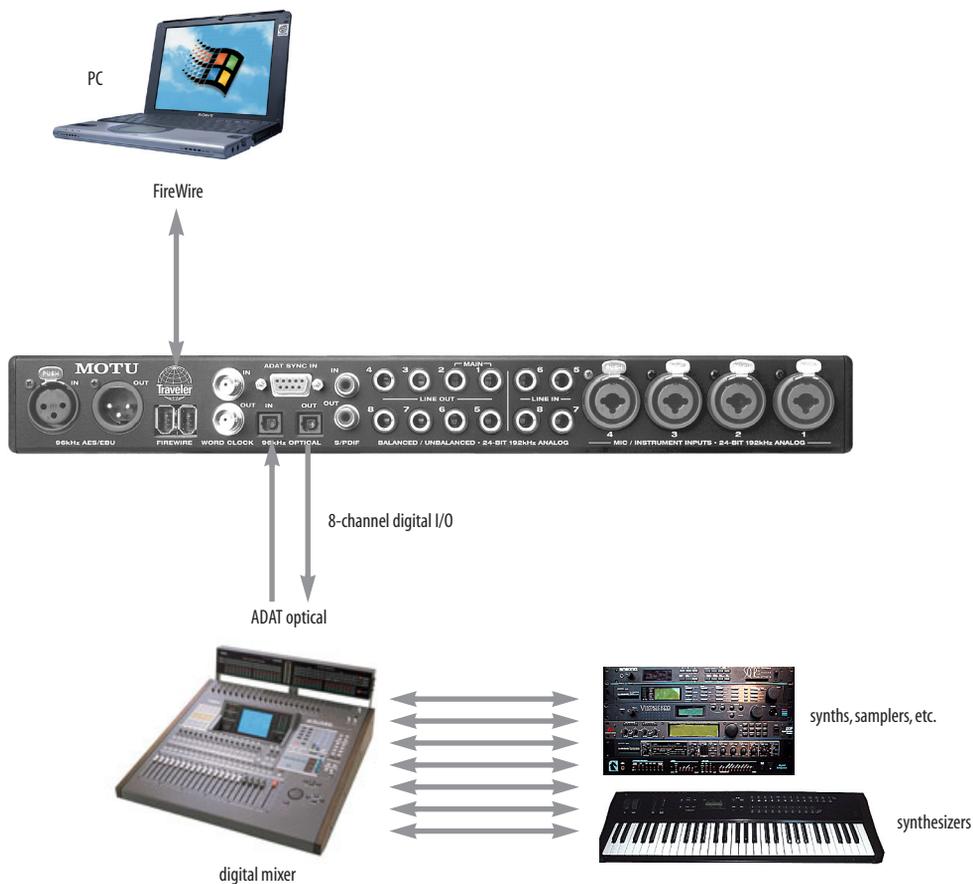


Figure 4-8: Using the Traveler with a digital mixer.

MAKING SYNC CONNECTIONS

If you connect devices digitally to the Traveler, or if you need to synchronize the Traveler with an outside time reference such as SMPTE time code, you must pay careful attention to the synchronization connections and clock source issues discussed in the next few sections.

Do you need to synchronize the Traveler?

If you will be using only the Traveler's analog inputs and outputs (and none of its digital I/O), and you have no plans to synchronize your Traveler system to SMPTE time code, you don't need to make any sync connections. You can skip this section and proceed to "MOTU FireWire Audio Console" on page 39 where you'll open the MOTU FireWire Audio Console and set the *Clock Source* setting to *Internal* as shown below. For details, see "Clock Source" on page 40.

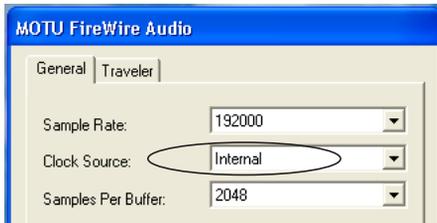


Figure 4-9: You can run the Traveler under its own internal clock when it has no digital audio connections and you are not synchronizing the Traveler system to an external time reference such as SMPTE.

Situations that require synchronization

There are three general cases in which you will need to resolve the Traveler with other devices:

- Synchronizing the Traveler with other digital audio devices so that their digital audio clocks are *phase-locked* (as shown in Figure 4-10)
- Slaving the Traveler system to SMPTE time code from a video deck, analog multi-track, etc.
- Both of the above

Synchronization is critical for clean digital I/O

Synchronization is critical in any audio system, but it is especially important when you are transferring audio between digital audio devices. Your success in using the Traveler's digital I/O features depends almost entirely on proper synchronization. The following sections guide you through several recommended scenarios.

Be sure to choose a digital audio clock master

When you transfer digital audio between two devices, their audio clocks must be in phase with one another — or *phase-locked*. Otherwise, you'll hear clicks, pops, and distortion in the audio — or perhaps no audio at all.

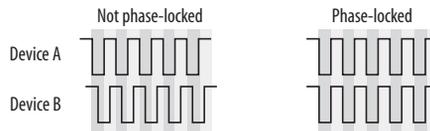


Figure 4-10: When transferring audio, two devices must have phase-locked audio clocks to prevent clicks, pops or other artifacts.

There are two ways to achieve phase lock: slave one device to the other, or slave both devices to a third master clock. If you have three or more digital audio devices, you need to slave them all to a single master audio clock.

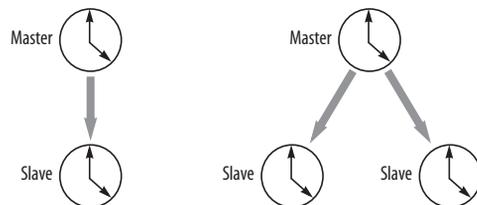


Figure 4-11: To keep the Traveler phase-locked with other digital audio devices connected to it, choose a clock master.

Also remember that audio phase lock can be achieved independently of time code (location). For example, one device can be the time code master while another is the audio clock master. But only one device can be the audio clock master. If you set things up with this rule in mind, you'll have trouble-free audio transfers with the Traveler.

DO YOU NEED A SYNCHRONIZER?

Whether or not you'll need a synchronizer depends on your gear and what you will be doing with your Traveler system. The following pages give you specific information about common sync scenarios. At least one of them will likely apply to you. Here are some general considerations to help you figure out if you need (or want) a synchronizer for your Traveler system.

You don't need a synchronizer if...

As explained earlier, the Traveler's digital audio clock must be phase-locked (synchronized) with other connected digital audio devices to achieve clean digital transfers between them. Can this be accomplished without an additional digital audio synchronizer? It depends on the nature of the other devices, and what you want to do with them. You don't need a synchronizer if the device has a way of locking itself directly to the Traveler's clock (via ADAT lightpipe, S/PDIF, AES/EBU or word clock), AND if the device carries no sense of location in time. A digital mixer is a good example: it can slave to its ADAT lightpipe connection from the Traveler, and it has no sense of time; it just passes audio through for mixing.

A stand-alone digital recorder, on the other hand, does have a sense of location in time, either via SMPTE time code or via its own sample address. For example, if you want to fly tracks back and forth between your computer and an Alesis hard disk recorder while maintaining the audio's position in time, the ADAT Sync port on the Traveler lets you do so without a separate synchronizer — and with sample-accurate precision, as long as you're using sample-accurate software. Just connect the Traveler directly to the Alesis recorder (or other ADAT Sync-compatible device) as discussed in "Sample-accurate ADAT sync with no synchronizer" on page 31. But if you also want transport control over the entire rig (including the hard disk recorder) from your audio

software, you'll need a MIDI Machine Control-compatible synchronizer such as MOTU's MIDI Timepiece AV, as discussed in "Sample-accurate sync" on page 29. If you are simply using a stand-alone recorder as a way to capture live tracks that you then transfer in one pass into the computer, no synchronizer is required because the tracks will remain in perfect phase lock with each other as you transfer them together. You can simply slave the stand-alone recorder to the optical output from the Traveler as explained in "Syncing optical devices" on page 34.

Transport control from your computer

If you have stand-alone digital recorders connected to the Traveler, and they support ADAT Sync, your audio software — if it supports MIDI Machine Control (MMC) — allows you to control the transports of everything from your computer. Most advanced audio programs support MMC. To do this, you'll also need an MMC-compatible ADAT synchronizer such as a MOTU MIDI Timepiece AV. Synchronizers like these allow you to play, stop, rewind and locate all of your tape decks using the transport controls in the audio software. If your audio software supports sample-accurate sync, you can do so with sample-accurate precision. The following pages show you how to achieve MMC control, where possible.

Continuous sync to SMPTE / MTC

The Traveler can synchronize directly to SMPTE time code. If your audio software supports sample-accurate sync, it can also resolve to time code via the Traveler. If your software does not support sample-accurate sync, you need a dedicated synchronizer, as illustrated on the following pages.

SAMPLE-ACCURATE SYNC

Your Traveler system provides you with the most advanced, accurate synchronization possible with Alesis modular digital tape decks and hard disk recorders — or any device that supports sample-accurate ADAT sync. Figure 4-12 below shows a few best-case scenarios. Below is a brief explanation of the benefits you achieve with these setups.

Sample accurate locating

With *sample accurate locating*, when you transfer audio between any other sample-accurate host software and a sample-accurate recorder, the audio will not drift in time — even by as little as one sample. This is the tightest possible synchronization between digital audio devices. The timing in your audio will not be affected in any way by the process of transferring it between the Traveler and the recorder.

Is your audio software sample-accurate?

Sample-accurate locating is only possible with software that supports this feature through the Traveler's ASIO Version 2 driver.

Transport control from your computer

If you have a MIDI Timepiece AV, Digital Timepiece or any ADAT synchronizer that also supports MIDI Machine Control (MMC), you can play, stop, rewind and locate all of your ADATs using the transport controls in the audio software running on your computer. This includes cueing features like markers, position bars, playback wipers, time rulers, etc.

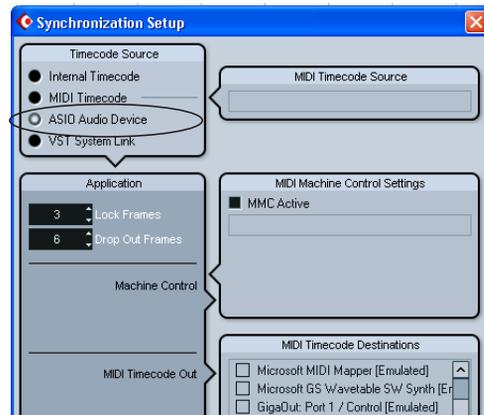


Figure 4-13: Cubase SX and other ASIO 2.0-compatible programs support sample-accurate transfers with ADAT Sync compatible digital tape decks and modular hard disk recorders.

Sync format	Software	Synchronizer	Sample accurate locating	Transport control from computer	Continuous sync to SMPTE / MTC
ADAT	Cubase or other ASIO 2.0-compatible app	MIDI Timepiece AV or Digital Timepiece	Yes	Yes	Yes
ADAT	Cubase or other ASIO 2.0-compatible app	BRC (or any MMC capable ADAT synchronizer)	Yes	Yes	Yes
ADAT	Cubase or other ASIO 2.0-compatible app	None	Yes	No	No

Figure 4-12: These recommended combinations of hardware and software offer the tightest sync possible between the Traveler and digital audio recorders in the form of sample-accurate locating between the software and the tape decks. Sample accurate locating is possible even without a MIDI Timepiece AV or Digital Timepiece, although you give up transport control from the computer.

SAMPLE-ACCURATE ADAT SYNC

The Traveler can achieve sample-accurate sync with ADATs, Alesis hard disk recorders or any ADAT Sync-compatible devices. Sample-accurate software is required, such as Cubase SX or other ASIO 2.0-compatible software that also supports sample-accurate sync. Connect the Traveler to the end of the ADAT Sync chain and make the software settings shown below in Figure 4-14. If you will be using the stand-alone recorder for its analog inputs and outputs only (you won't be doing any recording with it), treat it as an 'optical' device. See "Syncing optical devices" on page 34.

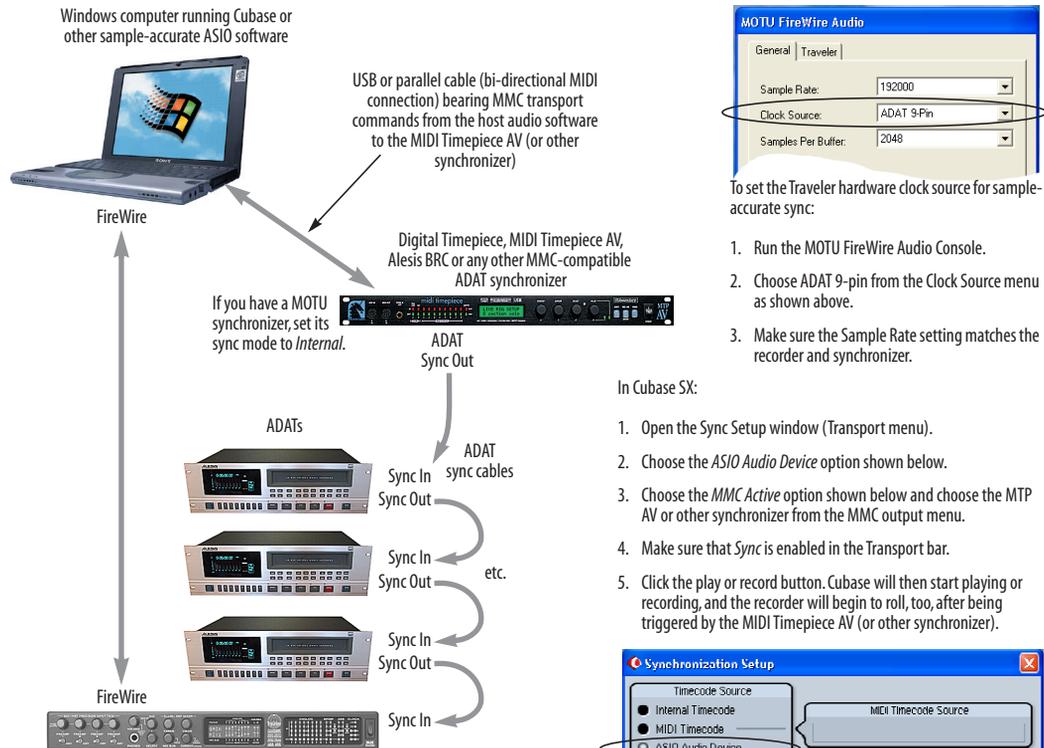


Figure 4-14: Connections for sample-accurate ADAT sync.

Use this setup if you have:

- ✓ ADATs, Alesis hard disk recorders or any ADAT SYNC compatible device(s).
- ✓ A MOTU Digital Timepiece, MIDI Timepiece AV or other ADAT synchronizer.
- ✓ Host software that supports sample-accurate sync.

This setup provides:

- ✓ Sample-accurate locating between all ADAT SYNC-compatible devices, the Traveler and your software (Cubase or other sample-accurate software).
- ✓ With a Digital Timepiece, this setup provides sample-accurate locating across all devices: ADAT, Tascam and the Traveler.
- ✓ Transport control of everything from the computer, OR continuous sync to SMPTE time code and other sync sources (the other source is the transport master in this case).

SAMPLE-ACCURATE ADAT SYNC WITH NO SYNCHRONIZER

Even if you don't have an ADAT synchronizer, you can achieve sample-accurate sync between ADAT-sync compatible devices, a Traveler, and any sample-accurate software. Just connect the Traveler to the end of the ADAT sync chain as shown below. You don't get transport control from your computer, nor can you slave the system to SMPTE time code. Instead, you have to play, stop, rewind and cue the system from the transports on your recorder. If you're using the recorder as an additional source of analog inputs and outputs only (not for recording), see "Syncing optical devices" on page 34.

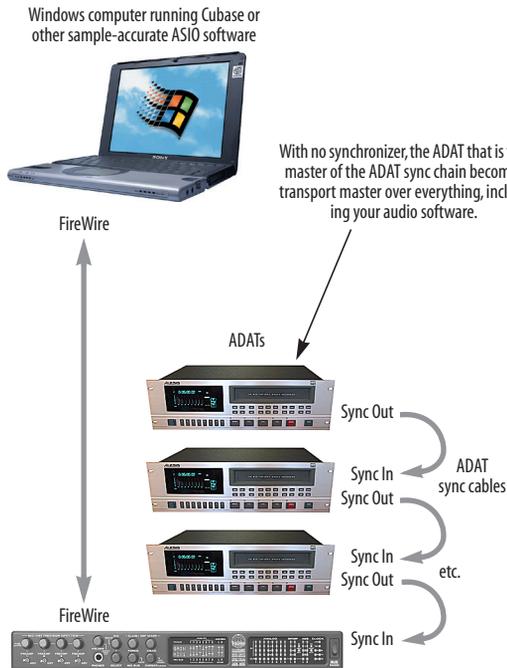



Figure 4-14: Sample-accurate sync without an ADAT synchronizer.

Use this setup if you have:

- ✓ ADATs, Alesis hard disk recorders or any ADAT SYNC compatible device(s).
- ✗ No ADAT synchronizer.
- ✓ Host software that supports sample-accurate sync.

This setup provides:

- ✓ Sample-accurate locating between all ADAT SYNC-compatible devices, the Traveler and your software (Cubase or other sample-accurate software).
- ✗ No transport control of everything from the computer.
- ✗ No sync to SMPTE time code or other sync sources.

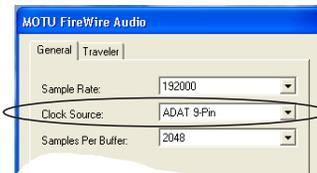


To set the Traveler hardware clock source for sample-accurate sync:

1. Run the MOTU FireWire Audio Console.
2. Choose ADAT 9-pin from the Clock Source menu as shown above.
3. Make sure the Sample Rate setting matches the recorder and synchronizer.

In Cubase SX:

1. Open the Sync Setup window (Transport menu).
2. Choose the *ASIO Audio Device* option shown below.
3. Make sure that *Sync* is enabled in the Transport bar.
4. Click the play or record button on the ADAT SYNC master device. Cubase will then start playing or recording, along with the ADAT SYNC master.

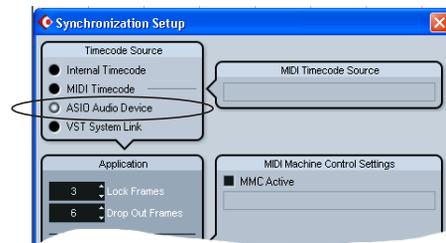

SYNCING TO SMPTE TIME CODE


The Traveler system can resolve directly to SMPTE time code. It can also generate time code and word clock, under its own clock or while slaving to time code. Therefore, the Traveler can act both as an audio interface and digital audio synchronizer, to which you can slave other digital audio devices. You can use the Traveler to slave your audio software to SMPTE as well, as long as your software supports sample-accurate sync, which is the means by which the software follows the Traveler. The accuracy may not be sample-accurate, but in most cases it will be very close.

Use this setup if you have:



- ✓ A SMPTE time code source, such as a multitrack tape deck.
- ✓ A Traveler by itself, OR with another slaved device (such as a digital mixer).
- ✓ Host software that supports sample-accurate sync.

This setup provides:

- ✗ No sample-accurate locating.
- ✓ Continuous sync to SMPTE time code.
- ✓ Sub-frame timing accuracy.
- ✓ Transport control from the SMPTE time code source.

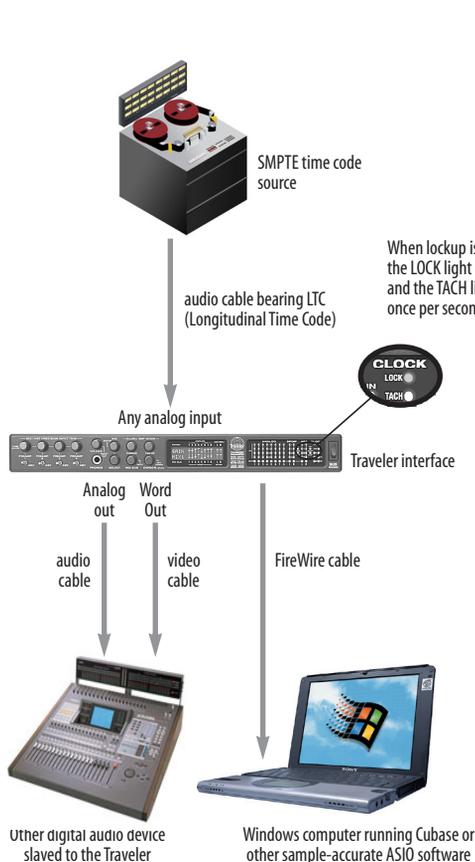

Choose *SMPTE* as the clock source in the MOTU FireWire Audio Console. This setting can also be made in the FireWire SMPTE Console (shown below).

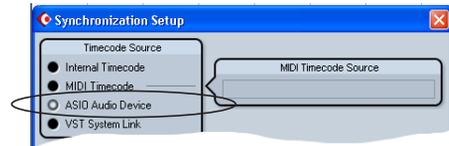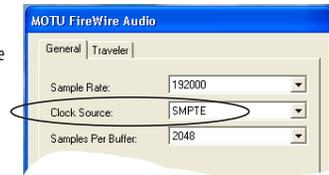

In Cubase SX, go to the Sync Setup window and choose the *ASIO Audio Device* option.



Launch the FireWire SMPTE Console and specify the *SMPTE Source*, which is the input receiving the SMPTE time code. Also, confirm that the *Clock Source/Address* is *SMPTE/SMPTE*. For details about the other settings, see chapter 11, "FireWire SMPTE Console" (page 79).

Figure 4-15: Connections for synchronizing the Traveler directly to SMPTE time code.

SYNCING TO VIDEO AND/OR SMPTE TIME CODE USING A SYNCHRONIZER

If your host audio software does not support the Traveler's on-board SMPTE sync features (because your software does not support sample-accurate sync), you need a universal synchronizer, such as a MOTU MIDI Timepiece AV. These dedicated sync boxes can read video and SMPTE time code and then convert it into word clock and MIDI Time Code (MTC). The word clock goes to the Traveler to resolve the audio hardware, and MIDI Time Code is fed to your host audio software, which locks to it, as shown below in Figure 4-16.

Use this setup if you have:

- ✓ Video and/or a SMPTE time code source.
- ✓ A Digital Timepiece, MIDI Timepiece AV or other universal synchronizer.
- ✓ Host software that does not support sample-accurate sync (although you can use this setup even if it does).

This setup provides:

- ✗ No sample-accurate locating.
- ✓ Continuous sync to SMPTE time code.
- ✓ Sub-frame timing accuracy.
- ✓ Transport control from the SMPTE time code source.

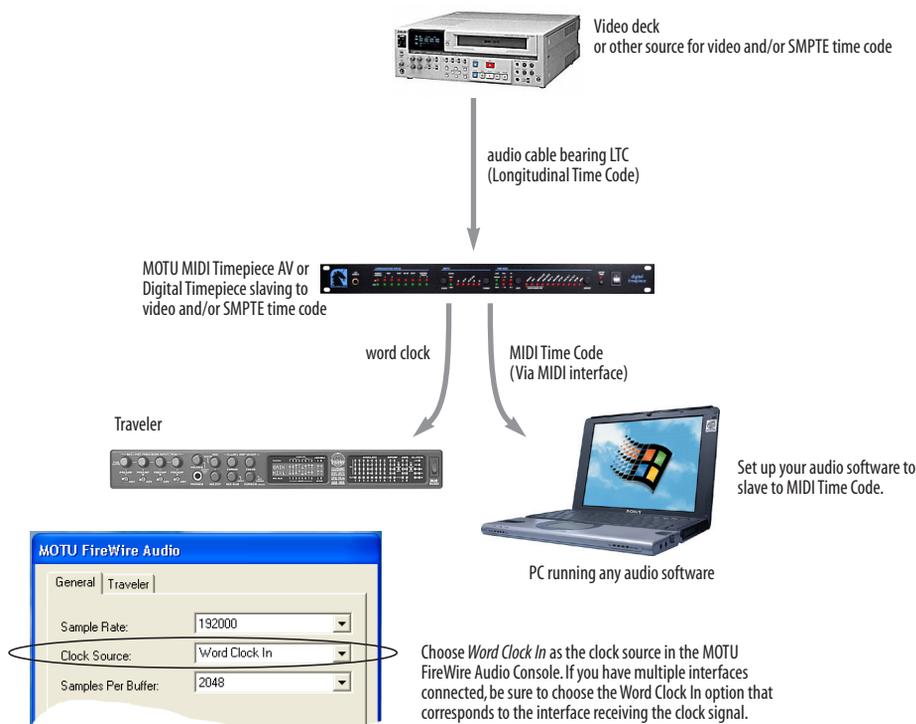


Figure 4-16: If your host audio software does not support sample-accurate sync and the Traveler's built-in SMPTE sync features, use a universal synchronizer such as the MOTU MIDI Timepiece AV or Digital Timepiece.

SYNCING OPTICAL DEVICES

The word *optical* is our short-hand way of referring to any device that connects to the Traveler via an optical cable. But we make a further distinction: an optical device is also one that doesn't care about sample location. An example is a digital mixer. Since a digital mixer is not a recording device, it has no sense of sample location like an ADAT does. An ADAT can cue to a specific sample number (e.g. sample number 43,478, 103) — as can any device that supports ADAT sync, but most digital mixers simply mix and process audio digitally, with no sense of a specific sample location. There are many other devices that fall into this category, including digital effects processors, synthesizers, A/D converters, and many more.

For ADATs or other devices that support ADAT sync, synchronize them with the Traveler as described in the previous sections of this chapter.

For *optical* devices, such as digital mixers, all you have to do is make sure that their digital audio clock is phase-locked (in sync with) the Traveler. There are three ways to do this:

- Slave the optical device to the Traveler
- Slave the Traveler to the optical device
- Slave both the optical device and the Traveler to a third master clock (such as a Digital Timepiece or MIDI Timepiece AV synchronizer)

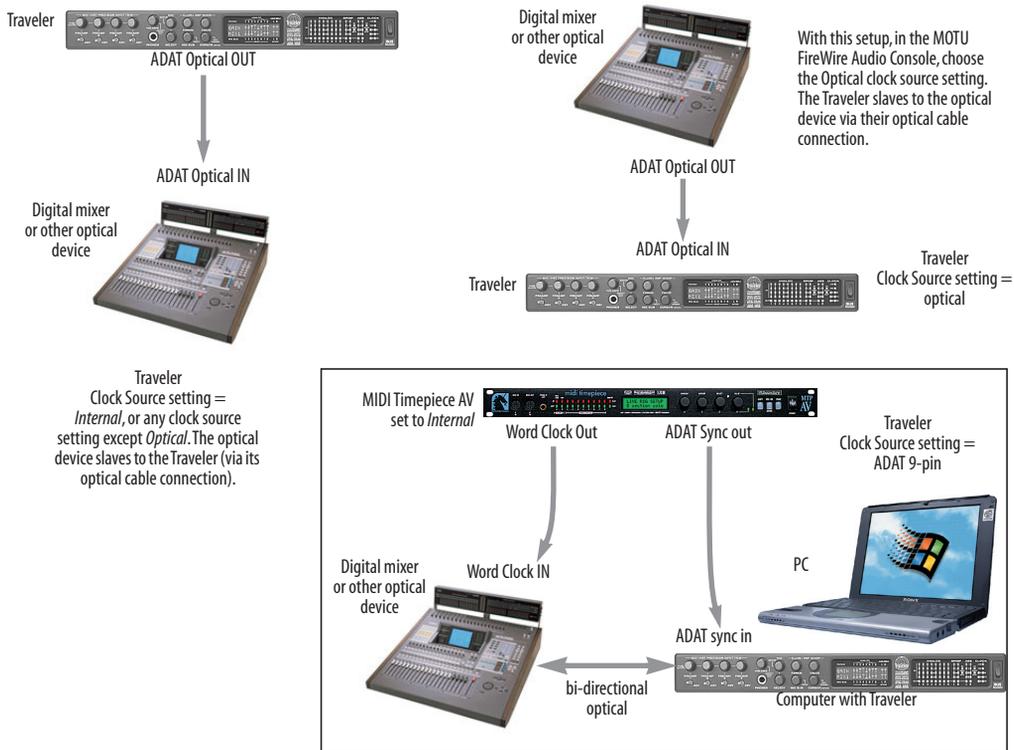


Figure 4-17: Three setups for synchronizing an optical device with the Traveler. You can slave the optical device to the Traveler or vice versa with their optical connections. For more elaborate setups, you can slave both to a digital audio synchronizer like the Digital Timepiece. Don't use any of these setups for an ADAT or other optical device that records. Instead, see "Sample-accurate ADAT sync" on page 30.

SYNCING S/PDIF AND AES/EBU DEVICES

DAT decks and other devices with S/PDIF and/or AES/EBU digital I/O will sync to the Traveler in one of two ways:

- Via the S/PDIF or AES/EBU connection itself
- Via word clock

Devices with no word clock

If your S/PDIF or AES/EBU device has no word clock sync connectors, just connect it to the Traveler via the S/PDIF or AES/EBU connectors. When the device records a digital audio signal (from the Traveler), it will simply synchronize to the clock provided by the digital audio input.

On the other hand, when you transfer audio from the S/PDIF or AES/EBU device into the Traveler, you'll have to slave the Traveler to its S/PDIF or AES/EBU input. If you have other digital audio devices connected to the Traveler, and they are not slaved directly to the Traveler itself, you may hear clicks and pops resulting from their unsynchronized audio clock. If so, just turn them off during the transfer.

Devices with word clock

If your S/PDIF or AES/EBU device has a Word Clock input, slave the device to the Traveler via their word clock connection. You can then freely transfer audio between the Traveler and the S/PDIF or AES/EBU device.

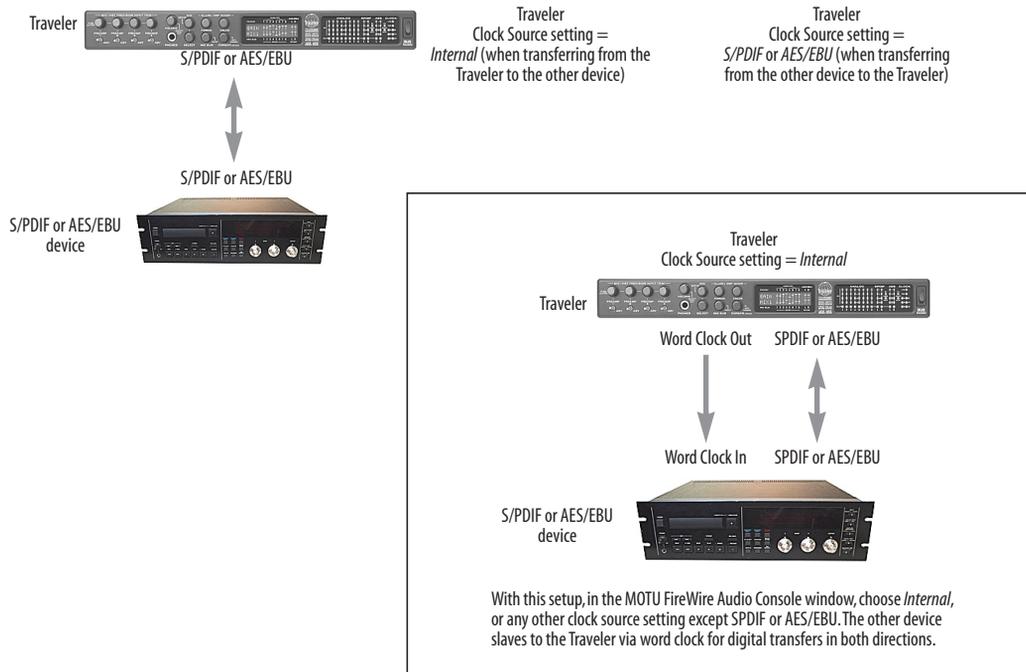


Figure 4-18: Two setups for synchronizing an S/PDIF device with the Traveler. In the top diagram, sync is achieved via the digital I/O connection itself. In this case, you have to choose S/PDIF or AES/EBU as the Traveler's clock source when recording from the other device. If you don't want to have to worry about switching the Clock Source setting depending on the direction of the digital transfer, you can slave the other device to word clock from the Traveler or vice versa (not shown). The Word Clock connection maintains sync, regardless of the direction of the transfer.

SYNCING WORD CLOCK DEVICES

The Traveler word clock connectors allow you to synchronize it with a wide variety of other word clock-equipped devices.

For standard word clock sync, you need to choose an audio clock master (as explained in “Be sure to choose a digital audio clock master” on page 27). In the simplest case, you have two devices and one is the word clock master and the other is the slave as shown below in Figure 4-19 and Figure 4-20.



Figure 4-19: Slaving another digital audio device to the Traveler via word clock. For the Traveler clock source, choose any source besides word clock, as it is not advisable to chain word clock.

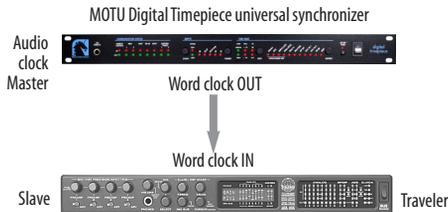


Figure 4-20: Slaving the Traveler to word clock. For the Traveler clock source, choose 'Word Clock In'.

Don't chain word clock

If you have three or more digital audio devices that you need to synchronize, avoid chaining their word clock connections (OUT to IN, OUT to IN, etc.), as this causes problems. Instead, use a dedicated synchronizer like the Digital Timepiece or a word clock distribution device of some kind.

Slaving to 2x and 1/2x word clock

All MOTU FireWire audio interfaces that support 96 and 192 kHz operation (including the 896HD) have the ability to slave to a word clock signal running at the 1x sample rate that corresponds to their current clock rate. For example, the Traveler could be running at 192 kHz while slaving to a 48 kHz word clock signal from a MOTU MIDI Timepiece AV. Similarly, the Traveler could run at 88.2 kHz and slave to 44.1 kHz word clock. In all of these cases, the front panel clock LEDs flash both sample rates to indicate that the Traveler is slaving to word clock at the corresponding 1x clock rate. But if the Traveler is running at 96 kHz, it cannot slave to word clock running at 44.1 kHz.

SYNCING LARGE SYSTEMS

If you are connecting the Traveler to a lot of other digital audio gear, get a word clock distribution device, which offers multiple word clock outputs.

CONNECTING MULTIPLE MOTU FIREWIRE INTERFACES

You can daisy-chain up to four MOTU FireWire interfaces on a single FireWire bus, with the restrictions described in the following sections. Most computers have only one built-in FireWire bus (even if it supplies multiple FireWire sockets). Connect them as follows:

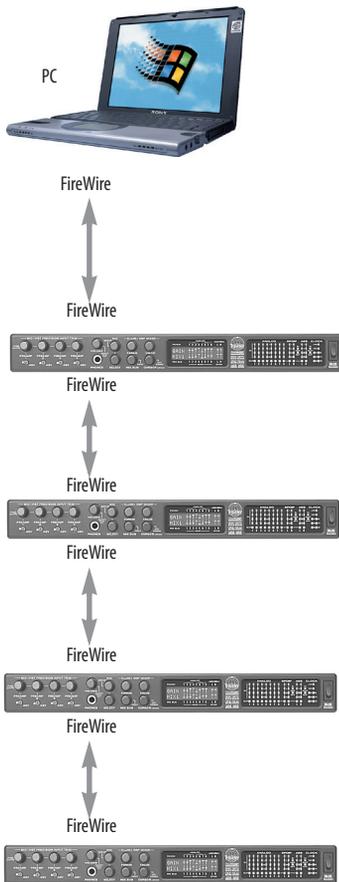


Figure 4-21: Connecting multiple Traveler's (or other MOTU FireWire audio interfaces) to a computer.

Multiple interfaces cannot be bus-powered

Do not run the Traveler under bus power when connecting it with other devices to the same FireWire bus. See “Power options” and “Bus power requirements” on page 22.

Multiple interfaces in the MOTU FireWire Audio Console

The MOTU FireWire Audio Console displays the settings for one interface at a time. To view the settings for an interface, click its tab as shown below in Figure 4-22.

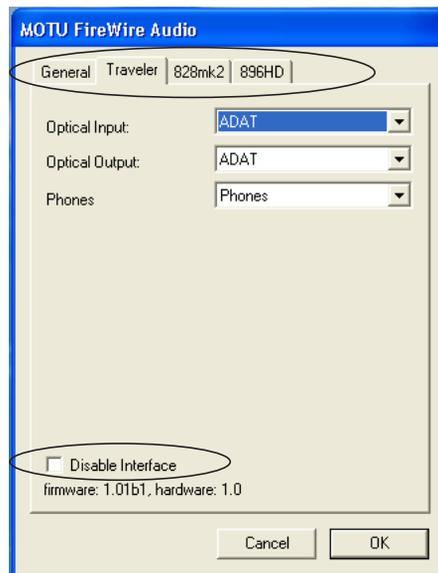


Figure 4-22: To view the settings for an interface, click its tab.

Synchronizing multiple interfaces

All connected MOTU FireWire interfaces get their clock from whatever you choose from the *Clock Source* menu in the *General* tab in the MOTU FireWire Audio Console. When you connect multiple MOTU FireWire interfaces, all of their respective sync sources are displayed in the menu as shown below in Figure 4-23.

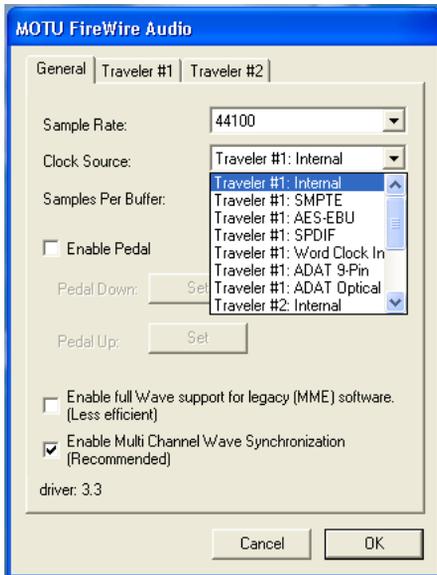


Figure 4-23: All MOTU FireWire audio interfaces get their clock from a single master sync source on any connected Traveler (or other MOTU FireWire interface). After you choose a source from this menu, the entire system, including all connected Travelers, synchronizes to it.

Each FireWire interface in the system gets its clock from the computer (unless it is the master clock itself). There is no need to make word clock connections between multiple FireWire interfaces.

Connecting other MOTU FireWire interfaces

You can add an original MOTU 828 to the end of a FireWire daisy chain (because the 828 has only one FireWire port), or you can mix and match multiple 828's with other MOTU FireWire interfaces using a standard FireWire hub. You can also add 828mkII's

or 896HD's, which have two FireWire ports convenient for daisy-chaining. Up to four interfaces can be combined on one FireWire bus.

Operating multiple FireWire interfaces at high sample rates

Four MOTU FireWire interfaces can operate at 44.1 or 48kHz on a single FireWire bus. At the 2x samples rates (88.2 or 96kHz) and 4x sample rates (176.4 and 192kHz), you can operate no more than three FireWire interfaces on a single FireWire bus.

Adding additional interfaces with a second FireWire bus

Third-party FireWire bus expansion products in the form of a cardbus (“PC card”) adaptor or PCI card allow you to add a second FireWire bus to your computer. It may be possible to add additional MOTU FireWire interfaces connected to such a third-party product, depending on the performance of the product and the performance of your host computer.

Managing the IDs of multiple interfaces

Multiple Traveler interfaces are identified by number (#1, #2, #3, etc.) Interfaces are ID'd (given a number) by the order in which they are first powered up after being connected. This information is stored in the MOTU FireWire Audio preferences file. Once ID'd, they retain the same number regardless of the order in which they are powered up. You can disable an interface at any time with the *Disable interface* option shown in Figure 4-22 on page 37. Doing so frees up the FireWire bandwidth required by the interface without turning it off. Switching off an interface accomplishes the same thing. To get the MOTU FireWire Audio Control Panel Console to forget about an interface entirely, you'll see a *Forget* button in the MOTU FireWire Audio Console. Just click the *Forget* button and the MOTU FireWire Audio Console will no longer consider the interface to be present but off line (turned off).

CHAPTER 5 MOTU FireWire Audio Console


OVERVIEW

Accessing the Traveler settings	39
Traveler Settings	40
Sample Rate	40
Clock Source	40
Samples Per Buffer	43
Optical input/output	43
Phones	44
Word Out	44
Wave support for legacy (MME) software	44

ACCESSING THE TRAVELER SETTINGS

There are several ways to access the MOTU FireWire Audio Console settings:

- From the Windows Start menu, choose *Programs>MOTU>MOTU FireWire Audio Console*
- In Cubase SX, open the Device Setup window, click *VST Audiobay* and choose *MOTU FireWire Audio* from the *Master ASIO Driver* menu. Then click the MOTU FireWire Audio item in the list and click the Control Panel button as shown below.

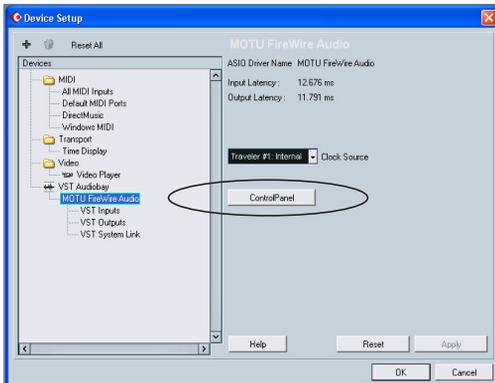

- From within other ASIO-compatible programs, refer to their documentation.

- From the front panel LCD (see chapter 6, “Traveler Front Panel Operation” (page 45)).

Traveler tab settings

The Traveler tab provides settings that apply to a specific Traveler interface. If you have several Travelers (or other MOTU FireWire audio interfaces) connected, you’ll see a separate tab for each one.

General tab settings

The General tab provides settings that apply globally to all connected MOTU FireWire interfaces.

TRAVELER SETTINGS

Sample Rate

Choose the desired *Sample Rate* for recording and playback. The Traveler can operate at 44.1 (the standard rate for compact disc audio), 48, 88.2, 96, 176.4 or 192kHz. Make absolutely sure that all of the devices connected digitally to the Traveler match the Traveler's sample rate. Also make sure that your Digital Timepiece, MIDI Timepiece AV or other digital audio synchronizer matches it as well. At the 4x sample rates (176.4 or 192kHz), all digital I/O on the Traveler is disabled.

☞ Mismatched sample rates cause distortion and crackling. If you hear this sort of thing, check the sample rate settings in your hardware and here in the MOTU FireWire Audio Console.

Operation at 4x sample rates (176.4 or 192kHz)

At the 4x sample rates (176.4 or 192kHz), operation of the Traveler is restricted, due to the higher audio bandwidth demands, as follows:

- All digital I/O is disabled (there is no optical, TosLink, S/PDIF or AES/EBU input/output).
- The Traveler provides 8 channels of analog input and 8 channels of analog output, simultaneously.
- The *Mix1* input, as described in “Mix1 1-2” on page 65, is not available.
- The headphone output can be assigned to any analog output pair or the *Phones* setting (as described in “Phones” on page 44). But at the 4x sample rates, the Phones output is not available from the computer. Instead, it is only available as a destination for the four CueMix DSP mixes. In other words, it can only take CueMix inputs.
- The main outs mirror the phones.

Clock Source

The *Clock Source* determines the digital audio clock that the Traveler will use as its time base. For a complete explanation of synchronization issues,

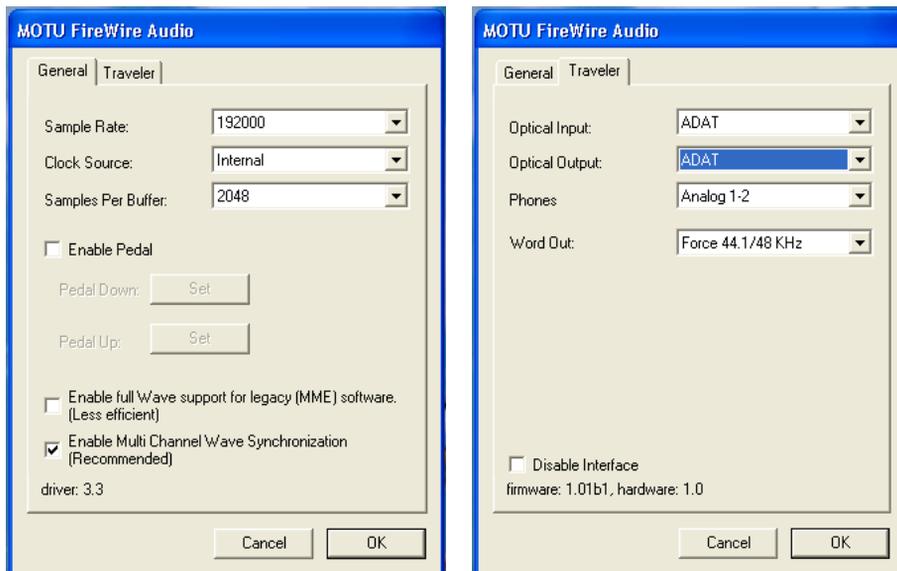


Figure 5-1: The MOTU FireWire Audio Console gives you access to all of the settings in the Traveler hardware.

see “Making sync connections” on page 27. The following sections briefly discuss each clock source setting.

Internal

Use the *Internal* setting when you want the Traveler to operate under its own digital audio clock. For example, you may be in a situation where all you are doing is playing tracks off hard disk in your digital audio software on the computer. In a situation like this, you most often don’t need to reference an external clock of any kind.

Another example is transferring a mix to DAT. You can operate the Traveler system on its internal clock, and then slave the DAT deck to the Traveler via the S/PDIF connection (usually DAT decks slave to their S/DIF input when you choose the S/PDIF input as their record source) or via the Traveler’s word clock output (if your DAT deck has a word clock input).

If you would like help determining if this is the proper clock setting for your situation, see “Do you need a synchronizer?” on page 28.

With ADAT devices, however, you usually want an external digital audio synchronizer, such as the MIDI Timepiece AV or Digital Timepiece, to be the digital clock master. In this case, you would set the Traveler clock source setting to *ADAT 9-pin*, as described below.

AES/EBU

The *AES/EBU* clock source setting refers to the AES/EBU XLR input jack on the Traveler. This setting allows the Traveler to slave to another AES/EBU device.

Use this setting whenever you are recording input from a DAT deck or other AES/EBU device into the Traveler. It is not necessary in the opposite direction (when you are transferring from the Traveler to the DAT machine).

For further details about this setting, see “Syncing S/PDIF and AES/EBU devices” on page 35.

S/PDIF

The *S/PDIF* clock source setting refers to the S/PDIF RCA input jack on the Traveler. This setting allows the Traveler to slave to another S/PDIF device.

Use this setting whenever you are recording input from a DAT deck or other S/PDIF device into the Traveler. It is not necessary in the opposite direction (when you are transferring from the Traveler to the DAT machine).

For further details about this setting, see “Syncing S/PDIF and AES/EBU devices” on page 35.

Word Clock In

The *Word Clock In* setting refers to the Word Clock In BNC connector on the Traveler rear panel. Choosing this setting allows the Traveler to slave to an external word clock source, such as the word clock output from a digital mixer.

ADAT 9-pin

The *ADAT 9-pin* clock source setting refers to the ADAT digital audio synchronization format. It allows the Traveler to slave to an ADAT — or ADAT sync chain — via its ADAT sync 9-pin connector. ADAT sync also carries precise, sample location information, which allows Cubase or other sample-accurate ASIO 2.0-compatible audio software to transfer audio to and from ADAT-sync compatible recorders without drifting by as much as one sample.

Use this setting when you are using the Traveler with one or more ADAT-sync compatible recorders. Make sure the Traveler is connected to the end of the ADAT sync chain.

You should also use this setting if you have a MIDI Timepiece AV, which allows you to drive your entire system from the transport controls of your audio software.

You could also use ADAT sync to continuously resolve the Traveler to SMPTE time code, video, and word clock via a synchronizer like the MOTU MIDI Timepiece AV. Word clock can accomplish the same thing.

For further details, see “Sample-accurate ADAT sync” on page 30, “Sample-accurate ADAT sync with no synchronizer” on page 31 and “Syncing to video and/or SMPTE time code using a synchronizer” on page 33.

ADAT optical

The *ADAT optical* clock source setting refers to the clock provided by the Traveler’s optical input, when it is connected to an ADAT optical device. This setting can be used to slave the Traveler directly to the optical input connection. Most of the time, you can set up a better operating scenario that uses one of the other synchronization options. However, there may be occasions when you have an ADAT optical compatible device that has no way of synchronizing digitally to the Traveler or an external synchronizer such as the Digital Timepiece. In this case, the *ADAT Optical* clock source setting lets you slave the Traveler to the device itself via its digital input to the Traveler.

If the *ADAT Optical* setting does not appear in the menu, it means that the Traveler’s optical input is currently either turned off or set to the *TOSLink* format. In either case, choose the *ADAT optical* format from the Optical input menu (Figure 5-1 on page 40).

This setting is also useful if you just need to make a simple, click-free digital transfer between the Traveler and another device — where a time code

reference and shared transport control are not needed — without having to set up an elaborate synchronization scenario.

For further details about this setting, see “Syncing optical devices” on page 34.

TOSLink

The *TOSLink* clock source setting refers to the clock provided an optical S/PDIF device connected to the Traveler’s optical input. This setting can be used to slave the Traveler directly to the optical input connection. Most of the time, you can set up a better operating scenario that uses one of the other synchronization options. However, there may be occasions when you have an *TOSLink*-compatible device that has no way of synchronizing digitally to the Traveler or an external synchronizer such as the Digital Timepiece. In this case, the *TOSLink* clock source setting lets you slave the Traveler to the other device via the Traveler’s optical input.

If the *TOSLink* setting does not appear in the menu, it means that the Traveler’s optical input is currently either turned off or set to the *ADAT optical* format. In either case, choose the *TOSLink* format from the Optical input menu (Figure 5-1 on page 40).

This setting is also useful if you just need to make a simple, click-free digital transfer between the Traveler and another device — where a time code reference and shared transport control are not needed — without having to set up an elaborate synchronization scenario.

For further details about this setting, see “Syncing optical devices” on page 34.

SMPTE

Choose this setting to resolve the Traveler directly to SMPTE time code (LTC) being received via any analog input on the Traveler. For details, see “Syncing to SMPTE time code” on page 32 and chapter 11, “FireWire SMPTE Console” (page 79).

Samples Per Buffer

The *Samples Per Buffer* setting lets you reduce the delay you hear when patching live audio through your audio software. For example, you might have a live microphone input that you would like to run through a reverb plug-in that you are running in your host audio software. When doing so, you may hear or feel some “sponginess” (delay) between the source and the processed signal. If so, don’t worry. This effect only affects what you hear: it is not present in what is actually recorded.

You can use *Samples Per Buffer* setting to reduce this monitoring delay—and even make it completely inaudible.

☛ If you don’t need to process an incoming live signal with software plug-ins, you can monitor the signal with no delay at all using CueMix Console, which routes the signal directly to your speakers via hardware. For details, see chapter 10, “CueMix Console” (page 71).

Adjusting the *Samples Per Buffer* setting impacts the following things:

- The strain on your computer’s CPU
- The delay you hear when routing a live signal through your host audio software plug-ins
- How responsive the transport controls are in your software

This setting presents you with a trade-off between the processing power of your computer and the delay of live audio as it is being processed by plug-ins. If you reduce the *Samples Per Buffer*, you reduce patch thru latency, but significantly increase

the overall processing load on your computer, leaving less CPU bandwidth for things like real-time effects processing. On the other hand, if you increase the *Samples Per Buffer*, you reduce the load on your computer, freeing up bandwidth for effects, mixing and other real-time operations. But don’t set the *Samples Per Buffer* too low, or it may cause distortion in your audio.

If you don’t process live inputs with software plug-ins, leave this setting at its default value of 1024 samples. If you do, try settings of 256 samples or less, if your computer seems to be able to handle them. If your host audio software has a processor meter, check it. If it starts getting maxed out, or if the computer seems sluggish, raise the *Samples Per Buffer* until performance returns to normal.

If you are at a point in your recording project where you are not currently working with live, patched-thru material (e.g. you’re not recording vocals), or if you have a way of externally monitoring input, choose a higher *Samples Per Buffer* setting. Depending on your computer’s CPU speed, you might find that settings in the middle work best.

The *Samples Per Buffer* setting also impacts how quickly your audio software will respond when you begin playback, although not by amounts that are very noticeable. Lowering the *Samples Per Buffer* will make your software respond faster; raising the *Samples Per Buffer* will make it a little bit slower, but barely enough to notice.

Monitoring live inputs without plug-in effects

As mentioned earlier, CueMix Console allows you to monitor dry, unprocessed live inputs with no delay at all. For complete details, see chapter 9, “Reducing Monitoring Latency” (page 65).

Optical input/output

The *Optical input* and *Optical output* settings let you choose between ADAT optical (‘lightpipe’) and S/PDIF optical (‘TOSLink’) as the format for the

Traveler's optical input and output. Choose the format that matches the device connected. If you are not using the optical connections, it is recommended that you turn them off (as provided in the menus) to reduce bandwidth and processing overhead. Note that you can operate the input and output independently. For example, you could use the ADAT optical format on the input (with a digital mixer, for example) and optical S/PDIF on the output (with a DAT deck, for example).

When the optical output is set to TosLink, the signal is split to both the RCA and optical output jacks. However, when the optical input is set to TosLink, the RCA S/PDIF jack is disabled.

Phones

The *Phones* setting lets you choose what you will hear from the headphone jack. Choose *Analog 1-2* if you'd like the headphone output to match the main outs. Choose *Phones 1-2* if you would like the headphones to serve as their own independent output, which you can access as an independent output destination in your host audio software and as an output destination for the four on-board CueMix DSP mix busses.

At the 4x sample rates (176.4 and 192kHz), the headphone output can be assigned to any analog output pair or the *Phones 1-2* setting, as described above. But at the 4x sample rates, the Phones output is not available as an output destination for software on the computer. Instead, it is only available as a destination for the two CueMix DSP mixes. In other words, it can only take CueMix inputs.

Word Out

If you are running a Traveler interface at a high sample rate (88.2, 96, 176.4 or 192kHz), the *Word Out* menu appears in the interface tab (as shown in Figure 5-1 on page 40). This menu lets you choose a word clock output rate that either matches the global sample rate (e.g. 176.4 or 192kHz) or

reduces the word clock output to the corresponding 1x rate (either 44.1 or 48kHz). For example, if the Traveler is operating at 176.4kHz, choose *Force 44.1/48kHz* to produce word clock output at 44.1kHz.

To match the Traveler's sample rate, choose *System Clock*. To reduce the word clock rate to the corresponding 1x rate, choose *Force 44.1/48kHz*.

Wave support for legacy (MME) software

Windows only exposes the first two channels of a multi-channel WDM audio stream to applications which use the legacy (MME) multimedia interface. The *Enable full Wave support for legacy (MME) software (less efficient)* option forces the Traveler multimedia driver to expose all channels as stereo pairs, providing full MME support.

If your host audio software does *not* directly support WDM audio and instead only supports legacy MME drivers, use this option to access multiple Traveler input and output channels.

If your host audio software *does* directly support WDM audio, leave this option unchecked for optimal performance.

This option is only available when the multimedia driver has been installed, and it defaults to being not checked.

CHAPTER 6 Traveler Front Panel Operation

OVERVIEW

The Traveler offers complete front-panel programming via six rotary encoders and a 2x16 backlit LCD display. All Traveler settings can be accessed via these front-panel controls.

- Push-button rotary encoders 45
- Multi-function LCD display 45
- VOLUME 46
- SETUP / SELECT 46
- MIX BUS 48
- PARAM..... 49
- CURSOR / VALUE 49
- Stand-alone operation..... 49

PUSH-BUTTON ROTARY ENCODERS

All of the knobs shown in Figure 6-1 are push-button digital rotary encoders. In many cases, you can either push the knob or turn it to make a setting or toggle the LCD display (depending on the encoder and setting).

MULTI-FUNCTION LCD DISPLAY

The LCD provides access to the many Traveler settings, as well as visual feedback of the current parameter being modified.

The LCD operates in two different modes: setup mode and mixer mode. Push the MIX/SETUP knob to toggle between the two modes.

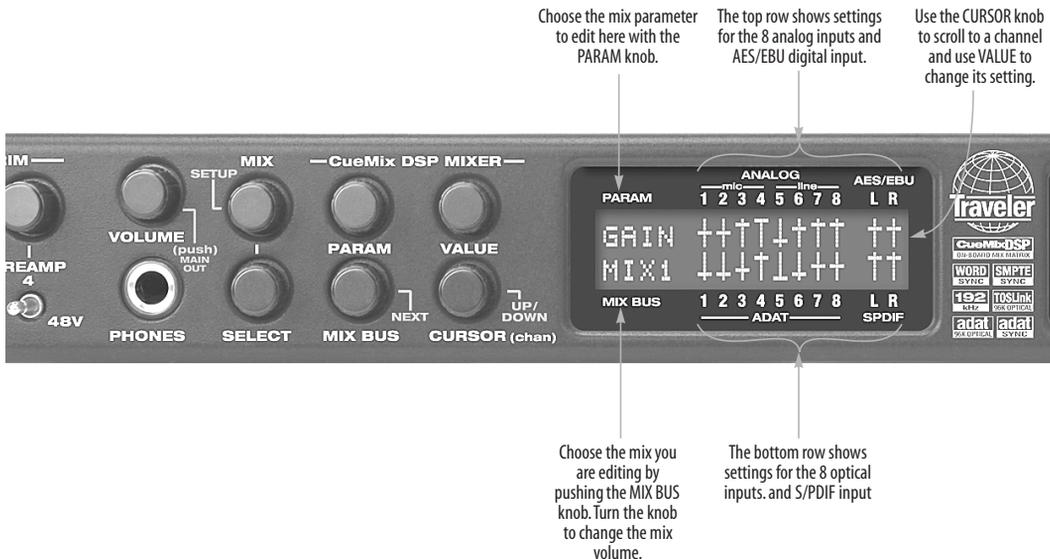


Figure 6-1: The Traveler front panel controls.

Setup mode

In setup mode, the LCD displays basic settings, such as clock source, optical I/O format (ADAT versus TOSLink), and so on. These settings are covered in detail later in “SETUP / SELECT” on page 46.



Figure 6-2: In setup mode, the LCD displays a setup parameter in the top row of the LCD and the current setting in the bottom row.

Mixer mode

In mixer mode, the LCD displays the settings for the current Traveler mix being shown in the display, as demonstrated in Figure 6-1 on page 45.

Parameter “zooming”

For many settings, the LCD temporarily “zooms in” to display a long-throw meter and alpha-numeric display to give you precise, real-time feedback as you adjust the setting. For example, if you change the headphone volume, the LCD will display a level meter and gain reduction reading that updates as you turn the volume knob. After a brief time-out, the display returns to its previous state before you turned the volume knob. The time-out period can be adjusted, as explained later in the section called “Fader View Time”.

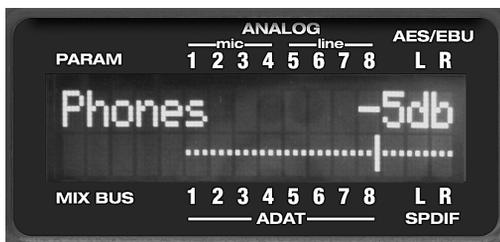


Figure 6-3: For many settings, the LCD “zooms in” on the setting as you adjust it.

VOLUME

The VOLUME knob lets you control the volume of both the headphone jack and the rear-panel main outs. Press the knob to toggle between the headphones and the main outs. As explained in the previous section, the LCD provides detailed feedback as you turn the knob. To view the current setting without changing it, just push the knob (without turning it).

SETUP / SELECT

Press the MIX/SETUP knob to toggle between mixer mode and setup mode. In mixer mode, the SETUP and SELECT knob do nothing. In setup mode, turn SETUP to choose a setting and SELECT to change it. In some cases, SELECT chooses one of the Traveler’s four mixes, and the VALUE knob changes the setting. The setup settings are briefly explained below.

Clock source

This sets the global clock source for the Traveler and is the same as the *Clock Source* setting in the MOTU FireWire Audio Console as explained in “Clock Source” on page 40. If the Traveler is currently connected to a computer, this setting cannot be changed from the front-panel LCD. It must be changed in the MOTU FireWire Audio Console instead. Or, you can disconnect the Traveler from the computer to change the Clock Source from the front panel.

Word Clock Out

If you are running a Traveler interface at a high sample rate (88.2, 96, 176.4 or 192kHz), the *Word Clock Out* setting lets you choose a word clock output rate that either matches the global sample rate (e.g. 176.4 or 192kHz) or reduces the word clock output to the corresponding 1x rate (either 44.1 or 48kHz). To match the Traveler’s sample rate, choose *Follows System*. To reduce the word clock rate to the corresponding 1x rate, choose *Force 44/48*.

Fader View Time

The *Fader View Time* option lets you control the length of time that an adjusted parameter remains displayed in the LCD before the LCD returns to its previous state. For example, when you turn the MIX BUS knob to adjust the volume of the current mix, you'll see a long-throw horizontal fader in the LCD, along with a numeric display of the current gain reduction. After you stop turning the knob, this fader remains displayed in the LCD for a moment before the LCD returns to its previous state. The Fader View Time option lets you control how long the adjusted parameter remains on the LCD after the knob stops turning.

Optical In / Optical Out

These two settings determine the format for the Traveler's optical input and output. They are the same as the optical setting in the MOTU FireWire Audio Console as explained in "Optical input/output" on page 43. To change the setting, turn the SELECT knob, and then push it to confirm your choice.

Bus output

The *Bus Output* setting lets you choose the Traveler output pair for each of the four CueMix DSP mix busses. Turn the SELECT knob to choose a bus. Turn the VALUE knob to choose an output. Push the VALUE knob to select the output. The output stops flashing to confirm that it has been selected.

Bus mute

The *Bus Mute* setting mutes and unmutes the bus output. Turn the SELECT knob to choose a bus. Push the SELECT knob to mute or unmute the bus.

Phones Assign

The *Phones Assign* setting lets you choose what you hear on the headphone output. This is the same as the *Phones* setting in the MOTU FireWire Audio Console as explained in "Phones" on page 44.

Init Current Mix

The *Init Current Mix* setting lets you reset the current mix (or all four mixes). All inputs get reset to unity gain (0 dB), pan center, etc.

Copy Bus Mix

Copy Bus Mix lets you copy all of the settings for the currently displayed mix. Turn the SELECT knob to choose a mix. Push the SELECT knob to copy it. You can then paste the settings to another mix as explained below. The word *Done* appears briefly to confirm that the mix settings have been successfully copied.

Paste Bus Mix

After you copy mix settings (explained above), *Paste Bus Mix* lets you paste the copied mix settings to another mix. Turn the SELECT knob to choose a mix. Push SELECT to paste. The word *Done* appears briefly to confirm the paste. The following mix parameter are included in the paste operation: Gain, Pan, Solo, Mute, +4/-10, +6dB boost, and stereo pairing. The following mix parameters are not pasted: Bus output, Bus mute and Bus gain.

Save/Name Preset

The *Save/Name Preset* setting lets you name and save up to sixteen separate Traveler presets. A preset holds all of the current CueMix DSP mix settings for all four mix busses. Setup parameters are not included. The name can have up to 12 characters. Here is a summary of how to name and save a preset:

To do this:	Do this:
To change the currently flashing character	Turn the VALUE knob
To jump to capital letters, lower case letters, numbers or symbols	Push the VALUE knob repeatedly
To scroll to a different character	Turn the CURSOR knob.
To save the preset	Push SELECT. If you are asked to replace existing preset, push SELECT again to replace it, or turn it to select a different preset.

Load preset

After you've saved one or more presets, *Load Preset* lets you recall them. Turn the SELECT knob to choose a preset. Push SELECT to load it. The word *Loaded* appears briefly to confirm the operation.

All Notes Off

The *All Notes Off* setting sends a MIDI *All Notes Off* message, as well as a MIDI note-off message for every note on every MIDI channel. This stops any stuck notes that are currently playing. Push SELECT to initiate the All Notes Off operation. The MIDI OUT LED will glow to confirm that the note-off data is being sent.

Factory Defaults

The *Factory Defaults* setting restores the Traveler factory settings. Before you can attempt this operation, you must first quit all Windows audio applications and all MOTU consoles (the MOTU FireWire Audio Console, CueMix Console, SMPTE console, etc.) Once you have done so, push SELECT to initiate the operation, and then when the LCD asks "Are you sure?", push VALUE to execute it. If any of the above-mentioned applications are still running, the LCD will alert you with the message saying that the Traveler is in use by the CPU. Quit all audio software applications and consoles and then try again.

MIX BUS

The Traveler on-board CueMix DSP mixer provides four stereo mix busses, named MIX1, MIX2, MIX3 and MIX4, respectively. Each mix bus (also referred to as a "mix") independently mixes all inputs (or any subset of your choosing) down to one Traveler output pair of your choosing. For example, you could assign MIX1 to the main outs, MIX2 to analog outputs 1-2 and MIX3 to the headphone outs. You can then independently assign any input to any mix. An input can even be included in two or more mixes simultaneously at different input levels.

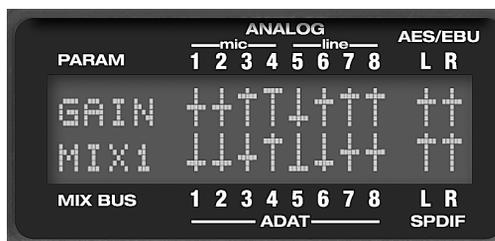


Figure 6-4: In mixer mode, the LCD displays the mix settings for the mix bus currently being displayed in the LCD.

When the LCD display is in mixer mode, push the MIX BUS knob repeatedly to cycle through the four mixes. The current mix is indicated in the LCD above the MIX BUS label (as shown in Figure 6-1 on page 45). Turn the MIX BUS knob to change the output level for the mix.

PARAM

When the LCD display is in mixer mode, the PARAM knob cycles through the mix parameters listed below. Use the CURSOR knob to scroll to a particular channel (until it flashes) and use the VALUE knob to change its setting:

Mix parameter	Range	Comments
Gain	OFF, -84 to 0 dB	Each channel displays a small fader. Push the VALUE knob to toggle between OFF and unity gain (0dB).
Pan	-64 to +64 Zero = pan center	Push the VALUE knob to jump to pan center. Stereo pairs (explained below) are panned hard left/right by default.
Solo	“s” or blank	Push the VALUE knob to toggle between soloed (S) and not soloed (blank), or turn the knob to toggle.
Mute	“m” or blank	Push the VALUE knob to toggle between muted (m) and unmuted (blank), or turn the knob to toggle.
4/10	down (+4) or up (-10)	This setting applies universally across ALL mix busses for analog inputs 5-8. Push the VALUE knob to toggle between a +4dB reference level (down) and a -10dB reference level (up). Or turn the knob to toggle.
+6db	“+” or 0	This setting applies universally across ALL mix busses for analog inputs 5-8. Push the VALUE knob to toggle between a +6dB software boost (+) and no boost (0). Or turn the knob to toggle.
Pair	“[]” or blank	This setting applies universally across ALL mixes. Push the VALUE knob to toggle a stereo input pair between separate mono inputs (blank) or a stereo pair (“[]”). Or turn the knob to toggle. When a pair of inputs are linked, all of their mix settings become linked (gain, solo, etc.) except for pan. When the pair is first created, pan is set to hard left and hard right, but the channels can then be further modified independently. When a pair is unlinked, the channels are set to pan-center.

Mix parameters that apply across all mixes

The last three mix settings (input reference level, +6dB software boost, and stereo pairing) apply across all mixes because they have to do with the nature of the input itself. For example, if you have an input that requires a -10dB reference level, then you’ll want the reference level to apply to all mixes.

Working with stereo pairs

When you group a pair of inputs as a stereo pair, all of their mix settings become linked, and whenever you scroll to either channel, both channels will flash to indicate that they will operate as a linked stereo pair. Note that when a pair is first created, pan is set to hard left and hard right, but the channels can then be further modified independently. When a pair is unlinked, the channels are set to pan-center.

CURSOR / VALUE

When the LCD display is in mixer mode, the CURSOR knob scrolls left and right over the 20 inputs displayed in the LCD. The current input flashes. As a shortcut, you can push the CURSOR knob to toggle between the top row (analog inputs) and bottom row (digital inputs). The VALUE knob changes the current mix parameter for the currently flashing input. In some cases, such as Gain and Pan, the LCD will “zoom” to the enlarged horizontal fader while you adjust it with the VALUE knob. After you stop adjusting, the LCD will return to the mixer display.

STAND-ALONE OPERATION

All settings, including all mix settings and global settings, are saved in the Traveler’s memory, and they remain in effect even when the Traveler is not connected to a computer. This allows you to use the Traveler as a stand-alone 8-bus mixer. You can make adjustments to any setting at any time from the front panel.

CHAPTER 7 Cubase, Nuendo and Other ASIO Software

OVERVIEW

The Traveler includes an ASIO driver that provides multi-channel I/O and sample-accurate synchronization with Steinberg’s Cubase family of digital audio sequencers, including Cubase SX and Nuendo.

What is ASIO?	51
Preparation	51
Run the MOTU FireWire Audio Console	51
Choosing the MOTU FireWire ASIO driver.....	53
ASIO Direct monitoring	53
Other System dialog settings	53
Viewing and managing Traveler inputs	53
Viewing and managing Traveler outputs	54
Changing Traveler settings	54
Processing live inputs with plug-ins	54
Synchronization	55
MIDI Machine Control (MMC)	57
MIDI I/O via the Traveler MIDI ports	57
24-bit operation	57
Monitoring system performance	57

WHAT IS ASIO?

ASIO is an acronym for *Audio Streaming Input and Output*. The ASIO MOTU FireWire Audio driver allows the Traveler to provide multi-channel audio input and output for any audio application that supports ASIO drivers.

Sample-accurate sync

The MOTU FireWire Audio ASIO driver supports sample-accurate sync (via the Traveler’s ADAT sync feature) for applications that support it.

Attention: Other software users

The Traveler ASIO driver also provides multi-channel I/O with any ASIO-compatible audio software. Cubase is used for the examples in this chapter. However, the basic procedures are the

same and can be easily applied to any ASIO-compatible software. Just follow the general descriptions at the beginning of each main section in this chapter. Consult your software documentation for details about each topic, if necessary.

If your audio software doesn’t support ASIO

If your host audio software does not support ASIO, but instead supports WDM (or legacy Wave) audio drivers, refer to the next chapter.

PREPARATION

To make sure that everything is ready for Cubase, install Cubase first (if you haven’t already done so), and then see these chapters before proceeding:

- chapter 4, “Installing the Traveler Hardware” (page 19).
- chapter 3, “IMPORTANT! Run the Traveler Software Installer First” (page 17)

RUN THE MOTU FIREWIRE AUDIO CONSOLE

Before you run Cubase, launch the MOTU FireWire Audio Console to configure your Traveler hardware. The MOTU FireWire Audio Console lets you configure your audio interface, and it lets you enable the desired inputs and outputs. Only enabled inputs and outputs will be available to Cubase, so this is an important step. For complete details regarding the MOTU FireWire Audio Console, see chapter 5, “MOTU FireWire Audio Console” (page 39).

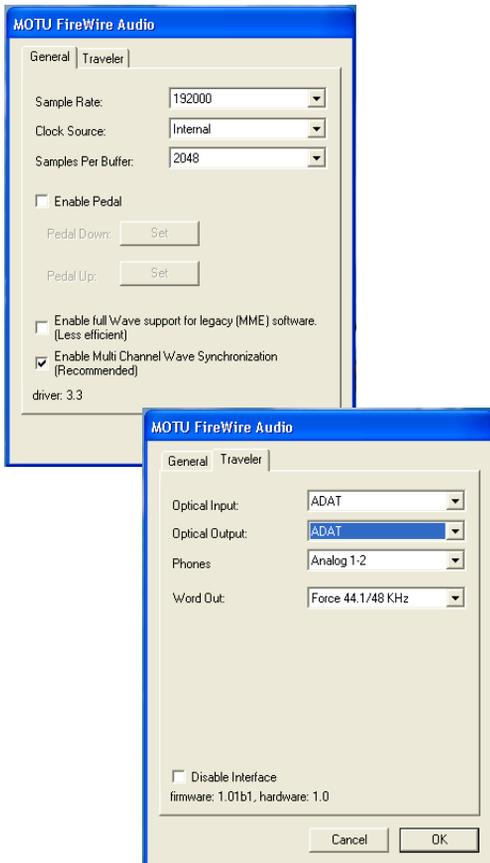


Figure 7-1: The MOTU FireWire Audio Console gives you access to all of the settings in the Traveler hardware, including the clock source, sample rate and optical I/O enable/disable.

For complete details about the Traveler settings, see chapter 5, “MOTU FireWire Audio Console” (page 39). The following sections provide a brief explanation of each Traveler setting for use with Cubase.

Sample rate

Choose the desired overall sample rate for the Traveler system and Cubase. Newly recorded audio in Cubase will have this sample rate.

Before running the Traveler at the 4x sample rates, see “Operation at 4x sample rates (176.4 or 192kHz)” on page 40.

Clock Source

This setting is very important because it determines which audio clock the Traveler will follow.

If you do not have any digital audio connections to your Traveler (you are using the analog inputs and outputs only), and you will not be slaving Cubase to external SMPTE time code, choose *Internal*.

If you are slaving the Traveler to the ADAT sync Input connector, choose *ADAT 9-pin*.

If you are slaving the Traveler and Cubase to SMPTE time code via the Traveler itself, choose *SMPTE* and follow the directions in “Syncing to SMPTE time code” on page 32.

☞ If you are using an ASIO host application other than Cubase or Nuendo, it must support the ASIO 2.0 sample-accurate positioning protocol in order to support the Traveler’s direct SMPTE sync (and sample-accurate sync) feature.

If you have digital audio devices connected to the Traveler, or if you are not sure about the clock source of your setup, be sure to read “Making sync connections” on page 27 and “Clock Source” on page 40.

Samples Per Buffer

The *Samples Per Buffer* setting can be used to reduce the delay — or *monitoring latency* — that you hear when live audio is patched through your Traveler hardware and Cubase. For example, you might have MIDI instruments, samplers, microphones, and so on connected to the analog inputs of the Traveler. If so, you will often be mixing their live input with audio material recorded in Cubase. See chapter 9, “Reducing Monitoring Latency” (page 65) for complete details.

Optical input and output

To make a Traveler optical input or output available in Cubase, choose the appropriate format (*ADAT optical* or *TOSLink*) from the optical input and/or output menu. If you won't be using the optical connectors, turn them off.

Phones

This Traveler setting lets you choose what you'll hear from the headphone jack. For example, if you choose *Analog 1-2*, the headphones will duplicate the main outs. Or you can choose any other output pair. If you choose *Phones*, this setting makes the headphone jack serve as its own independent output pair. As a result, you'll see *Phones 1-2* as an additional audio destination in Cubase's audio output menus.

CHOOSING THE MOTU FIREWIRE ASIO DRIVER

Once you've made the preparations described so far in this chapter, you're ready to run your audio software and enable the MOTU FireWire ASIO driver. Check the audio system or audio hardware configuration window in your software. There will be a menu there that lets you choose among various ASIO drivers that may be in your system. Choose the MOTU FireWire ASIO driver from this menu.

Nuendo and Cubase SX

To activate the Traveler driver in Nuendo or Cubase SX, go to the Device Setup window, click *VST Audiobay* and choose *MOTU FireWire Audio* from the *Master ASIO Driver* menu as shown below. Make the other settings in the dialog as need for your system and synchronization scenario.

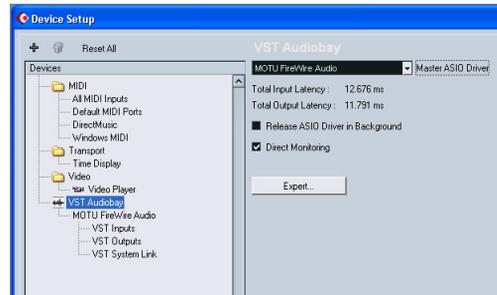


Figure 7-2: Activating the Traveler FireWire ASIO driver in Nuendo and Cubase.

ASIO DIRECT MONITORING

The *Direct Monitoring* option (Figure 7-2) allows you to monitor inputs directly in the Traveler hardware with no drain on your computer and near zero latency. When you enable this option, Cubase uses the Traveler's CueMix DSP monitoring features whenever you use Cubase's monitoring features. For further information, see "Controlling CueMix DSP from within Cubase or Nuendo" on page 69.

OTHER SYSTEM DIALOG SETTINGS

Consult your Cubase or Nuendo documentation for details about the rest of the settings in this dialog.

VIEWING AND MANAGING TRAVELER INPUTS

Once you've chosen the MOTU FireWire Audio driver in the Audio System dialog as explained earlier, click *VST Inputs* beneath the *MOTU FireWire Audio* item (Figure 7-3). The list on the right displays inputs supplied by the Traveler, as well as any other connected MOTU FireWire audio interfaces. If the list does not match what you expect to see, click the *Reset* button. If you don't see the Traveler's optical inputs and/or outputs in the list, check the MOTU FireWire Audio Console to make sure they are turned on and set to the format you require. If you don't plan to use the optical input or output, turn it off to conserve computer bandwidth.

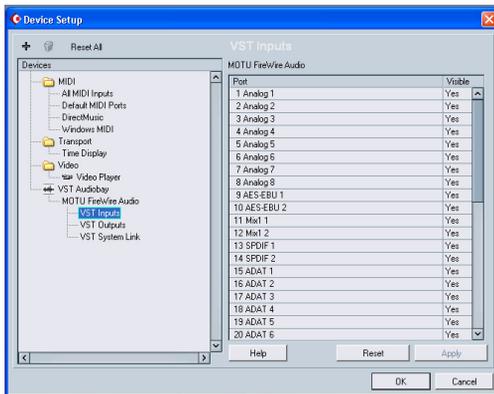


Figure 7-3: Creating Traveler inputs in Nuendo or Cubase SX.

The “Mix1 1-2” input

In Cubase’s VST Inputs list, you’ll see a Traveler input called *Mix1 1-2*. This input source delivers the output of CueMix DSP “MIX1” (the first mix bus of the four on-board no-latency monitor mixes in the Traveler) back to your computer. This input serves, for example, as a convenient way for you to record the Traveler’s MIX1 monitor mix back into Cubase (for reference and archiving purposes). Further, if you are sending audio from Cubase to the same output pair as MIX1, you can choose to either include or exclude the audio from the computer in the stream being sent back to Cubase. For details on how to do this, see “Mix1 Return Includes Computer” on page 76.

The Mix1 1-2 input is not available at the 4x sample rates (176.4 or 192kHz).

Warning: the Mix1 1-2 input can cause feedback loops! DO NOT assign this input to a track that shares the same Traveler output pair as MIX1.

VIEWING AND MANAGING TRAVELER OUTPUTS

To view and manage Traveler outputs, click *VST Outputs* beneath the *MOTU FireWire Audio* item (Figure 7-4).

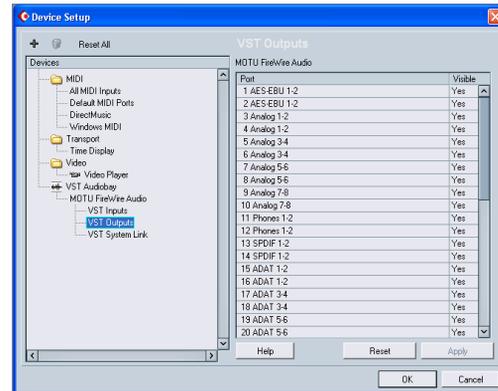


Figure 7-4: Working with Traveler outputs in Nuendo or Cubase.

The “Phones 1-2” output

If you’ve chosen to treat the Traveler headphones as an independent output, you’ll see *Phones 1-2* as a Traveler output destination. Audio tracks assigned to this output pair will be heard on the headphone jack only. For further explanation, see “Phones” on page 53.

CHANGING TRAVELER SETTINGS

To change the Traveler settings at any time, go to the Device Setup window in Nuendo or Cubase SX and click the ASIO Control Panel button, as shown in Figure 7-2 on page 53. Be sure to click the Reset button (as shown in Figure 7-3 and Figure 7-4) after making any changes to the optical or phone settings in the MOTU FireWire Audio Console.

PROCESSING LIVE INPUTS WITH PLUG-INS

If you patch a live input (such as MIDI synthesizer) through a VST plug-in effect in Cubase, you might hear a slight delay. There are several ways to reduce this delay. For details, see chapter 9, “Reducing Monitoring Latency” (page 65).

SYNCHRONIZATION

Cubase or Nuendo can run under its own transport control or slave to SMPTE time code. It can also perform sample-accurate digital audio transfers with Alesis digital recorders and Tascam family digital recorders.

As you read through the following sections to decide what form of synchronization you might need with other devices in your studio, be sure to consult chapter 4, “Installing the Traveler Hardware” (page 19) for the proper hardware connections. Use the synchronization diagrams in that chapter to be clear about how you will be synchronizing Cubase to the other components of your system.

Running Cubase or Nuendo under its own transport control

If you do not need to synchronize Cubase or Nuendo with time code or another recording device, such as a tape deck, just leave its SMPTE time code synchronization features disabled.

However, even though Cubase or Nuendo is not slaving to SMPTE time code, you still need to be concerned with the synchronization of the Traveler’s digital audio clock with other devices connected to it digitally (if any). For example, if you have a digital mixer connected to a Traveler interface via an ADAT optical lightpipe cable, you need to make sure that their audio clocks are phase-locked. For details, see “Syncing optical devices” on page 34 and “Making sync connections” on page 27. If you don’t have any digital audio devices connected, digital audio phase-lock does not apply to you.

Resolving Cubase or Nuendo and the Traveler to SMPTE time code

If you need to slave Cubase or Nuendo and the Traveler to SMPTE time code, you can do so with or without a dedicated synchronizer.

Resolving directly to time code (with no synchronizer)

To resolve your Traveler directly to SMPTE time code with no additional synchronization devices, use the setup shown in “Syncing to SMPTE time code” on page 32. Make sure the *Clock Source* setting in the MOTU FireWire Audio Console window is set to *SMPTE*. Also, make sure that you’ve connected an LTC input signal to a Traveler analog input, and that you’ve specified that input in the SMPTE Console.

Resolving to video and/or time code with a dedicated synchronizer

To resolve your Traveler to video and/or SMPTE time code using an additional synchronization device, use the setup shown in “Syncing to video and/or SMPTE time code using a synchronizer” on page 33.

Follow the instructions in your Cubase or Nuendo manual for slaving them to MIDI Time Code (MTC). To ensure that your audio tracks don’t drift out of sync with your MIDI tracks — or time code, use a hardware synchronizer like the MIDI Timepiece AV or Digital Timepiece to resolve the Traveler hardware as well, as explained in “Syncing to video and/or SMPTE time code using a synchronizer” on page 33. A digital audio synchronizer is required for drift-free SMPTE/MIDI time code sync. Make sure the *Clock Source* setting in the MOTU FireWire Audio Console window has the appropriate setting for locking the Traveler to the synchronizer. For example, in Figure 4-20 on page 36, word clock is being used to resolve a Traveler interface, so the Clock Source setting is *Word Clock In*.

☛ If you have an ADAT sync or a Tascam sync compatible device, don’t use SMPTE time code. Instead, use sample-accurate sync as described in the next section.

Sample-accurate sync to ADAT or Tascam

Cubase and Nuendo, along with the Traveler and its ASIO 2 driver, provide you with sample-accurate transfers with ADATs, Alesis recorders and any other devices that support standard ADAT sample address (*ADAT Sync*).

Similarly, with the help of a MOTU Digital Timepiece universal A/V synchronizer, Cubase (or Nuendo) and a Traveler can perform sample-accurate transfers with Tascam digital recorders.

A sample-accurate transfer is one in which the original location of the audio is preserved in the transfer, down to the sample.

For details on how to connect your hardware for sample-accurate sync, see “Sample-accurate sync” on page 29. Then, set up Cubase as follows:

- 1 Choose *ADAT 9-pin* as the *Audio Clock Source* setting. In Nuendo or Cubase SX, this setting is in the Device Setup window (Options menu).
- 2 Go to Cubase or Nuendo’s *Synchronization Setup* window, as shown below:

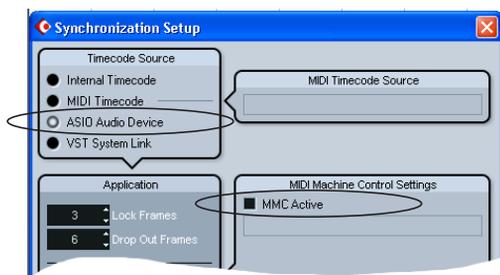


Figure 7-5: Setting up sample-accurate sync via ASIO 2.

- 3 If you are *not* using an MMC-compatible synchronizer (such as a MOTU MIDI Timepiece AV, Digital Timepiece or Alesis BRC), leave the *MMC Active* box unchecked. In this scenario, transport control is handled by the ADAT (or other sample-accurate sync source).

- 4 If you *are* using an MMC-compatible synchronizer (such as a MOTU MIDI Timepiece AV, Digital Timepiece or Alesis BRC), enable Nuendo’s (or Cubase SX’s) *MMC Active* option. In addition, choose the appropriate MIDI port for the MMC synchronizer from the menu. Doing so makes Cubase or Nuendo send the MMC control messages to the MTP AV (or other MMC device). In this scenario, transport control is handled by Cubase or Nuendo itself.

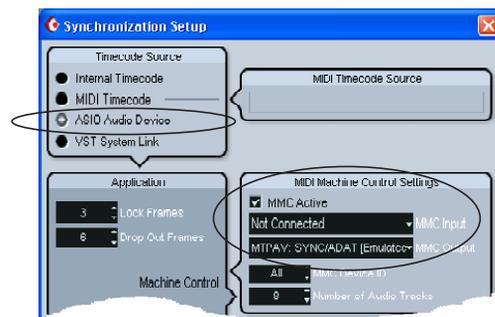


Figure 7-6: Setting up sample-accurate sync via ASIO 2.

- 5 In Nuendo or Cubase SX, enable the *Sync* button in the Transport menu.



Figure 7-7: Enabling the SYNC button.

- 6 If you don’t have an MMC synchronizer (Figure 7-5), initiate playback from the sample-accurate sync source (ADAT, DA-88, etc.) Transport control is handled by the sample-accurate sync source.
- 7 If you do have an MMC synchronizer, begin playback from Cubase, and the other device(s) will follow.

MIDI MACHINE CONTROL (MMC)

If you have ADATs (or other ADAT Sync-compatible recorders) and a MMC-compatible ADAT synchronizer like the MIDI Timepiece AV and Digital Timepiece, you can control everything from your computer screen with Cubase's transport controls and cueing features (like the playback wiper, etc.)

Similarly, if you have Tascam digital recorders and a MOTU Digital Timepiece (or other MMC-compatible Tascam synchronizer), you can control all of your Tascam tape decks (in ABS time) in a similar fashion from Cubase.

See "Sample-accurate sync to ADAT or Tascam" on page 56 for details on how to set this up.

MIDI I/O VIA THE TRAVELER MIDI PORTS

Once you've run the Traveler's software installer as explained in "Installing the Traveler software" on page 17, the Traveler MIDI ports will appear as a input source and output destination in the MIDI input and output menus of your WDM-compatible host software.

24-BIT OPERATION

Your Traveler hardware fully supports Cubase and Nuendo's 24-bit recording capabilities. Simply enable 24-bit operation as instructed in your Cubase or Nuendo manual. The Traveler always supplies a 24-bit data stream, and when you enable 24-bit operation in Cubase or Nuendo, it simply uses all 24-bits supplied by the Traveler hardware.

MONITORING SYSTEM PERFORMANCE

Because it has so many inputs and outputs, the Traveler may push the limits of your computer's processing power. Keep the VST Performance window open to keep tabs on the load on your CPU and disk buffers. If the meters get too high, you can reduce the load by reducing the number of inputs and outputs you are working with. Use the MOTU FireWire Audio Console to uncheck input check boxes and set output source menus to *None*.



Figure 7-8: Keep the Audio Performance window open to keep tabs on your computer's processing power and hard disk performance.

CHAPTER 8 **Sonar and other WDM Software**

OVERVIEW

The Traveler WDM driver provides standard multi-channel input and output for WDM-compatible audio software running under Windows Me, 2000 and XP.

WDM and Wave driver compatibility.....	59
Installing the MOTU FireWire Audio WDM driver	59
Enabling Wave (MME) compatibility	59
Making settings in the MOTU FireWire Audio Console ..	60
Enabling the MOTU FireWire Audio WDM driver	61
Other Audio Options	62
Working with Traveler inputs and outputs	62
Changing Traveler settings	62
Reducing delay when monitoring live inputs	62
Synchronization	62
MIDI I/O via the Traveler MIDI ports	63
24-bit operation	63

WDM AND WAVE DRIVER COMPATIBILITY

WDM is an acronym for *Windows Driver Model*. The MOTU FireWire WDM driver allows the Traveler to provide multi-channel audio input and output for any audio application that supports WDM audio drivers.

Attention: Cakewalk users

Cakewalk SONAR is used for the WDM driver setup examples in this chapter.

Attention: other software users

Cakewalk's SONAR software is used for the WDM driver setup examples in this chapter. However, the basic procedures are the same and can be easily applied to any WDM-compatible software. Just follow the general descriptions at the beginning of each main section in this chapter. Consult your software documentation for details about each topic, if necessary.

INSTALLING THE MOTU FIREWIRE AUDIO WDM DRIVER

The MOTU FireWire Audio Installer CD installs the MOTU FireWire WDM driver into Windows for you. That's pretty much all the preparation you need. See chapter 3, "IMPORTANT! Run the Traveler Software Installer First" (page 17).

ENABLING WAVE (MME) COMPATIBILITY

If your host audio software does not yet support Windows WDM drivers, enable Wave driver compatibility in the MOTU FireWire WDM driver so that all of the Traveler's inputs and outputs show up in your software. For details, see "Wave support for legacy (MME) software" on page 44.

☛ If your host audio software *does* support WDM audio drivers, *don't* enable Wave driver compatibility.

MAKING SETTINGS IN THE MOTU FIREWIRE AUDIO CONSOLE

Before you run your audio software, launch the MOTU FireWire Audio Console to configure your Traveler hardware. The MOTU FireWire Audio Console lets you choose the audio clock source, and it lets you enable the optical input and output, if needed. For details, see chapter 5, “MOTU FireWire Audio Console” (page 39).

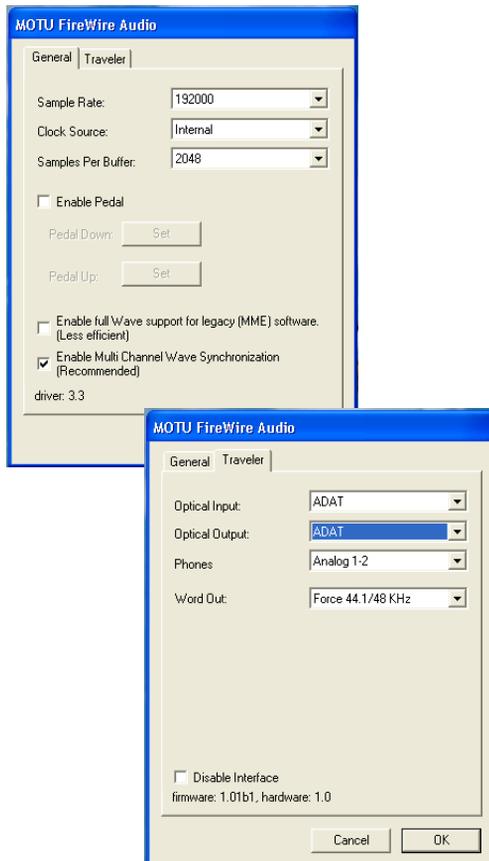


Figure 8-1: The MOTU FireWire Audio Console gives you access to all of the settings in the Traveler hardware, including the clock source, sample rate and optical I/O enable/disable.

For complete details about the Traveler settings, see chapter 5, “MOTU FireWire Audio Console” (page 39). The following sections provide a brief explanation of each Traveler setting for use with Sonar.

Sample rate

Choose the desired overall sample rate for the Traveler system and Sonar. Newly recorded audio in Sonar will have this sample rate.

Before running the Traveler at the 4x sample rates, see “Operation at 4x sample rates (176.4 or 192kHz)” on page 40.

Clock Source

This setting is very important because it determines which audio clock the Traveler will follow.

If you do not have any digital audio connections to your Traveler (you are using the analog inputs and outputs only), and you will not be slaving Sonar to external SMPTE time code, choose *Internal*.

If you are slaving the Traveler to the ADAT sync Input connector, choose *ADAT 9-pin*.

If you have digital audio devices connected to the Traveler, or if you are not sure about the clock source of your setup, be sure to read “Making sync connections” on page 27 and “Clock Source” on page 40.

Samples Per Buffer

The *Samples Per Buffer* setting can be used to reduce the delay — or *monitoring latency* — that you hear when live audio is patched through your Traveler hardware and Sonar. For example, you might have MIDI instruments, samplers, microphones, and so on connected to the analog inputs of the Traveler. If so, you will often be mixing their live input with audio material

recorded in Sonar. See chapter 9, “Reducing Monitoring Latency” (page 65) for complete details.

Optical input and output

To make a Traveler optical input or output available in Sonar, choose the appropriate format (*ADAT optical* or *TOSLink*) from the optical input and/or output menu. If you won't be using the optical connectors, turn them off.

Phones

This Traveler setting lets you choose what you'll hear from the headphone jack. For example, if you choose *Analog 1-2*, the headphones will duplicate the main outs. Or you can choose any other output pair. If you choose *Phones*, this setting makes the headphone jack serve as its own independent output pair. As a result, you'll see *Phones 1-2* as an additional audio destination in Sonar's audio output menus.

ENABLING THE MOTU FIREWIRE AUDIO WDM DRIVER

Once you've made the preparations described so far in this chapter, you're ready to run your audio software and enable the MOTU FireWire Audio WDM driver. Check the audio system or audio hardware configuration window in your software.

Enabling the MOTU FireWire Audio WDM driver in SONAR

To activate the MOTU FireWire Audio WDM driver in SONAR:

- 1 Choose *Audio* from the Options menu.
- 2 Click the *Drivers* tab.
- 3 Highlight the Traveler inputs and outputs that you wish to use and unhighlight the ones you don't as shown in Figure 8-2.

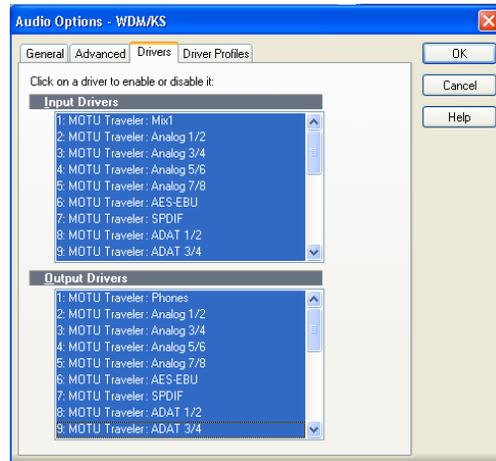


Figure 8-2: Activating the MOTU FireWire Audio WDM driver in SONAR by highlighting Traveler inputs and outputs.

Other audio settings in SONAR

There are a few other settings in SONAR that impact Traveler operation:

- 1 In the Audio Options window, click the *General* tab.
- 2 Choose a Traveler input and output for recording and playback timing as shown below in Figure 8-3. It doesn't matter which input or output you choose.

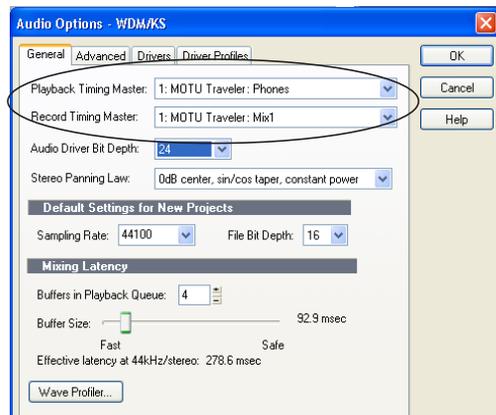


Figure 8-3: Make sure you have chosen a Traveler input and output for the playback and recording timing master settings.

3 In the General tab, click the Wave Profiler button and run the Wave Profiler.

This process chooses the optimum settings for the Traveler hardware.



Figure 8-4: Running the Wave Profiler in Cakewalk's SONAR.

OTHER AUDIO OPTIONS

Consult your sonar documentation for details about the rest of the settings in this dialog.

WORKING WITH TRAVELER INPUTS AND OUTPUTS

Once you've enabled the Traveler inputs and outputs in the Drivers tab of the Audio Options window (Figure 8-2 on page 61), Traveler audio inputs and outputs will appear in Sonar's input/output menus, and you can set them up and use them as any standard audio input and output. If you don't see the optical inputs and/or outputs, check the MOTU FireWire Audio Console to make sure they are turned on and set to the format you need. If you don't plan to use the optical input or output, turn it off to conserve computer bandwidth.

The "Mix1 1" input

In Sonar's Input Drivers list, you'll see a Traveler input called *Mix1 1-2*. This input source delivers the output of CueMix DSP "MIX1" (the first mix bus of the four on-board no-latency monitor mixes in the Traveler) back to your computer. This input serves, for example, as a convenient way for you to record the Traveler's MIX1 monitor mix back into Sonar (for reference and archiving purposes). Further, if you are sending audio from Sonar to the same output pair as MIX1, you can choose to either include or exclude the audio from the computer in

the stream being sent back to Sonar. For details on how to do this, see "Mix1 Return Includes Computer" on page 76.

The Mix1 1-2 input is not available at the 4x sample rates (176.4 or 192kHz).

 **Warning:** the Mix1 1-2 input can cause feedback loops! DO NOT assign this input to a track that shares the same Traveler output pair as MIX1.

The "Phones 1-2" output

If you've chosen to treat the Traveler headphones as an independent output, you'll see *Phones 1-2* as a Traveler output destination. Audio tracks assigned to this output pair will be heard on the headphone jack only. For further explanation, see "Phones" on page 44.

CHANGING TRAVELER SETTINGS

You can change the Traveler settings at any time by accessing the MOTU FireWire Audio Console.

REDUCING DELAY WHEN MONITORING LIVE INPUTS

If you have live audio inputs connected to the Traveler, such as MIDI synthesizers, samplers, microphones or other live instruments, you might hear a slight delay when their audio is being monitored through your Traveler hardware and your host audio program. There are several ways to reduce — and eliminate — this audible monitoring delay. For details, see chapter 9, "Reducing Monitoring Latency" (page 65).

SYNCHRONIZATION

If your audio software has the ability to slave to SMPTE time code, then it can take advantage of the synchronization features in the Traveler.

As you read through the following sections to decide what form of synchronization you might need with other devices in your studio, be sure to consult "Making sync connections" on page 27 for

the proper hardware connections. Use the synchronization diagrams to be clear about how you will be synchronizing your audio software and the Traveler to the other components of your system.

Synchronizing digital audio connections

If you have devices connected to the Traveler digital inputs (optical or RCA S/PDIF), you need to be concerned with the synchronization of the Traveler's digital audio clock with other devices connected to it digitally (if any). For example, if you have a digital mixer connected to the Traveler via an ADAT optical light pipe cable, you need to make sure that their audio clocks are phase-locked. For details, see “Syncing optical devices” on page 34 and “Making sync connections” on page 27. If you don't have any digital audio devices connected to the Traveler, digital audio phase-lock does not apply to you.

Slaving to SMPTE time code

If you need to slave your audio software and the Traveler system to SMPTE time code, follow the instructions in your software's manual for slaving it to MIDI Time Code (MTC). To ensure that your audio tracks don't drift out of sync with your MIDI

tracks or the time code, use a hardware synchronizer like the MOTU MIDI Timepiece AV or Digital Timepiece to slave the Traveler hardware to the SMPTE (or MIDI Time) Code as well. A digital audio synchronizer is required for drift-free SMPTE/MIDI time code sync. Make sure the *Clock Source* setting in the MOTU FireWire Audio Console is set to *Word Clock In*. For examples of how to set this up, see “Syncing to video and/or SMPTE time code using a synchronizer” on page 33.

MIDI I/O VIA THE TRAVELER MIDI PORTS

Once you've run the Traveler software installer as explained in “Installing the Traveler software” on page 17, the Traveler MIDI ports will appear as a MIDI input source and output destination in Sonar's MIDI I/O menus.

24-BIT OPERATION

Your Traveler hardware fully supports 24-bit recording in any audio software that supports it. Simply enable 24-bit operation as instructed by the software. The Traveler system always supplies the software with a 24-bit data stream, and when you enable 24-bit operation, it simply uses all 24-bits supplied by the Traveler hardware.

CHAPTER 9 Reducing Monitoring Latency

OVERVIEW

Monitoring latency is that slight delay you hear when you run an input signal through your host audio software. For example, you might hear it when you drive a live mic input signal through a reverb plug-in running in your audio sequencer.

This delay is caused by the amount of time it takes for audio to make the entire round trip through your computer, from when it first enters a Traveler input, passes through the Traveler hardware into the computer, through your host audio software, and then back out to a Traveler output.

If you don't need to process a live input with plug-ins, the easiest way to avoid monitoring latency is to use the Traveler's CueMix DSP feature to patch the input directly to your monitor outs via the Traveler audio hardware. This is just like bussing inputs to outputs in a digital mixer. For details, see "CueMix DSP hardware monitoring" on page 68.

If you *do* need to process a live input with plug-ins, or if you are playing virtual instruments live through your Traveler audio hardware, you can significantly reduce latency — and even make it completely inaudible, regardless of what host audio application software you use. This chapter explains how.

It is important to note that monitoring delay has no effect on when audio data is recorded to disk or played back from disk. Actual recording and playback is extremely precise.

Monitoring live input.....	66
Adjusting the audio I/O buffer	67
Lower latency versus higher CPU overhead	68
Transport responsiveness	68
Effects processing and automated mixing	68
CueMix DSP hardware monitoring	68
Two methods for controlling CueMix DSP	68
Using CueMix Console	69
Controlling CueMix DSP from your audio software ..	69

MONITORING LIVE INPUT

There are two ways to monitor live audio input with a Traveler: 1) through the computer or 2) via CueMix™ DSP hardware monitoring. Figure 9-1 on page 66 shows method 1, which allows you to add effects processing such as reverb and guitar amp effects via plug-ins in your audio software. See the next section, “Adjusting the audio I/O buffer” for details about how to reduce — and possibly eliminate — the audible monitoring delay that the computer introduces.

Figure 9-2 shows how to use CueMix™ DSP hardware-based monitoring, which lets you hear what you are recording with no monitoring delay and no computer-based effects processing. (You can add effects later, after you’ve recorded the live input as a disk track.) See “CueMix DSP hardware

monitoring” later in this chapter for details on how to use CueMix DSP with your audio software, or with the included CueMix Console software.

If the material you are recording is suitable, there is a third way to monitor live input: use both methods (Figure 9-1 and Figure 9-2) at the same time. For example, you could route vocals to both the computer (for a bit of reverb) and mix that processed signal on the main outs with dry vocals from CueMix DSP.

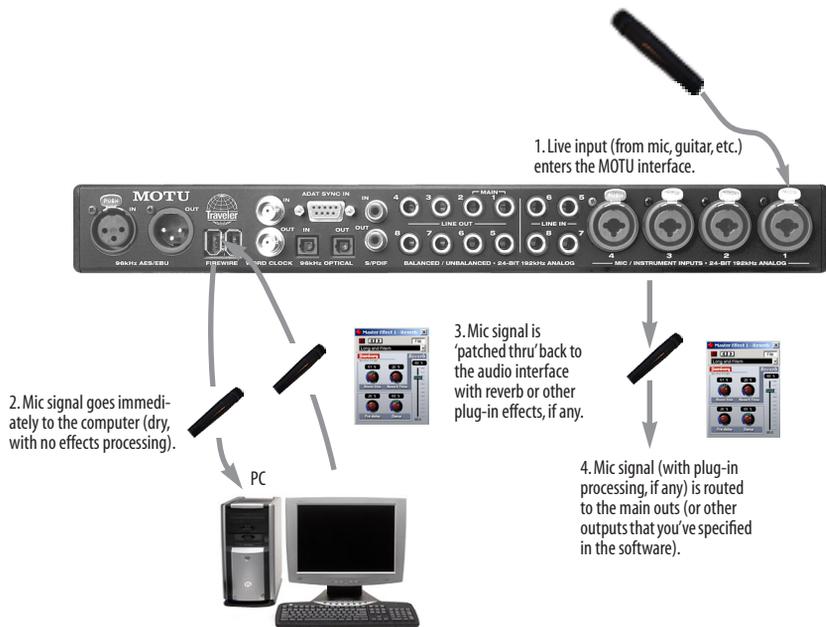


Figure 9-1: There are two ways to monitor live audio inputs with a Traveler: 1) through the computer or 2) via CueMix™ DSP hardware monitoring. This diagram shows method 1 (through the computer). When using this method, use your host software's buffer setting to reduce the slight delay you hear when monitoring the live input, but don't lower it too much, or your computer might get sluggish.

ADJUSTING THE AUDIO I/O BUFFER

A *buffer* is a small amount of computer memory used to hold data. For audio interfaces like the Traveler, buffers are used for the process of transferring audio data in and out of the computer. The size of the buffers determines how much delay you hear when monitoring live inputs through your audio software: larger buffers produce more delay; smaller buffers produce less.

Buffer size adjustment is made in the MOTU FireWire Audio Console, as shown in Figure 9-3 via the *Samples Per Buffer* setting.

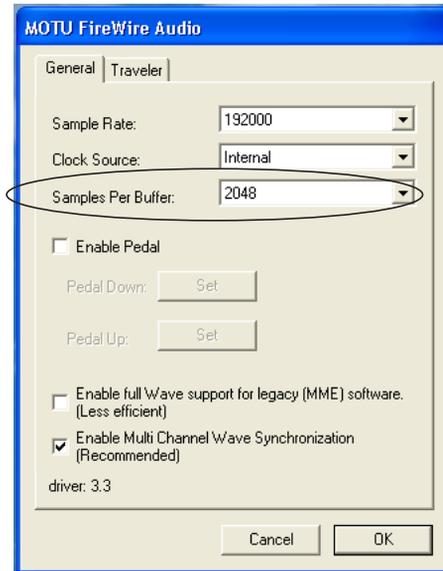


Figure 9-3: Lowering the 'Samples Per Buffer' setting in the MOTU FireWire Audio Console Window reduces patch thru latency. But doing so increases the processing load on your computer, so keep an eye on the Performance Monitor in your host audio software.

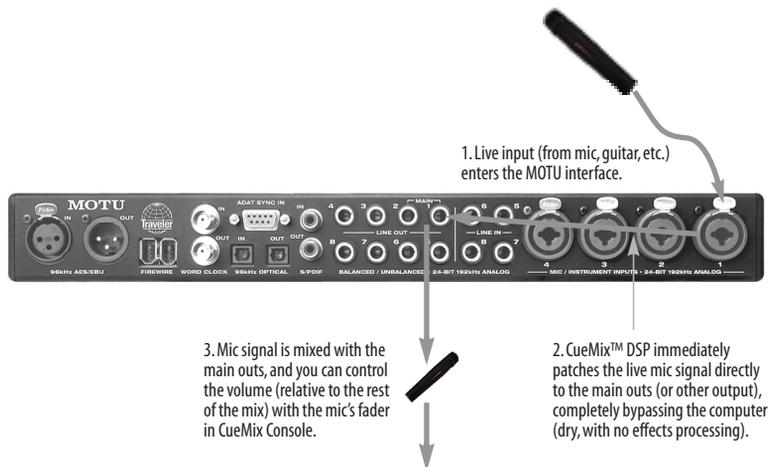


Figure 9-2: This diagram shows the signal flow when using CueMix™ DSP no-latency monitoring. Notice that this method does not allow you to process the live input with plug-ins in your audio software while it is being monitored. You can, however, add effects later — after recording the live input as a disk track. CueMix™ DSP lets you hear what you are recording with no delay and no computer-based effects.

Lower latency versus higher CPU overhead

The buffer setting has a large impact on the following things:

- Patch thru latency
- The load on your computer's CPU
- Possible distortion at the smallest settings
- How responsive the transport controls are in your audio software

The buffer setting presents you with a trade-off between the processing power of your computer and the delay of live audio as it is being patched through your software. If you reduce the size, you reduce patch thru latency, but significantly increase the overall processing load on your computer, leaving less CPU bandwidth for things like real-time effects processing. On the other hand, if you increase the buffer size, you reduce the load on your computer, freeing up bandwidth for effects, mixing and other real-time operations.

If you are at a point in your recording project where you are not currently working with live, patched-thru material (e.g. you're not recording vocals), or if you have a way of externally processing inputs, choose a higher buffer size. Depending on your computer's CPU speed, you might find that settings in the middle work best (256 to 1024).

Transport responsiveness

Buffer size also impacts how quickly your audio software will respond when you begin playback, although not by amounts that are very noticeable. Lowering the buffer size will make your software respond faster; raising the buffer size will make it a little bit slower, but barely enough to notice.

Effects processing and automated mixing

Reducing latency with the buffer size setting has another benefit: it lets you route live inputs through the real-time effects processing and mix automation of your audio software.

CUEMIX DSP HARDWARE MONITORING

The Traveler has a more direct method of patching audio through the system. This method is called *CueMix DSP*. When enabled, CueMix activates hardware patch-thru in the Traveler itself. CueMix DSP has two important benefits:

- First, it completely eliminates the patch thru delay (reducing it to a small number of samples — about the same amount as one of today's digital mixers).
- Secondly, CueMix DSP imposes no strain on the computer.

The trade-off, however, is that CueMix DSP bypasses your host audio software. Instead, live audio inputs are patched directly through to outputs in the Traveler itself and are mixed with disk tracks playing back from your audio software. This means that you cannot apply plug-ins, mix automation, or other real-time effects that your audio software provides. But for inputs that don't need these types of features, CueMix DSP is the way to go.

On the other hand, if you really need to use the mixing and processing provided by your audio software, you should not use CueMix DSP. Instead, reduce latency with the buffer setting (as explained earlier in this chapter).

TWO METHODS FOR CONTROLLING CUEMIX DSP

There are two ways to control CueMix DSP:

- With CueMix Console
- From within your host audio software (if it supports direct hardware monitoring)

You can even use both methods simultaneously.

Using CueMix Console

If your host audio software does not support direct hardware monitoring, you run CueMix Console side-by-side with your audio software and manage your monitor mix in CueMix Console.

CueMix Console allows you to create up to four separate Traveler monitor mixes, or any other desired routing configurations. These routings are independent of your host audio software. For complete details, see chapter 10, “CueMix Console” (page 71).

Controlling CueMix DSP from your audio software

Some ASIO-compatible audio applications, such as Cubase and Nuendo, allow you to control CueMix DSP monitoring from within the application (without the need to use CueMix Console). In most cases, this support consists of patching a Traveler input directly to an output when you record-arm a track. Exactly how this is handled depends on the application.

CueMix DSP routings that are made via host applications are made “under the hood”, which means that you won’t see them in CueMix Console. However, CueMix DSP connections made inside your host audio software dovetail with any other mixes you’ve set up in CueMix Console. For

example, if your host application routes audio to an output pair that is already being used in CueMix Console for an entirely separate mix bus, both audio streams will simply be merged to the output.

Follow the directions below in the section that applies to you.

Controlling CueMix DSP from within Cubase or Nuendo

To turn on CueMix in Cubase SX or Nuendo, enable the Direct Monitoring check box in the Device Setup window (Figure 7-2 on page 53).

Other ASIO 2.0-compatible host software

If your ASIO-compatible host audio software supports ASIO’s direct monitoring feature, consult your software documentation to learn how to enable this feature. Once enabled, it should work similarly as described for Cubase (as explained in the previous section).

Using CueMix DSP with WDM- or Wave-compatible software

Run CueMix Console (chapter 10, “CueMix Console” (page 71)) and use it to route live inputs directly to outputs, control their volume and panning, etc. If necessary, you can save your CueMix Console setup with your project file.

CHAPTER 10 CueMix Console

OVERVIEW

CueMix Console provides access to the flexible on-board mixing features of the Traveler. CueMix lets you route any combination of inputs to any stereo output pair. These mixes can be set up entirely independently of your host audio software. CueMix allows you to set up four completely independent mix configurations with the Traveler. You can also save and load mix configurations.

CueMix Console can be used independently of host audio software, or together with it. CueMix mixing dovetails with the direct monitoring (hardware patch thru) features of your host audio software, allowing you to seamlessly mix in both environments.

- Advantages of CueMix monitoring..... 72
- CueMix Console installation..... 72
- Cuemix Console basic operation 72
- Working with a mix 72
- Shortcuts..... 73
- Copying & pasting (duplicating) entire mixes 73
- Message center 73
- Preamp gain, pad, reference level and +6dB boost ... 74
- Saving and loading presets 74
- Saving and loading presets to/from disk 74
- Talkback and listenback..... 74
- Mix1 Return Includes Computer 76
- Phones menu 76
- Control Surfaces menu..... 76
- CueMix Console examples 78

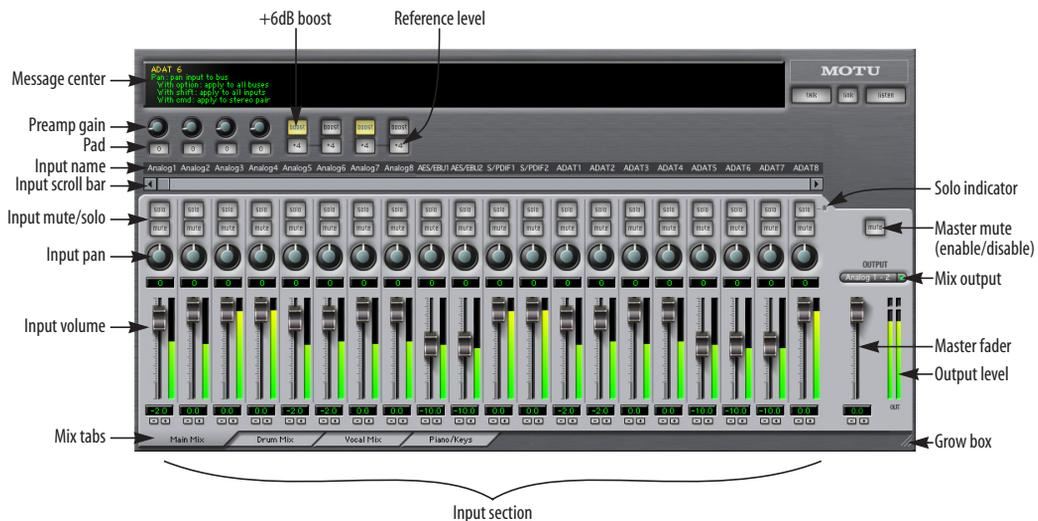


Figure 10-1: CueMix Console is a virtual mixer that gives you control over the Traveler's on-board mixing features.

ADVANTAGES OF CUEMIX MONITORING

CueMix Console provides several major advantages over monitoring live inputs through your host audio software:

- CueMix has no buffer latency. Thanks to the Traveler's DSP chip, CueMix provides the same throughput performance as a digital mixer.
- CueMix imposes absolutely no processor drain on the computer's CPU.
- CueMix routing can be maintained independently of individual software applications or projects.
- CueMix routing can operate without the computer, allowing the Traveler to operate as a portable, stand-alone mixer.

CueMix Console does not provide effects processing. For information about using your audio software's native plug-ins together with CueMix, see chapter 9, "Reducing Monitoring Latency" (page 65).

CUEMIX CONSOLE INSTALLATION

CueMix Console is installed with the rest of your Traveler software.

CUEMIX CONSOLE BASIC OPERATION

The CueMix console is simple to operate, once you understand these basic concepts.

Four mixes

CueMix provides four separate mixes: Mix1, Mix2, Mix3 and Mix4. Each mix can have any number of inputs mixed down to any Traveler output pair that you choose. For example, Mix1 could go to the headphones, Mix2 could go to the main outs, Mix3 could go to a piece of outboard gear connected to analog outputs 7-8, etc.

Many inputs to one output pair

It might be useful to think of each mix as some number of inputs all mixed down to a stereo output pair. CueMix Console lets you choose which inputs to include in the mix, and it lets you specify the level and pan for each input being fed into the mix.

Viewing one mix at a time

CueMix Console displays one mix at a time. To select which mix you are viewing, click its tab at the bottom of the window, as shown in Figure 10-1. The mix name appears in the tab. Double-click the name to change it.

Each mix is completely independent

Each mix has its own settings. Settings in one mix will not affect another. For example, if an input is used in one mix, it will still be available in other mixes. In addition, inputs can have a different volume, pan, mute and solo setting in each mix.

Some channel settings apply across all mixes

The settings at the top of the CueMix Console window (above the channel section) apply to all mixes. These settings include the preamp gain and pad for the four mic inputs, and the +4/-10dB reference level and +6dB software boost for analog inputs 5-8.

Widening the CueMix Console window

To view more input faders at once, drag the right-hand edge of the window to the right.

WORKING WITH A MIX

Each mix has the following components:

- A stereo output with master fader
- Name
- Master mute (to enable/disable the entire mix)
- Any number of mono or stereo inputs
- Pan, volume, mute and solo for each input

These elements are visually grouped together in the lightly shaded area in the lower half of the CueMix Console window.

Viewing a mix

To view a mix, click its tab at the bottom of the window, as shown in Figure 10-1. The mix name appears in the tab.

Naming a mix

Double-click the mix name in the tab.

Master mute

The master mute button (Figure 10-1) temporarily disables (silences) the mix.

Master fader

The master fader (Figure 10-1) controls the overall level of the mix (its volume on its stereo output). Use the individual input faders to the left to control individual input levels.

Output level meters

The OUT level meters show you the output for the mix's physical output, which may include audio from your host audio software. The clip indicators clear themselves after a few seconds.

Input section

The channel strips to the left of the master fader represent each input in your Traveler. Use the input scroll bar to view additional inputs.

Input mute/solo

To add an input to a mix, or remove it, click its MUTE button. To solo it, use its SOLO button. To toggle these buttons for a stereo pair, hold down the control key while clicking either channel. The Solo indicator LED (Figure 10-1) lights up when any input is soloed (including inputs that may currently be scrolled off-screen).

Input volume and pan

Use the input fader and pan knob (Figure 10-1) to adjust these settings for the input in the mix. Again, all settings within the gray-shaded channel strip area belong to the mix currently being viewed. Note that an input can have different settings in different mixes.

To adjust the volume or panning for a stereo input pair, hold down the control key while dragging the fader or knob for either the left or right input.

SHORTCUTS

Hold down the following modifier keys as shortcuts:

Shortcut	Result
Shift key	Applies your action to all inputs in the mix.
Control key	Applies your action to the stereo input pair
space bar	Applies your action to all busses
Double-click	Returns the control to its default value (pan center, unity gain, etc.)

COPYING & PASTING (DUPLICATING) ENTIRE MIXES

To copy and paste the settings from one mix to another:

- 1 Select the source mix (Figure 10-1) and choose Copy from the file menu (or press control-C).
- 2 Choose the destination mix and choose Paste from the file menu (or press control-V).

MESSAGE CENTER

The Message Center displays fly-over help for items in the CueMix Console window. It also displays messages regarding the overall operation of the Traveler.

PREAMP GAIN, PAD, REFERENCE LEVEL AND +6DB BOOST

The preamp gain, pad, reference level and +6dB boost settings at the very top of the CueMix Console window (Figure 10-1) affect each input globally, across all mixes and for audio being routed to the computer. For example, if you add 6dB of boost, your host software will receive the boost for that input as well.

Preamp gain

This setting (Figure 10-1) adjusts preamp gain, just like the four trim knobs on the front panel of the Traveler.

Pad

These buttons (Figure 10-1) toggle the pad for each mic input. Clicking these buttons is the same as pushing the trim knobs on the front panel.

Boost

This setting (Figure 10-1) adds 6 dB of gain to the input signal. This setting is applied globally for the input.

+4/-10 reference level

Click the reference button to toggle between these two standard reference levels. This setting is applied globally for the input pair.

SAVING AND LOADING PRESETS

As explained earlier in “Save/Name Preset” on page 47, the Traveler can store up to 16 presets in its on-board memory. A preset includes of all CueMix DSP settings for all four mix busses, but it excludes global settings like clock source and sample rate.

The Load Preset and Save Preset commands in the CueMix Console File menu let you name, save and load presets in the Traveler.

SAVING AND LOADING PRESETS TO/FROM DISK

The *Save* and *Load* commands in the CueMix Console File menu allow you to save Traveler presets to and from your hard drive. This allows you to save an unlimited number of Traveler presets on disk. (Use the *Load Preset* and *Save Preset* commands to get presets from — and save them to — the Traveler itself.) Click the Save button to save the current configuration; click the Load button to open an existing configuration that you have previously saved on disk.

TALKBACK AND LISTENBACK

CueMix Console provides *Talkback* and *Listenback* buttons. Talkback allows an engineer in the control room to temporarily dim all audio and talk to musicians in the live room. Conversely, Listenback allows musicians to talk to the control room.

Hardware setup

Figure 10-2 below shows a typical hardware setup for Talkback and Listenback. For Talkback, set up a dedicated mic in your control room and connect it to a mic input on your MOTU FireWire audio interface. For Listenback, set up a dedicated listenback mic in the live room for the musicians and connect it to another mic input. For talkback output, set up a headphone distribution amp or set of speakers in the live room, and connect it to a pair of outputs. For example, you might connect a headphone distribution amp to analog outputs 7-8 on your MOTU Firewire audio interface, as demonstrated below in Figure 10-2 on page 75.

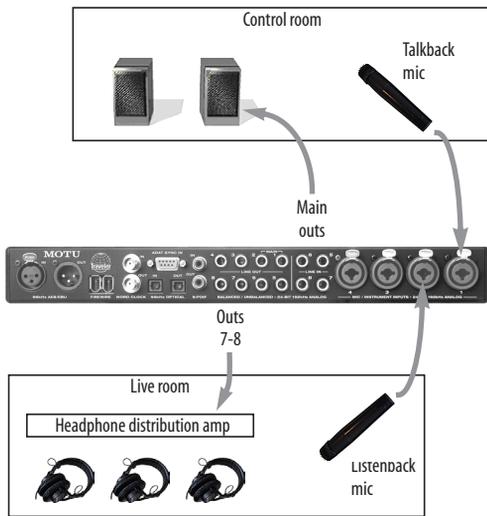


Figure 10-2: Typical hardware setup for Talkback and Listenback.

CueMix Console setup

To set up Talkback and/or Listenback in CueMix Console, choose *File menu > Talkback settings > Configure Talkback/Listenback* to open the window shown in Figure 10-3:

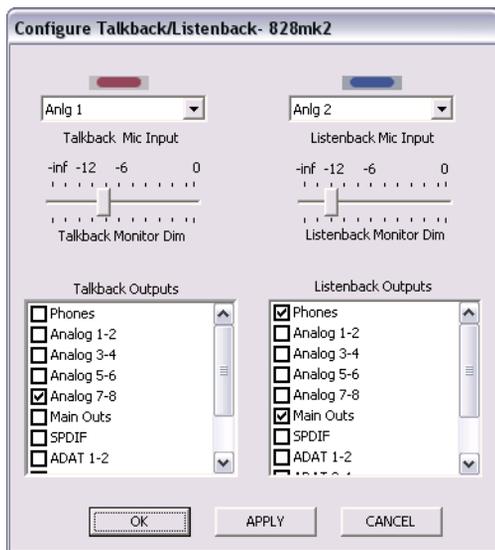


Figure 10-3: Configuring Talkback and Listenback.

Talkback / Listenback Mic Input

Choose the audio input to which your Talkback and/or Listenback mic is connected. These inputs are labeled with a purple and blue swatch, respectively, just above the channel fader.



These labels identify the Talkback and Listenback mic inputs.

Figure 10-4: The purple label identifies the Talkback mic input; the blue label indicates the Listenback mic. Use the input fader to control the mic volume.

Talkback / Listenback Monitor Dim

Choose the amount of attenuation you would like to apply to all other audio signals (besides the talkback volume) when Talkback and/or Listenback is engaged. To completely silence all other audio, move the slider all the way to the left (-Inf).

Talk / Listen signal routing

As shown in Figure 10-3, check the boxes next to the outputs on which you'd like to hear the Talkback mic and/or Listenback mic. For example, as demonstrated in the diagram in Figure 10-2, to hear the Talkback mic on the headphones in the live room, check the *Analog 7-8* check box in the *Talk* column as demonstrated in Figure 10-3. To hear the Listenback mic on the main monitors in the control room, check the *Analog 1-2* check box in the *Listen* column, also demonstrated in Figure 10-3.

Engaging/disengaging Talkback and Listenback

To engage Talk back or Listenback, press on the Talk or Listen buttons and then release to disengage. Talkback and/or Listenback is engaged for as long as you hold down the mouse button. Option-click to make the buttons “sticky” (stay engaged until you click them again — so you don’t have to hold down the mouse). If you would like to engage both Talkback and Listenback at the same time, enable the *Link* button.



Figure 10-5: The Talkback and Listenback buttons.

Controlling Talkback and Listenback volume

To control the volume of the Talkback and/or Listenback mics, adjust their input fader in CueMix Console. This fader controls the volume of the input, regardless of which bus mix is being displayed in the CueMix Console window. In other words, once an input has been designated as a Talkback or Listenback input, its fader becomes global for all CueMix buses.

MIX1 RETURN INCLUDES COMPUTER

The *Mix1 return includes computer* item in the CueMix Console File menu refers to the *Mix1* bus that the Traveler driver provides as an input to host audio software. This input source delivers the output of CueMix DSP “MIX1” (the first mix bus of the four on-board no-latency monitor mixes in the Traveler) back to your computer. This input serves, for example, as a convenient way for you to record

the Traveler’s MIX1 monitor mix back into your host audio software (for reference and archiving purposes).

When the *Mix1 return includes computer* menu item is checked, any audio being sent from your audio software on the computer to the same output as Mix1 will be included in the Mix1 return bus. When it is unchecked, computer output is excluded.

This menu item is essentially a pre/post switch for the computer audio insert to the stream of audio going to Mix1’s Traveler output pair (and also back to the computer).

PHONES MENU

The Phones menu allows you to choose what you will hear on the headphone output, just like the Phones setting the MOTU FireWire Audio Console. However, this menu provides one extra option that is exclusive to CueMix Console: *Follow Active Mix*. This menu item, when checked, causes the headphone output to mirror the output of the current mix being viewed in CueMix Console. For example, if you are currently viewing Mix3 (the Mix3 tab is active), the headphones will mirror the Mix3 output (whatever it is assigned to).

CONTROL SURFACES MENU

CueMix Console can be controlled from an automated control surface such as the Mackie Control™. Use the commands in the *Control Surfaces* menu to enable and configure this feature.

Application follows control surface

When checked, the *Application follows control surface* menu command makes the CueMix Console window scroll to the channel you are currently adjusting with the control surface, if the channel is not visible when you begin adjusting it. The same is true for the bus tabs: if you adjust a control in a bus that is not currently being

displayed, CueMix Console will jump to the appropriate tab to display the control you are adjusting.

Share surfaces with other applications

When the *Share surfaces with other applications* menu command is checked, CueMix Console releases the control surface when you switch to another application. This allows you to control your other software with the control surface. Here's a simple way to understand this mode: the control surface will always control the front-most application. Just bring the desired application to the front (make it the active application), and your control surface will control it. When you'd like to make changes to CueMix Console from the control surface, just bring CueMix Console to the front (make it the active application).

When this menu item is unchecked, your control surface will affect CueMix Console all the time, even when CueMix Console is not the front-most application. In addition, you will not be able to control other host audio software with the control surface at any time (because CueMix Console retains control over it at all times). This mode is useful when you do not need to use the control surface with any other software.

Mackie Control Surfaces

CueMix Console includes support for the following control surface products:

- Mackie Control™
- Mackie HUI™
- Mackie Baby HUI™

Use the sub-menu commands in the *Mackie Control Surfaces* menu item to turn on and configure control surface support, as described briefly below.

Enabled

Check this menu item to turn on control surface operation of CueMix Console. Uncheck it to turn off control surface support.

Configure...

Choose this menu item to configure your control surface product. Launch the on-line help for specific, detailed instructions for configuring CueMix Console for operation with your control surface product.



Figure 10-6: Refer to the extensive on-line help for details about configuring CueMix Console for operation with your control surface product.

CUEMIX CONSOLE EXAMPLES

Figure 10-7 below shows some examples of how you can use CueMix DSP:

- Powered speakers are connected to the Traveler main outs. Any input can be routed directly to the speakers.
- Microphone input can be routed via CueMix DSP to the effects processor for live outboard processing during recording. The resulting signal can be recorded into the computer either wet, dry or both (via the effects processor return or the direct mic input).
- The ADAT optical connection provides 8 channels of 24-bit digital I/O to the digital mixer (or 4 channels at 96kHz). Any device connected to the Traveler can be routed to/from the mixer with no latency. Conversely, any mixer channel can be routed to any device connected to the Traveler with no latency.

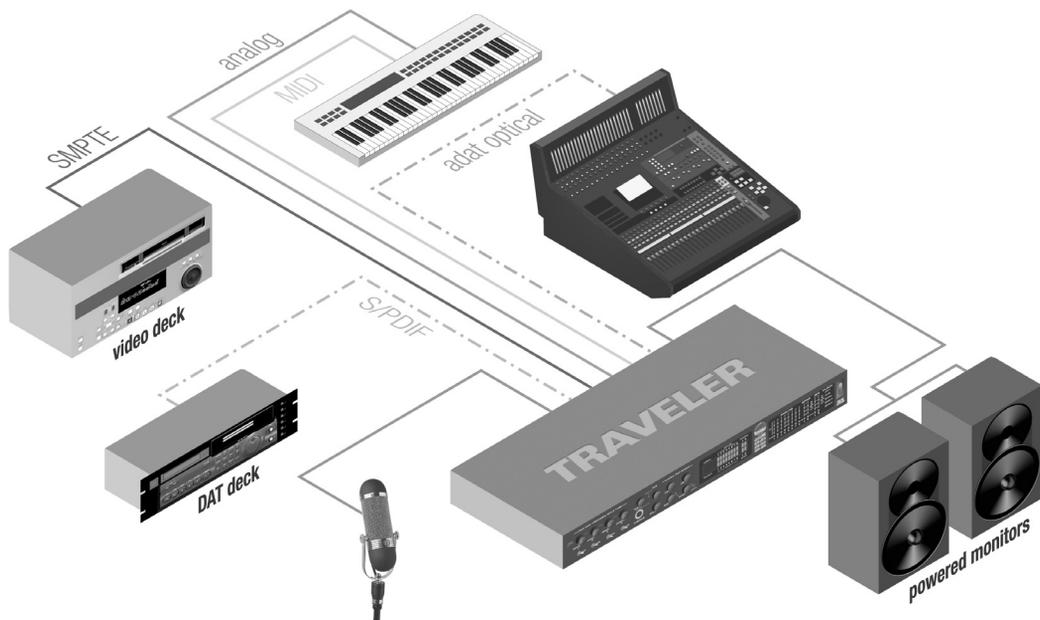


Figure 10-7: An example setup of a system that takes full advantage of CueMix DSP.

CHAPTER 11 FireWire SMPTE Console

OVERVIEW

The Traveler can resolve to SMPTE time code, without a dedicated synchronizer. It can also serve as a SMPTE time code generator.

The FireWire SMPTE Console software provides a complete set of tools to resolve to SMPTE, and to generate SMPTE for striping, regenerating or slaving other devices to the computer.

The Traveler provides a DSP-driven phase-lock engine with sophisticated filtering that provides fast lockup times and sub-frame accuracy.

Any analog input and output on the Traveler can be used for time code (LTC) input and output, respectively.

Clock/Address	79
Frame Rate	80
Reader section	80
Generator section	81

CLOCK/ADDRESS

The Clock/Address menu provides the same global Clock Source setting as in the MOTU FireWire Audio Console (“Clock Source” on page 40), but it includes additional information: each setting shows both the clock and the address (time code or sample location), separated by a forward slash (/). For example, the word clock setting (*Word Clock In / Internal*) shows the clock source (*Word Clock In*) followed by the address (*Internal*). Notice that only the SMPTE setting supports SMPTE time code as the reference for address. The digital clock sources do not support the Traveler’s on-board SMPTE time code sync.

Resolving to SMPTE time code

To resolve the Traveler to SMPTE time code, choose the *SMPTE / SMPTE* setting in the Clock/Address menu. This means that the system will use SMPTE as the clock (time base) and SMPTE as the

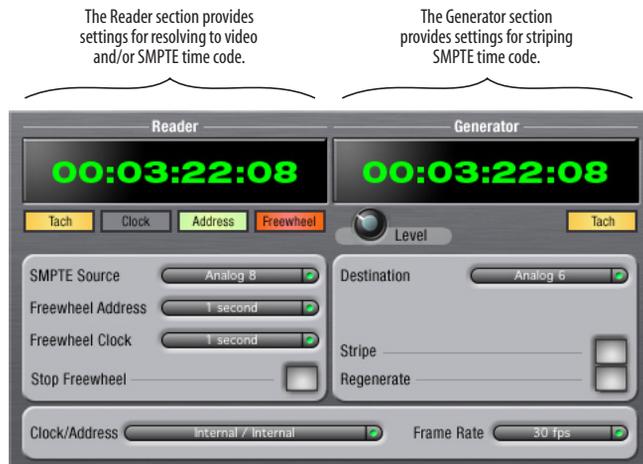


Figure 11-1: SMPTE Console gives you access to your Traveler’s on-board SMPTE time code synchronization features.

address. For further details on the hardware connections involved, see “Syncing to SMPTE time code” on page 32.

Resolving to video

To resolve the Traveler to video, you need a synchronizer such as a MIDI Timepiece AV or a Digital Timepiece to feed word clock to the Traveler. In this scenario, choose the *Word Clock In* clock source setting in The MOTU FireWire Audio Console. The Traveler uses word clock for the time base and your host application resolves to MIDI Time Code generated from the synchronizer. For details, see “Syncing to video and/or SMPTE time code using a synchronizer” on page 33.

FRAME RATE

This setting should be made to match the SMPTE time code frame rate of the time code that the system will be receiving. The Traveler can auto-detect and switch to the incoming frame rate, except that it cannot distinguish between 30 fps and 29.97 fps time code. So if you are working with either of these rates, make sure you choose the correct rate from this menu.

READER SECTION

The Reader section (on the left-hand side of the window in Figure 11-1) provides settings for synchronizing the Traveler to SMPTE time code.

Status lights

The four status lights (Tach, Clock, Address and Freewheel) give you feedback as follows.

Tach

The Tach light blinks once per second when the Traveler has successfully achieved lockup to SMPTE time code and SMPTE frame locations are being read.

Clock

The Clock light glows continuously when the Traveler has successfully achieved lockup to an external time base, such as SMPTE time code or word clock.

Address

The Address light glows continuously when the Traveler has successfully achieved lockup to SMPTE time code.

Freewheel

The Freewheel light illuminates when the Traveler is freewheeling address (time code), clock or both. For details about Freewheeling, see “Freewheel Address” and “Freewheel clock” below.

SMPTE source

Choose the analog input to which the SMPTE time code source is connected. This is the input that the Traveler “listens” to for time code.

Freewheel Address

Freewheeling occurs when there is a glitch or drop-out in the incoming time code for some reason. The Traveler can freewheel past the drop-out and then resume lockup again as soon as it receives readable time code. Choose the amount of time you would like the Traveler to freewheel before it gives up and stops altogether.

The Traveler cannot freewheel address without clock. Therefore, the *Freewheel Address* setting will always be lower than or equal to the *Freewheel Clock* setting, and both menus will update as needed, depending on what you choose.

Keep in mind that freewheeling causes the system to keep going for as long as the duration you choose from this menu, even when you stop time code intentionally. Therefore, if you are starting and stopping time code frequently (such as from the transports of a video deck), shorter freewheel times are better. On the other hand, if you are

doing a one-pass transfer from tape that has bad time code, longer freewheel times will help you get past the problems in the time code.

The 'Infinite' freewheel setting

The *Infinite* freewheel setting in the *Freewheel Address* menu causes the Traveler to freewheel indefinitely, until it receives readable time code again. To make it stop, click the *Stop Freewheeling* button.

Freewheel clock

Freewheeling occurs when there is glitch or drop-out in the incoming SMPTE time code for some reason. The Traveler can freewheel past the drop-out and then resume lockup again as soon as it receives a stable, readable clock signal.

The Traveler cannot freewheel address without clock. Therefore, the *Freewheel Address* setting will always be lower than or equal to the *Freewheel Clock* setting, and both menus will update as needed, depending on what you choose.

The 'Infinite' freewheel setting

The *Infinite* freewheel setting in the *Freewheel Clock* menu causes the Traveler to freewheel indefinitely, until it receives readable time code again. To make it stop, click the *Stop Freewheeling* button.

Stop Freewheeling

The Stop Freewheeling button stops the system if it is currently freewheeling.

GENERATOR SECTION

The Generator section (on the right-hand side of the window in Figure 11-1) provides setting for generating SMPTE time code.

Level

Turn the level knob to adjust the volume of the SMPTE time code being generated by the Traveler. The level knob disappears when the Destination is set to *None*.

Tach light

The Tach light blinks once per second when the Traveler is generating SMPTE time code.

Destination

In the *Destination* menu, choose the analog output from which SMPTE time code will be generated. This is the output that sends time code.

Stripe

Click this button to start or stop time code. To set the start time, click directly on the SMPTE time code display in the Generator section and type in the desired start time. Or drag vertically on the numbers.

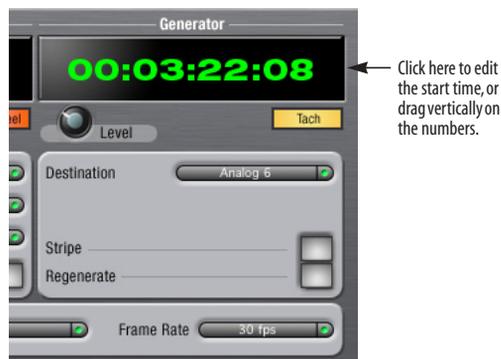


Figure 11-2: Setting the time code start time.

Regenerate

This option, when enabled, causes the generator to generate time code whenever the Traveler is receiving either SMPTE time code or ADAT Sync (via its ADAT Sync In port).

CHAPTER 12 Performance Tips & Troubleshooting

Things seems like they are working fine, but the Traveler then just drops off line, and the computer can't see it anymore on the FireWire bus.

This is a common symptom when the problem is that the Traveler is not getting enough power. Check the power source for the Traveler. Make sure that the power connection meets the requirements outlined in “Power options” on page 22.

Why does the start sound not play through the Traveler?

The Traveler will only playback audio at a sampling rate of 44.1, 48, 88.2, 96, 176.4 or 192kHz.

The computer freezes when it starts up

If the computer is unable to boot up, it may be a conflict with the WDM Driver. As soon as the computer boots up, Windows will try and initialize the WDM Driver. If this fails, your computer will hang. To determine if the WDM Driver is the problem, boot up in Safe Mode or remove the MOTU Audio software with the Add/Remove Programs Control Panel then restart. Reinstall the Traveler software and choose only to install the MOTU FireWire ASIO driver, not the WDM Driver. Restart again.

'New hardware detected' window

If you connect your Traveler before running the Traveler Software Installer CD, Windows will prompt you that new hardware has been detected. Cancel this, and run the Traveler Software Installer, rather than allowing Windows to locate the drivers.

Audio in SONAR speeds up or slows down

This could be caused by having incorrect SMPTE/MTC Sync settings when you record audio into Sonar. These settings are located in the *Advanced* Tab in the Audio Options window, accessed from Sonar's Options menu. Make sure that you have the

SMPTE/MTC Sync set to “Trigger and Freewheel” before recording audio while slaved to external time code.

Traveler inputs and outputs are not available in SONAR

Make sure that the inputs and/or outputs that you want to use are enabled in SONAR.

Sound Forge and 'Smooth Scroll'

If the Smooth Scroll option under the Options menu is turned on, you may experience clicks and pops or other anomalies in the audio playback. This gets worse as you zoom in more to the waveform while playing. For the best quality playback, turn this option off.

No input from an ADAT

If you are having trouble recording on your ADAT from the Traveler, check the Digital input setting. After power cycling, tape decks often come up configured to record from their analog inputs. You won't be able to record from the Traveler to a tape deck until it is switched to digital input.

Clicks and pops under word clock sync

Many problems result from incorrect word clocking. It is essential that all digital devices in the system be word locked. Consult chapter 4, “Installing the Traveler Hardware” (page 19) for detailed information on how to word clock your gear. Whenever there is any weird noise or distortion, suspect incorrect word lock.

Clicks and pops under ADAT Sync

Sometimes, the ADAT sync cable seems to be plugged into the Traveler, and partially works - but it isn't really all the way in. This can cause clicks when slaved to ADAT 9-pin. Make sure the cable is seated firmly.

Clicks and pops due to hard drive problems

If you have checked your clock settings sync cable connections and you are still getting clicks and pops in your audio, you may have a drive related problem. Set the Traveler Clock Source to Internal and try recording just using the analog inputs and outputs of the Traveler. If you encounter the same artifacts you may want try using another drive in your computer. Clicks and pops can also occur when the drive is severely fragmented, the disk drivers are outdated, or if you are using a SCSI accelerator that is not optimally configured for working with audio.

Connecting or powering gear during operation

It is not recommended that you connect/disconnect, or power on/off devices connected to the Traveler while recording or playing back audio. Doing so may cause a brief glitch in the audio.

Monitoring - how do I monitor inputs?

Please refer to the documentation for the audio application that you are using. If your application does not support input monitoring, you will need to use the Traveler's hardware-based CueMix DSP monitoring feature. Please see chapter 9, "Reducing Monitoring Latency" (page 65).

No optical inputs or outputs are available in host audio application

Check to make sure you have the desired optical inputs and/or outputs enabled in the MOTU FireWire Audio Console.

CUSTOMER SUPPORT

We are happy to provide customer support to our registered users. If you haven't already done so, please complete the registration card included with your Traveler. When we receive your card, you'll be placed on our mailing list for software updates and information about new products.

REPLACING DISKS

If your Traveler installer CD becomes damaged and fails to provide you with fresh, working copies of the program, our Customer Support Department will be glad to replace it. You can request a replacement disc by calling our business office at (617) 576-2760 and asking for customer service.

TECHNICAL SUPPORT

If you are unable, with your dealer's help, to solve problems you encounter with the Traveler system, you may contact our technical support department in one of the following ways:

- Tech support hotline: (617) 576-3066 (Monday through Friday, 9 am to 6 pm EST)
- Tech support 24-hour fax line: (617) 354-3068
- Tech support email: techsupport@motu.com
- Web site: www.motu.com

Please provide the following information to help us solve your problem as quickly as possible:

- The serial number of the Traveler system. This is printed on a sticker placed on the bottom of the Traveler rack unit. You must be able to supply this number to receive technical support.
- Software version numbers for the audio software you are using, the MOTU FireWire Audio WDM Driver, MOTU FireWire ASIO driver, etc.
- A brief explanation of the problem, including the exact sequence of actions which cause it, and the contents of any error messages which appear on the screen.

- +4/-10dB reference level 74
- +6db 49
- +6dB Boost 74
- 02R mixer 34
 - connecting 26
- 1394 connector 6, 11, 20
- 192kHz
 - multiple interfaces 38
 - operation 40
 - AES/EBU disabled 10
 - optical disabled 10
 - S/PDIF disabled 11, 21
- 24-bit
 - 3rd party software 63
 - optical 6, 10
 - recording 12
- 4/10 49
- 4-pin FireWire 22
- 6-pin FireWire 22
- 828
 - connecting to Traveler 38
- 896HD
 - connecting to Traveler 38

A

- Activity LEDs 5, 12
- ADAT optical 6, 10, 34
 - activity LEDs 5
 - choosing format 7, 43
 - clock source setting 42
 - connecting 21
 - syncing with 41
- ADAT sync 11, 32, 33
 - 9-pin 11, 41
 - connector 6
 - sample-accurate 29, 30, 31
 - sync setting 41
- AES/EBU 10
 - clock source setting 41
 - disabled at 192kHz 10
 - meters 5
 - sync 35
- All Notes Off 48
- Analog activity lights 5, 12
- Analog inputs/outputs 6
 - making connections to 21
 - overview 10
- Application follows control surface 76
- ASIO 12, 17, 18, 51
- Audio
 - bit resolution 40

B

- Balanced analog 21
- Battery power 12, 23
 - jack 6
- Boost 74
- Buffer Size 43
- Bus Mute 47
- Bus Output 47
- Bus power 12, 22
 - enable/disable switch 6, 24
 - examples 23

- requirements 22

C

- Clock
 - 192kHz operation 40
- Clock LEDs 5, 12
- Clock source 7, 27, 40, 46
 - SMPTE 43
- Coax 10
- Condenser mic input 5
- Configure interface 37
- Connecting multiple Travelers 37
- Control surface support 76
- Controller
 - connecting 21
- Converters 6
- Copy bus mix 47
- Cubase 12
 - clock source 52
 - enabling the Traveler ASIO driver 61
 - Optical input/output 53
 - sample rate 52
 - sync settings 30, 31
 - synchronization 55
- CueMix Console 68, 71
 - Application follows control surface 76
 - Listenback explained 74
 - listenback settings 75
 - Mackie control surfaces 77
 - Share surfaces with other applications 77
 - talkback settings 74, 75
- CueMix DSP 68
 - Mixer 45
 - output jacks 21
 - overview 11
- Customer service contact info 84
- Customer support 84

D

- Daisy-chaining 38
- DAT
 - connecting 25
- DC power supply 24
- Digital mixer
 - connecting 26
- Digital Precision Trim 11
- Digital Timepiece 30
- Disable interface option 38
- Disable option 38
- Disk
 - getting a replacement 84

E

- Enable
 - full Wave support for legacy (MME) software 7
 - Multi Channel Wave Synchronization 7
- Enable Pedal 7
- Expansion 37

F

- Factory Defaults 48
- Fader View Time 47
- Feedback loops 54, 62
- FireWire 11
 - 6-pin vs. 4-pin 22
 - additional busses 38
 - Audio Console 39
 - connecting 20
 - connector 6
 - PC card adapters 23
 - PCI cards 23
 - SMPTE Console 79
- Follow Active Mix 76
- Follows system 46
- Force 44.1/48kHz 7, 44, 46
- Forget button 38
- Freewheel
 - address 80
 - clock 81
 - infinite 81
- Front panel 45
 - LCD display 12
 - meters 5

G

- Gain 49
- General tab 39
- GSIF driver 12, 17, 18
- Guitar
 - connecting 25

H

- Headphone jack 5, 11
- Headphones
 - connecting 25
 - controlling output 7, 44

I

- Infinite freewheel 81
- Init Current Mix 47
- Inputs
 - analog 6
 - optical 6
 - S/PDIF (RCA) 6
- Installation
 - hardware 19
 - software 17
- Internal (sync setting) 41

K

- Keyboard controller
 - connecting 21

L

- Laptop operation 23
- Latency 43, 52, 60, 65, 67, 68
 - w/3rd party software 62
- LCD display 12, 45
- LEDs 5
- Lightpipe 34
- Listenback
 - explained 74

Load Preset 48, 74

LOCK LED 5

M

Mackie control surfaces 77

Main outs

jacks 6

making connections to 21

volume 5, 11, 46

Main volume 5, 11

Meters 5

Mic/instrument inputs 6, 20

connecting 25

overview 10

phantom power 5

MIDI

activity LEDs 5

jacks 6

Machine Control 28, 29

Time Code sync 28

Windows driver installation 18

MIDI Timepiece AV 30

MIX BUS knob 48

Mix1 1-2

Cubase 54, 62

Mix1 return includes computer 76

MMC 28, 29

Monitoring 66

thru main outs 21

w/3rd party software 62

MOTU

Audio System

bit resolution 40

Digital Timepiece 30

FireWire Audio Console 39

MIDI Timepiece AV 30

MOTU FireWire Audio

ASIO driver 18

MTC sync 28

Mute 49

N

Neutrik jacks 6

Nuendo 12

synchronization 55

O

Optical

choosing format (ADAT or

TOSlink) 7, 43

connectors 6, 21

disabled at 192kHz 10

In/Out 47

LEDs 5, 12

overview 10

sync 34

Optimization 68

Outputs

analog 6

optical 6

S/PDIF (TOSLink) 6

P

Packing list 15

Pair 49

Pan 49

PARAM knob 49

Paste Bus Mix 47

Patch thru

latency 43, 68

PCI

FireWire adapters 38

PCMCIA adapters 38

Performance 68

Phantom power 5, 11, 20

Phase-lock 27

Phones 5, 7, 11, 44

Cubase 53

SONAR 61

Phones 1-2

Cubase 54, 62

Phones Assign 47

Phones menu 76

Polarity 24

Power supply 24

jack 6

R

Reference level 74

Regenerate 81

Registration 15

S

S/PDIF 10

clock source setting 41

disabled at 192kHz 11, 21

lights 5, 12

meters 5

optical 6, 10

RCA 6

sync 35

Sample rate 7, 40

192kHz operation 40

Sample-accurate sync 11, 29, 30, 31, 56

Samplers

connecting 25

Samples Per Buffer 43, 67

Samples per buffer 7, 43, 52, 60

Save Preset 74

Save/Name Preset 47

SELECT knob 46

SETUP knob 46

Share surfaces with other applications 77

SMPTE

Console 79

LOCK LED 5

overview 11

source setting 80

sync 27, 28, 79

synchronization setting 43

TACH LED 5

Software installation 17

Solo 49

SONAR 12

clock source 60

Optical input/output 61

sample rate 60

Sound module

connecting 22

Stand-alone operation 45

Stop Freewheeling 81

Stripe button 81

Studio setup (example) 25

Synchronization 27

3rd party software 62

Cubase 55

multiple interfaces 38

Nuendo 55

sample-accurate 29, 30, 31

word clock 36

Synths

connecting 25

System requirements

minimum 15

recommended computer 13, 15

T

TACH

LED 5

light (SMPTE Console) 80

Talkback

explained 74

settings 75

Tascam

Sync 32, 33

Tech support contact info 84

Technical support 84

Time code sync 79

Tip positive/negative 24

TOSLink 6, 7, 10, 43

clock source setting 42

connecting 21

Traveler

connecting multiple interfaces 38

expansion 37

installing 19

rear panel overview 9

SMPTE setting 43

software installation 17

summary of features 9

tab 39

Word Clock In setting 41

Troubleshooting

feedback loop 54, 62

TRS connectors 21

U

Unbalanced analog 21

V

Video sync 27, 79

Volume

headphone 11

VOLUME knob 46

W

Wave driver 18, 59

Word clock 6, 11, 27, 35, 36

Follows System 46

Force 44.1/48kHz 7, 44, 46

sync setting 41

Word Clock In setting 41
Word out 7, 44, 46
Follows System 46
Force 44.1/48kHz 7, 44, 46

Y

Yamaha 02R 34
connecting 26